



INE-W92xR-Tru Installation Manual

**Trucking Software for
INE-W920R / INE-W925R / INE-W928R**

August 2012, Version 1.0



Installation instructions for INE-W920R / INE-W925R / INE-W928R*:

1) Insert the Micro SD card into the card slot below the detachable face plate.
*INE-W928R: Insert the Micro SD card adapter including the Micro SD card into the SD card slot located below the display.

2) Power the unit on. Contents will be copied.
Caution: The Micro SD card MUST remain in the unit!

3) Make sure to insert the Micro SD card BEFORE you access <https://alpine.naviextras.com> for map and content updates!

After the Micro SD card is inserted and contents copied trucking specific map and content updates will be available at <https://alpine.naviextras.com>.

How to adjust truck specific settings in the Navigation Software of INE-W920R / INE-W925R / INE-W928R:

1) Press hard key "Navigation" and touch the "Settings" symbol from the Navigation Main Menu.

2) Touch "Route Settings", and then touch "Vehicle".

3) Scroll down and select "Default Lorry".

4) Touch the "Settings" symbol in the "Default Lorry" selection bar to access the settings menus for the trucking feature allowing you to customize and adjust values applicable to your vehicle.