



## Quick Reference Guide

Kurzreferenz	Beknopte handleiding
Guide de référence rapide	Snabbreferensguide
Guida rapida	Lynguide
Guía de referencia rápida	Краткий справочник


## ■ How to Mount My Blackbird




### WARNING

Improper installation may make the navigation system fall from the cradle while driving. Ensure all locks and knobs are tight. Do not install the navigation system while driving.


Note: The cradle consists of 2 separate parts that must be assembled before mounting.

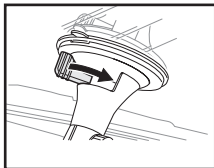

① Find a spot suitable for the navigation system. Ensure that both the suction cup and windshield area are clean. Stick the suction cup against the windshield. Turn the knob to lock it in position.

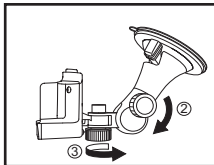

② Turn the knob counterclockwise to adjust up/down position. Turn clockwise to set the position.

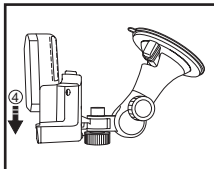

③ Turn the knob clockwise to adjust right/left position. Turn counterclockwise to set the position.

THE DEVICE SHOULD NOT BE INSTALLED SO THAT IT OBSTRUCTS THE DRIVER'S VIEW.

④ Slide the navigation system into the cradle until it clicks.


⑤ Plug in the cigarette lighter charger.



### CAUTION

Remove the navigation system when you are away from the vehicle to prevent theft.

## ■ How to Remove My Blackbird


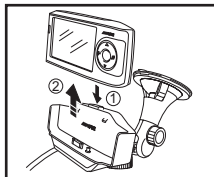


① Press and hold the cradle's eject button.

② Grasp the navigation system behind the antenna and slide up and out of the cradle.

NOTE: Local regulations may prohibit the placement of any object on windows or the dash. See your authorised ALPINE dealer for other installation options.

# ■ Blackbird

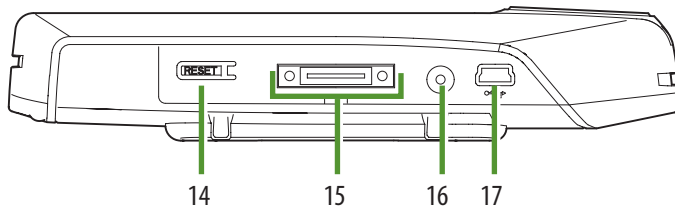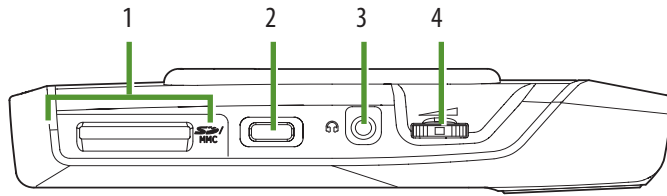

- 1 - SD/MMC Card Slot
- 2 - Power Button
- 3 - Headphone Jack
- 4 - Volume Control
- 5 - Remote and Ambient Light Sensor
- 6 - Navigation Menu Button
- 7 - Map Zoom Out
- 8 - Center Key (Phone Key)
- 9 - Music
- 10 - Destination
- 11 - Map Zoom In
- 12 - Battery Charging Status Indicator
- 13 - Current Vehicle Position Icon
- 14 - Reset Button
- 15 - Cradle Connector
- 16 - External GPS Antenna Connector
- 17 - Mini USB Connector

# Map Functions

Below is an overview of different buttons and icons on the map display. For more detailed information about this screen, please see the Owner's Manual.

**Navigation Menu** – Press this icon to access the navigation menu.

Next Street Name

Next Manoeuvre Arrow

Distance to next Manoeuvre

Trip Information

Traffic Information

Map Orientation

Battery Status Indicator

GPS Status Bar


Map Scale Bar


Current Street Name

**Current Vehicle Position** – Press this icon to return to the map from any screen.

**Voice Prompt Repeat Button** – Repeats the last voice prompt command.


# ■ Navigation Menu

From the Map or any screen, touch the Navigation Menu  to access the following menus:

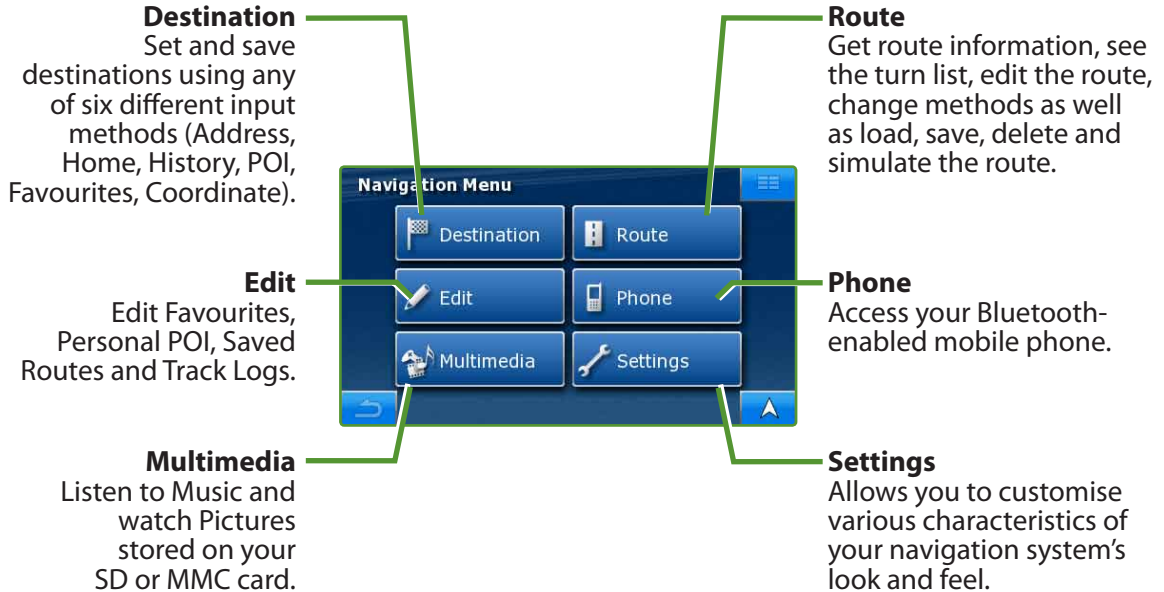

## ■ Go to a Destination

The following example briefly describes how to input a destination in the Blackbird Navigation System.

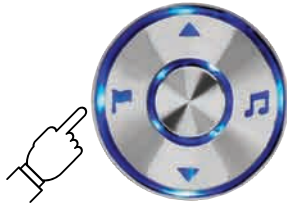


- 1 Select **Destination** from **Navigation Menu** .  
Or press Destination button.



- 2 Select a destination input method. (**Address** is selected.)



- 3 To change the country press the button with the countryname. Select a country from the list.

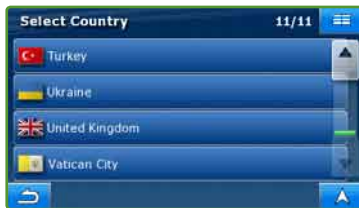


- 4 Press the button **<City Name>** to type in the destination. Press **OK** to access the list to select a matching entry.





- 5 Type in the street name.  
Press **OK** to access the list to select a matching entry.

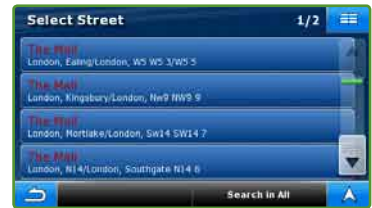


- 6 Enter a house number.  
Press **OK** to access the confirmation screen.



- 7 Press **Go** to initialise route calculation and start navigation.


## ■ Docking with IVA-W205R and IVA-W505R

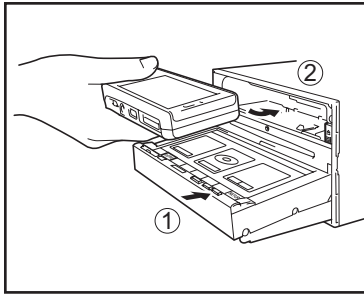


- 1 Open IVA-W205R / IVA-W505R head unit monitor.
- 2 Insert Blackbird into the unit with the screen facing up and the navigation wheel on the left.
- 3 Press Blackbird firmly into place.

### Additional On-Screen Button

When Blackbird is docked, an additional on-screen button allows you to conveniently access additional system features.

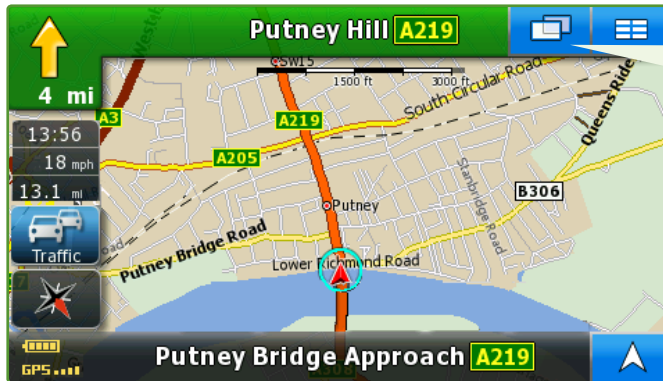

 Touching this button will give you access to the A/V Head Unit's display control.





**ALPINE ELECTRONICS MARKETING, INC.**

1-1-8 Nishi Gotanda  
Shinagawa-ku, Tokyo 141-0031, Japan  
Phone 03-5496-8231

**ALPINE ELECTRONICS OF AMERICA, INC.**

19145 Gramercy Place, Torrance,  
California 90501 U.S.A.  
Phone 1-800-ALPINE-1 (1-800-257-4631)  
1-888-NAV-HELP (1-888-628-4357)

**ALPINE ELECTRONICS OF CANADA, INC.**

777 Supertest Road, Toronto,  
Ontario M3J 2M9 Canada  
Phone 1-800-ALPINE-1 (1-800-257-4631)  
1-888-NAV-HELP (1-888-628-4357)

**ALPINE ELECTRONICS OF AUSTRALIA PTY, LTD.**

161-165 Princess Highway,  
Hallam Victoria 3803, Australia  
Phone 03-8787-1200

**ALPINE ELECTRONICS GmbH**

Wilhelm-Wagenfeld-Str. 1-3,  
80807 München, Germany  
Phone 089-32 42 640

**ALPINE ELECTRONICS OF U.K., LTD.**

ALPINE House  
Fletchamstead Highway,  
Coventry CV4 9TW, U.K.  
Phone 0870-33 33 763

**ALPINE ELECTRONICS FRANCE S.A.R.L.**

(RCS PONTOISE B 338 101 280)  
98, Rue de la Belle Etoile, Z.I. paris Nord II,  
B.P. 50016, 95945 Roissy Charles de Gaulle  
Cedex, France  
Phone 01-48638989

**ALPINE ITALIA S.p.A.**

Viale C. Colombo 8, 20090 Trezzano  
Sul Naviglio (MI), Italy  
Phone 02-484781

**ALPINE ELECTRONICS DE ESPAÑA, S.A.**

Portal de Gamarra 36, Pabellón, 32  
01013 Vitoria (Alava)-APDO 133, Spain  
Phone 945-283588

**ALPINE ELECTRONICS (BENELUX) GmbH**

Leuvensesteenweg 510-B6,  
1930 Zaventem, Belgium  
Tel.: 02-725 1315