



CVA-1014R CVA-1014RB CVA-1014RR

MOBILE MEDIA STATION

- **OWNER'S MANUAL**
Please read before using this equipment.
- **BEDIENUNGSANLEITUNG**
Lesen Sie diese Bedienungsanleitung bitte vor
Gebrauch des Gerätes.
- **MODE D'EMPLOI**
Veuillez lire avant d'utiliser cet appareil.
- **MANUAL DE OPERACIÓN**
Léalo antes de utilizar este equipo.
- **ISTRUZIONI PER L'USO**
Si prega di leggere prima di utilizzare
l'attrezzatura.
- **ANVÄNDARHANDLEDNING**
Innan du använder utrustningen bör du läsa
igenom denna användarhandledning.

DAB
CONTROL

ALPINE ELECTRONICS MARKETING, INC.
1-1-8 Nishi Gotanda,
Shinagawa-ku,
Tokyo 141-0031, Japan
Phone 03-5496-8231

ALPINE ELECTRONICS OF AMERICA, INC.
19145 Gramercy Place, Torrance,
California 90501, U.S.A.
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.
7300 Warden Ave., Suite 203, Markham,
Ontario L3R 9Z6, Canada
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
6-8 Fiveways Boulevard Keysborough,
Victoria 3173, Australia
Phone 03-9769-0000

ALPINE ELECTRONICS GmbH
Frankfurter Ring 117, 80807 München, Germany
Phone 089-32 42 640

ALPINE ELECTRONICS OF U.K. LTD.
Alpine House
Fletchamstead Highway, Coventry CV4 9TW, U.K.
Phone 0870-33 33 763

ALPINE ELECTRONICS FRANCE S.A.R.L.
(RCS PONTOISE B 338 101 280)
98, Rue de la Belle Etoile, Z.I. Paris Nord II,
B.P. 50016, 95945 Roissy Charles de Gaulle
Cedex, France
Phone 01-48638989

ALPINE ITALIA S.p.A.
Viale C. Colombo 8, 20090 Trezzano
Sul Naviglio (MI), Italy
Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal de Gamarra 36, Pabellón, 32
01013 Vitoria (Alava)-APDO 133, Spain
Phone 945-283588

EN

DE

FR

ES

IT

SE

Contents

Operating Instructions

WARNING

WARNING	3
CAUTION	3
PRECAUTIONS	3

Basic Operation

Detaching the Front Panel	6
Attaching the Front Panel	6
Initial System Start-Up	6
Turning Power On and Off	7
Raising the Monitor	7
Lowering the Monitor	7
Selecting the Monitor's Opening Position	7
Adjusting the Monitor Viewing Angle	8
Adjusting Volume/Balance (Between Left and Right)/Fader (Between Front and Rear)	8
Audio Mute Function	8

Radio Operation

Manual Tuning	9
Automatic Seek Tuning	9
Manual Storing of Station Presets	9
Automatic Memory of Station Presets	10
Tuning to Preset Stations	10
Selecting a Station from the List	10

RDS Operation

Setting RDS Reception Mode and Receiving RDS Stations	11
Recalling Preset RDS Stations	11
Receiving RDS Regional (Local) Stations	12
PI SEEK Setting	12
Receiving Traffic Information	12
PTY (Programme Type) Tuning	13
Receiving Traffic Information While Playing CD or Radio	13
Priority PTY (Programme Type)	14
Displaying Radio Text	14

DAB Operation (Optional)

Using DAB Receiver for the Ensemble Seek Tuning	15
Changing the Service	16
Changing the Service Component	16
Memorizing the Service	16
Receiving the Memorized Service	16
Memorizing the Ensemble Automatically	17
PTY (Programme Type) Tuning	17
Turning ON/OFF Traffic News Announcement	17
Setting the Announcement Select Mode	18
Changing the Display Mode	19
Receiving Announcement Information of DAB Regional (Local) Stations	19
Setting for Automatic Change from DAB to RDS	20
Setting ON/OFF for DRC (Dynamic Range Control)	20

CD/MP3/Changer Operation (Optional)

Playing Optional CD player or Changer	21
Repeat Play	22
M.I.X. (Random Play)	22
Scanning Programmes	23
Selecting Folders (concerning MP3)	23
File/Folder Search (concerning MP3)	23
Controlling CD Changer	24
Playing MP3 Files with the CD Changer	24
Multi-Changer Selection	25
Setting the Range of MP3 File Selection	25

DVD/Video CD/CD Player Operation (Optional)

Playing DVD/Video CD/CD	26
Still/Pause	26
Chapter (DVD)/Track (Video CD) Sensor	26
Fast Forward/Backward	26
Repeat Play	27
Controlling DVD Changer	27

Navigation System Operation (Optional)

Turning on the Navigation Mode	28
Interrupt Feature (NAV. MIX)	28
Interrupt Feature (NAV. MIX OUT)	28

iPod™ Operation (Optional)

Playback	29
Searching for a desired Song	29
Random Play Shuffle (M.I.X.)	31
Repeat Play	31
Displaying the Text	31

MobileHub™ Link Operation (Optional)

About MobileHub™ Link	32
Telephone Mode On and Off	32
Incoming Calls	32
Calling	33
SMS (Short Message Service) Operation	34
Setting the Call Receiving Method	34

Other Useful Features

Displaying the Title/Text	35
Titling Discs/Stations	36
Erasing Disc Title/Station Title	36
Setting the Bass Control	37
Setting the Treble Control	38
Switching Phase	39
Turning Loudness On and Off	39
Turning Defeat Mode On and Off	39
Illumination Control	40
Adjusting Brightness of Picture	40
Adjusting Colour of Picture	40
Adjusting Tint of Picture	41
Setting the Background Screen Colour (DAY/NIGHT)	41
Setting the Automatic Background Screen Colour	41
Scroll Setting	42
Setting Automatic Opening/Closing of Monitor	42

Turning Sound Guide Function On or Off	43
Setting the Clock Display	43
Displaying Time	43
Setting Time	43
Automatic Time Adjustment	43
Setting the External Expansion Box	44
Rear Monitor Setting	44
Setting the External Input	45
Setting Front/Rear/Subwoofer Preout of the External Expansion Box	46
Displaying Spectrum Analyzer	46
Switching the Tuner Mode	47
Adjusting Source Signal Levels	47
Subwoofer Control On and Off	47
Turning Mute Mode On and Off	48
Changing the Radio Frequencies for each Country	48
Switching Disc Mode	48
Operating an External Audio Processor (Optional)	49
Simultaneous Operation	49
Switching Display Mode	50
Operation with the Monitor Closed	51

Information

In Case of Difficulty	52
Specifications	53

Installation and Connections

Warning	54
Caution	54
Precautions	54
Installation	55
Connections	57

WARNING

WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISE WHILE DRIVING.

Failure to do so may result in an accident.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.

Use for other than its designed application may result in fire, electric shock or other injury.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electric shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.

Doing so may result in personal injury or damage to the product.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

CAUTION

This symbol means important instructions. Failure to heed them can result in injury or material property damage.

HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Centre for repairing.

KEEP FINGERS AWAY WHILE THE MOTORIZED FRONT PANEL OR MOVING MONITOR IS IN MOTION.

Failure to do so may result in personal injury or damage to the product.

PRECAUTIONS

Product Cleaning

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Temperature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and 0°C (+32°F) before turning your unit on.

Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

Installation Location

Make sure the CVA-1014R/CVA-1014RB/CVA-1014RR will not be installed in a location subjected to:

- Direct sun and heat
- High humidity and water
- Excessive dust
- Excessive vibrations

Handling the Detachable Front Panel

- Do not expose to rain or water.
- Do not drop or apply shock.

WARNING

Operation of some of the functions of this unit is very complex. Because of this, it was deemed necessary to place these functions into a special screen. This will restrict operation of these functions to times when the vehicle is parked. This ensures the focus of the driver's attention will be on the road and not on the CVA-1014R/CVA-1014RB/CVA-1014RR. This has been done for the safety of the driver and passengers.

The Title Input and SETUP screens cannot be made while the car is moving. The car must be parked and the parking brake must be engaged for the procedure described in the Owner's Manual to be valid. These operations are not possible while you are driving. Also if you attempt to drive during operation, the display will show the warning "CAN'T OPERATE WHILE DRIVING" for 5 seconds.

This operation is the same as when selecting sources using the remote control (Optional). When the car is parked, the selection is made as described in the Owner's Manual.

Alpine products equipped with the Ai-NET bus, connected to the CVA-1014R/CVA-1014RB/CVA-1014RR, can be operated from the CVA-1014R/CVA-1014RB/CVA-1014RR. Depending on the products connected, the functions and displays will vary. For details, consult your Alpine dealer.

After turning the system off, a slight ghost of the image will remain temporarily. This is an effect peculiar to LCD technology and is normal.


Under cold temperature conditions, the screen may lose contrast temporarily. After a short warm-up period, it will return to normal.

Apple, the Apple logo and iPod are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.


Introduction

You can operate most of the functions of this unit with the monitor open or closed. For operations with the monitor closed, refer to page 51.

THE MONITOR IS OPEN

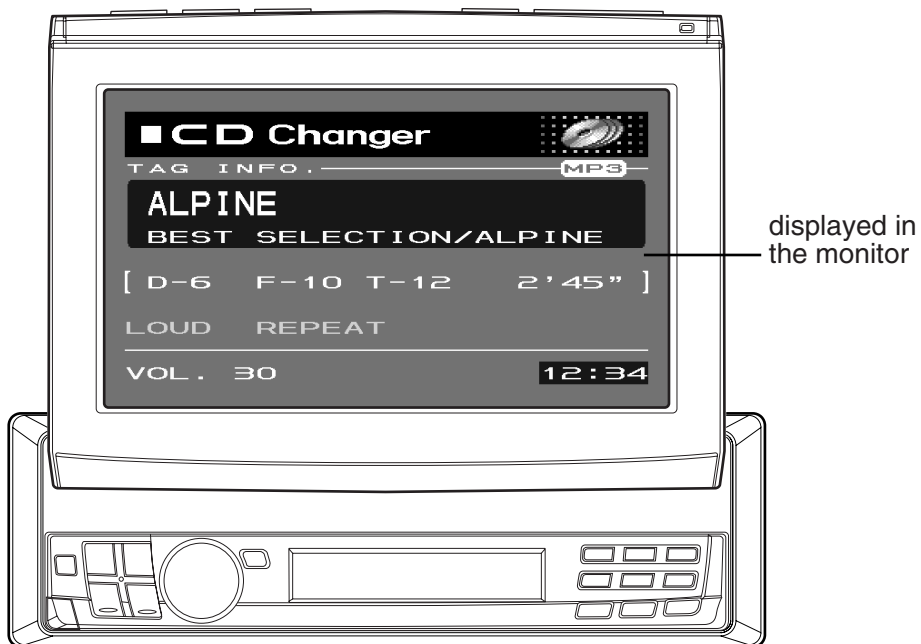


THE MONITOR IS CLOSED

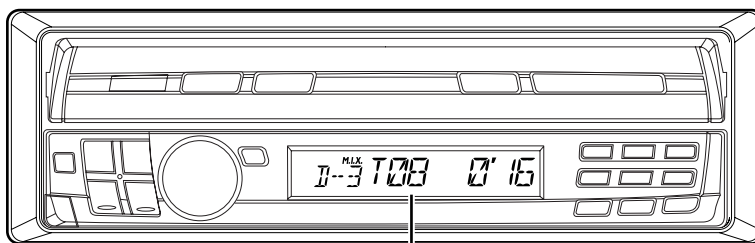


displayed in the sub-display

Basic Operation

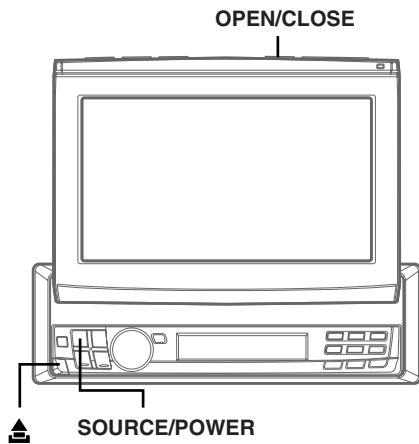


Detaching the Front Panel

 - 1 Press and hold **SOURCE/POWER** for more than 2 seconds to turn off the power.
- 2 Press ▲ (Release) at lower left side until the front panel pops out.
- 3 Grasp the left side of the front panel and pull it out.




NOTES

- The front panel may become hot in normal usage (especially the connector terminals), this is not a malfunction.
- To protect the front panel, place it in the supplied carrying case.

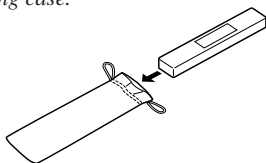

Attaching the Front Panel

- 1 First, insert the right side of the front panel into the main unit. Align the groove on the front panel with the projections on the main unit.
- 2 Push the left side of the front panel until it locks firmly into the main unit.

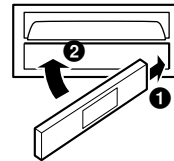

NOTE

Before attaching the front panel, make sure that there is no dirt or dust on the connector terminals and no foreign object between the front panel and the main unit.


● Compatibility with Factory Steering Wheel Radio Controls

If your vehicle has steering wheel controls for the radio, an optional steering wheel control interface may be available to connect your Alpine radio. For details, contact your Alpine dealer.


● Controllable with Remote Control

This unit can be controlled with an optional Alpine remote control. For details, consult your Alpine dealer.

Point the optional remote control transmitter at the remote control sensor.

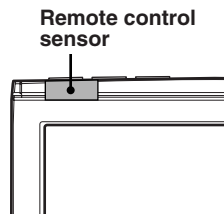

When the monitor is open.

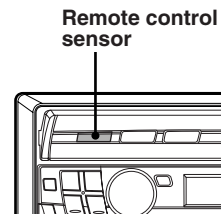


When the monitor is closed.

- You can use the remote control even when the monitor display is closed.
- CVA-1014R/CVA-1014RB/CVA-1014RR is not compatible with MD, cassette tapes and a 3-disc changer.

Initial System Start-Up

 Immediately after installing or applying power to the unit, it should be initialized. To do this, first, remove the detachable front panel. Behind the front panel, to the right of the connector, there is a small hole. Using a pencil or other pointed object, press the Reset switch mounted behind this hole to complete the initialization procedure.



RESET switch



 

Basic Operation

Turning Power On and Off

Some of this unit's functions, cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations.

- 1 Press **SOURCE/POWER** to turn on the unit. The opening screen appears automatically on the monitor.

NOTE

The unit can be turned on by pressing any other buttons except **OPEN/CLOSE**, **TITLE**  and **TILT** .

Press and hold **SOURCE/POWER** for at least 2 seconds to turn off the unit.

NOTES

- After turning the system off, a slight ghost of the image will remain temporarily. This is an effect peculiar to LCD technology and is normal.
- Under cold temperature conditions, the screen may lose contrast temporarily. After a short warm-up period, it will return to normal.
- The CVA-1014R/CVA-1014RB/CVA-1014RR draws minimal current even when its power switch is turned off. If the switched power (ignition) lead of the CVA-1014R/CVA-1014RB/CVA-1014RR is connected directly to the positive (+) post of the vehicle's battery, the battery may be discharged. If this lead is unswitched, it must be disconnected from the battery post should the vehicle be left unused for an extended period of time.
An SPST (Single-Pole, Single-Throw) switch (sold separately) can be added to simplify this procedure. Then, you can simply place it in the OFF position when you leave the vehicle. Turn the SPST switch back ON before using the CVA-1014R/CVA-1014RB/CVA-1014RR. For connecting the SPST switch, refer to "Connection Diagram of SPST Switch" on page 56.
- Some operation of the unit cannot be performed while the vehicle is in motion. In this case, be sure to first stop your vehicle and apply the parking brake, then perform the operation.

Raising the Monitor

- 1 Press **OPEN/CLOSE**, or press and hold **MUTE** on the optional Remote Control. The unit beeps 3 times and raises the monitor automatically.

NOTES

- The CVA-1014R/CVA-1014RB/CVA-1014RR is a precision device. With gentle handling, its unique capabilities can be enjoyed for a long time.
- If the monitor touches an obstacle while it is being raised, the unit will stop raising the monitor immediately. Should this occur, remove the obstacle and press **OPEN/CLOSE** again to raise the monitor.
- When the movable monitor is opened, do not place any object on the monitor and be careful not to bump or apply any pressure to the monitor while it is open. This can cause damage to the mechanism.
- Under low ambient temperature conditions, the display may be dark for a short period of time immediately after the power is turned on. Once the LCD has warmed up, the display will return to normal.
- For your safety, some operation of the unit cannot be performed while the vehicle is in motion. In this case, first stop the vehicle and engage the parking brake, then perform the operation.
- If you select AUX or NAVI as the current source without connecting to the CVA-1014R/CVA-1014RB/CVA-1014RR, a noise may occur when you open the monitor. This is not a malfunction.

Lowering the Monitor

- 1 Press **OPEN/CLOSE**, or press and hold **MUTE** on the optional Remote Control. The unit will beep 3 times and lower the monitor automatically.

NOTES


- The CVA-1014R/CVA-1014RB/CVA-1014RR is a precision device. With gentle handling, its unique capabilities can be enjoyed for a long time.
- If the monitor touches an obstacle while it is being lowered, the unit will stop lowering the monitor immediately.
Should this occur, remove the obstacle and press **OPEN/CLOSE** again to lower the monitor.
- If you select AUX or NAVI as the current source without connecting to the CVA-1014R/CVA-1014RB/CVA-1014RR, a noise may occur when you close the monitor. This is not a malfunction.

Selecting the Monitor's Opening Position

The monitor's opening position has 2 settings.

- 1 Press and hold **OPEN/CLOSE** for at least 2 seconds while the monitor is being raised. Each press changes the monitor position back or forth.

Basic Operation

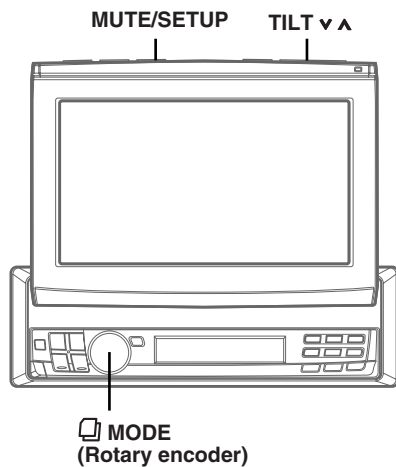

Adjusting the Monitor Viewing Angle

Adjust the monitor's angle for better visibility.

- 1 Press **TILT ▼ ▲** to adjust the monitor's angle so the screen will be in the best viewing position. Each press of the buttons produces a beep and changes the screen angle between about 40 and 105 degrees.
When you press and hold **TILT ▼** or **▲** for at least 2 seconds, the monitor's angle keeps moving until you release the button.

NOTES

- If the monitor touches an obstacle while the angle is being adjusted, the unit will stop the screen immediately.
Should this happen, remove the obstacle and press **TILT ▼** or **▲** again.
- The screen colour will vary when viewed at certain angles. Adjust the screen angle for the best viewing position.
- If the voltage of the vehicle's battery power is low, the screen may blink when the screen angle is changed.
This is normal and not a malfunction.

CAUTION

Keep hands (or any other object) away from the display while it is opening or closing to avoid damage or injury. The back of the movable display will get very warm under normal operating conditions. This is not a malfunction. Do not touch.

Adjusting Volume/Balance (Between Left and Right)/Fader (Between Front and Rear)

- 1 Press **MODE (Rotary encoder)** repeatedly to choose the desired mode. Each press changes the modes as follows:

→ NAV*1 → SUB-W*2 → BAL → FAD → VOL →

NAV.Level: 0~15
Subwoofer: 0~15
Balance: L15~R15
Fader: R15~F15
Volume: 0~35

NOTE

If the **MODE (Rotary encoder)** is not turned in 5 seconds after selecting the **BALANCE**, **FADER**, **NAV**. Level or **SUBWOOFER** mode, the unit automatically returns to the **VOLUME** mode.

*1 When the **SUBWOOFER** mode is **OFF** (page 47), its level cannot be adjusted.

*2 When the **NAV.MIX** mode is **OFF** (page 28), its level cannot be adjusted.

- 2 Turn **MODE (Rotary encoder)** until the desired sound is obtained in each mode.


Audio Mute Function

Activating this function will instantly lower the volume level by 20 dB.

- 1 Press **MUTE/SETUP** to activate the **MUTE** mode. The audio level will decrease by about 20 dB.
Pressing **MUTE/SETUP** again will bring the audio back to its previous level.

Radio Operation

Automatic Seek Tuning

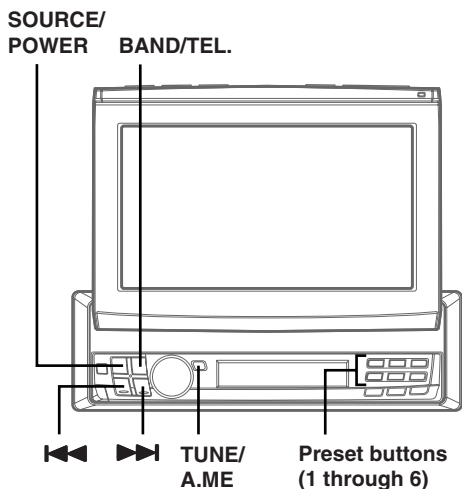

1 Press **SOURCE/POWER** until a radio band and frequency appears in the display.

2 Press **BAND/TEL.** repeatedly until the desired radio band is displayed. Each press changes the band:

→ FM1 → FM2 → FM3 → MW → LW

3 Press **TUNE/A.ME** to illuminate the DX and SEEK indicators in the display. With the DX (Distance) mode activated, both strong and weak stations will be tuned in the Auto-Seek operation. Press again to return to the local mode. The DX indicator will turn off and the SEEK indicator will remain illuminated. Now, only strong stations will be tuned.

4 Press **◀◀** or **▶▶** to automatically seek for a station downward or upward respectively. The unit will stop at the next station it finds. Press the same button again to seek the next station.

Manual Storing of Station Presets

1 Select the radio band and tune in a desired radio station you wish to store in the preset memory.


2 Press and hold any one of the **preset buttons (1 through 6)** for at least 2 seconds, into which you want to store the station. The selected station is stored. The display shows the band, preset No. and station frequency memorized.

3 Repeat the procedure to store up to 5 other stations onto the same band. To use this procedure for other bands, simply select the band desired and repeat the procedure. A total of 30 stations can be stored in the preset memory (6 stations for each band; FM1, FM2, FM3, MW or LW.)

NOTE

If you store a station in a preset memory which already has a station, the current station will be cleared and replaced with the new station.

Example of Radio mode Screen

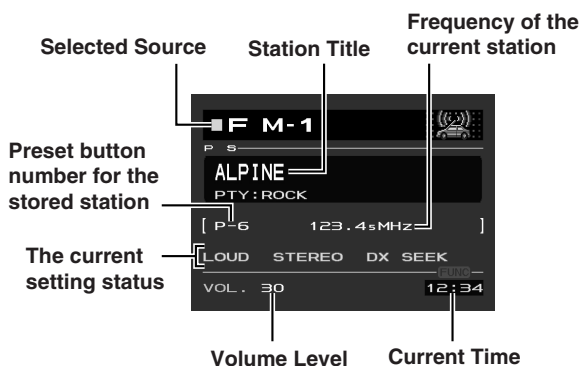

Manual Tuning

1 Press **SOURCE/POWER** until a radio band and frequency appears in the display.

2 Press **BAND/TEL.** repeatedly until the desired radio band is displayed. Each press changes the band:

→ FM1 → FM2 → FM3 → MW → LW

3 Press **TUNE/A.ME** repeatedly until "DX SEEK" and "SEEK" disappear from the display.

NOTE


The initial mode is DX SEEK.

4 Press **◀◀** or **▶▶** to move downward or upward one step respectively until the desired station frequency is displayed.

NOTE

The STEREO indicator appears on the monitor when a Stereo FM station is tuned in.

Radio Operation

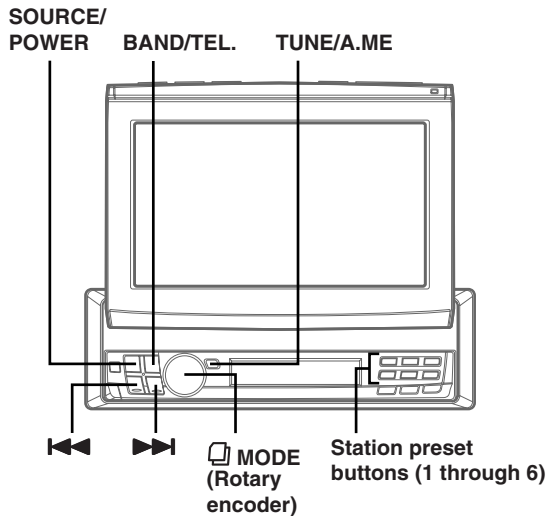

Automatic Memory of Station Presets

- 1 Press **SOURCE/POWER** to select the radio mode.
- 2 Press **BAND/TEL.** repeatedly until the desired radio band is displayed.
- 3 Press and hold **TUNE/A.ME** for at least 2 seconds.
The frequency on the display continues to change while the automatic memory is in progress. The tuner will automatically seek and store 6 strong stations in the selected band. They will be stored into presets 1 to 6 buttons in order of signal strength.
When the automatic memory has been completed, the tuner goes to the station stored in the preset location No. 1.

NOTE

If no stations are stored, the tuner will return to the original station you were listening to before the auto memory procedure began.

Tuning to Preset Stations

- 1 Press **SOURCE/POWER** to select the radio mode.
- 2 Press **BAND/TEL.** repeatedly until the desired radio band is displayed.
- 3 Press the **station preset button** that has your desired radio station in memory.
The display shows the band, preset No. and frequency of the station selected.

Selecting a Station from the List

You can display the list of your titled stations (refer to "Titing Discs/Stations" on page 36), and select a station from this list.

- 1 When the monitor is open, press and hold the **MODE (Rotary encoder)** for at least 2 seconds.
The title list is displayed.
- 2 Press **◀◀** or **▶▶** to select a station from the list.
- 3 Press the **MODE (Rotary encoder)** to tune in the selected station.

NOTE

*To cancel the title list display, press and hold the **MODE (Rotary encoder)** for at least 2 seconds.*


RDS Operation

- 5 Press **FUNC** to activate the normal mode.
The FUNC indicator will turn off.

TIPS

- When the unit receives the PTY31 (Emergency Broadcast) signal, the unit will show "ALARM" in the display automatically.
- The RDS digital data includes the following:

PI	Programme Identification
PS	Programme Service Name
AF	List of Alternative Frequencies
TP	Traffic Programme
TA	Traffic Announcement
PTY	Programme Type
EON	Enhanced Other Networks
R.TEXT	Radio Text Information
CT	Clock Time

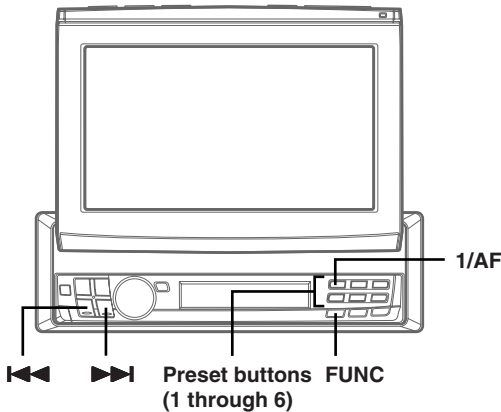

Setting RDS Reception Mode and Receiving RDS Stations

The RDS (Radio Data System) is a radio information system using the 57 kHz subcarrier of regular FM broadcast. The RDS allows you to receive a variety of information such as traffic information, station names, and to automatically re-tune to a stronger transmitter that is broadcasting the same programme.

- 1 Press **FUNC** so that the FUNC indicator appears in the sub-display. To perform the same operation with the monitor open, press **FUNC** only when the "FUNC" indicator lights red in the monitor.
- 2 Press **1/AF** to activate the RDS mode.
- 3 Press **◀◀** or **▶▶** to tune in the desired RDS station.
- 4 Press **1/AF** again to deactivate the RDS mode.


Recalling Preset RDS Stations

- 1 Press **FUNC** so that the FUNC indicator appears in the sub-display. To perform the same operation with the monitor open, press **FUNC** only when the "FUNC" indicator lights red in the monitor.
- 2 Press **1/AF** to activate the RDS mode.
The display shows "AF" when the RDS mode is activated.
- 3 Press **FUNC** to activate the normal mode.
The FUNC indicator will turn off.
- 4 Make sure that the FUNC indicator light goes out, then press the **preset button** in which your desired RDS station is preset.
If the preset station's signal is weak, the unit automatically searches and tunes to a stronger station in the AF (Alternative Frequencies) list.
- 5 If the preset station and the stations in the AF list cannot be received:
When the PI SEEK setting is on (refer to "PI SEEK Setting" on page 12), the unit searches again for a station in the PI (Programme Identification) list.
If there are still no stations receivable in the area, the unit displays the frequency of the preset station and the preset indicator disappears.
If the signal level of the Regional (Local) station being tuned becomes too weak to receive, press the same preset button to tune in a Regional station in other district.

NOTE

For presetting the RDS stations, refer to the Radio Operation section. The RDS stations can be preset in the FM1, FM2 and FM3 bands only.

RDS Operation

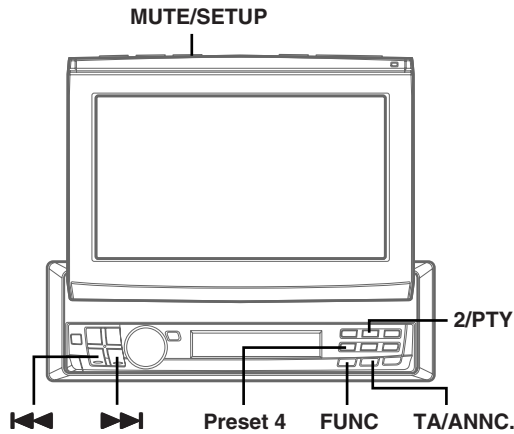

Receiving RDS Regional (Local) Stations

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 4** to activate the RADIO setting mode. Press **preset 4** again to select REGIONAL.
- 3 Press **◀◀** or **▶▶** to turn to OFF or ON the REGIONAL mode.
In the REGIONAL OFF mode, the unit automatically keeps receiving the related local RDS station.
For any other settings, press **preset 4** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

PI SEEK Setting

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 4** to activate the RADIO setting mode. Press **preset 4** again to select PI SEEK.
- 3 Press **◀◀** or **▶▶** to set PI SEEK to ON/OFF.
For any other settings, press **preset 4** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Receiving Traffic Information

- 1 Press **TA/ANNC.** to activate the Traffic Information mode.
- 2 Press **◀◀** or **▶▶** to select your desired traffic information station. When a traffic information station is tuned in, the TP indicator lights up.
Traffic information is heard only when it is being broadcast. If traffic information is not being broadcast, the unit is set in the standby mode. When a traffic information broadcast begins, the unit automatically receives it and the monitor shows "T.INFO" during the traffic information broadcast (sub-display shows "TRF-INFO" for 2 seconds, then returns to the previous display.)
When traffic information broadcast is over, the unit will automatically set in the standby mode.
- 3 Press **TA/ANNC.** to activate the normal mode.

NOTES

- If the traffic information broadcast signal falls below a certain level, the unit remains in the receiving mode for 1 minute. If the signal remains below a certain level for over 1 minute, the "TA" indicator blinks.
- If you do not want to listen to the traffic information being received, lightly press **TA/ANNC.** to skip that traffic information message. The TA mode will remain in the ON position to receive the next traffic information message.
- If the volume level is changed while receiving traffic information, the changed volume level will be memorized. When traffic information is received next time, the volume level will be automatically adjusted to the level memorized.
- In the TA mode, the SEEK tuning selects only the TP stations.

PTY (Programme Type) Tuning

- 1 Press **FUNC** so that the FUNC indicator appears in the sub-display. To perform the same operation with the monitor open, press **FUNC** only when "FUNC" lights red in the monitor.
- 2 Press **2/PTY** to activate the PTY mode, while the unit is in Radio (FM Receiving) mode. The Programme Type of the station being currently received will be displayed for 5 seconds.
If there is no receivable PTY broadcast, "NO PTY" will be displayed for 2 seconds.
NOTE
If no button is pressed within 5 seconds after pressing 2/PTY, the PTY mode will be automatically cancelled.
- 3 Press **◀◀** or **▶▶** within 5 seconds after activating the PTY mode to choose the desired programme type while the PTY (programme type) is being displayed. Each press scrolls the programme type by one.
◁ LIGHT M → CLASSICS → OTHER M ▷
- 4 Press **2/PTY** within 5 seconds after selecting the programme type to start searching for a station in the selected programme type.
In the sub-display, the desired programme type indicator blinks during the search, and lights when a station is found. In the monitor, "PTY SEEK" is displayed during the search, and the current programme type name appears if the station is found.
If no station is found, "NO PTY" will be displayed for 2 seconds.
- 5 Press **FUNC** to activate the normal mode. The "FUNC" indicator will turn off.

Receiving Traffic Information While Playing CD or Radio

- 1 Press **TA/ANNC.** repeatedly until the TA indicator appears in the display.
- 2 Press **◀◀** and **▶▶** to select a traffic information station if necessary.
 - When a traffic information broadcast starts, the unit automatically mutes the optional CD player or the regular FM broadcast.
 - When the traffic information broadcast finishes, the unit automatically returns to the original source play before the traffic information broadcast began.
 - **When traffic information stations cannot be received:**
 - In the tuner mode:
When the TP signal can no longer be received for over 1 minute, the "TA" indicator blinks.
 - In the CD mode:
When the TP signal can no longer be received, the traffic information station of another frequency will be selected automatically.

NOTE


The receiver is equipped with the EON (Enhanced Other Networks) function in order to keep track of additional alternative frequencies to the AF list. The EON indicator appears while an RDS EON station is being received. If the station being received does not broadcast the traffic information, the receiver automatically tunes in the related station that broadcasts the traffic information when it occurs.

- 3 Press **TA/ANNC.** to deactivate the Traffic Information mode. The TA indicator disappears.

NOTE

The unit automatically switches to a traffic information announcement even if you are listening to a source other than the radio or CD player (e.g. DVD player).

RDS Operation

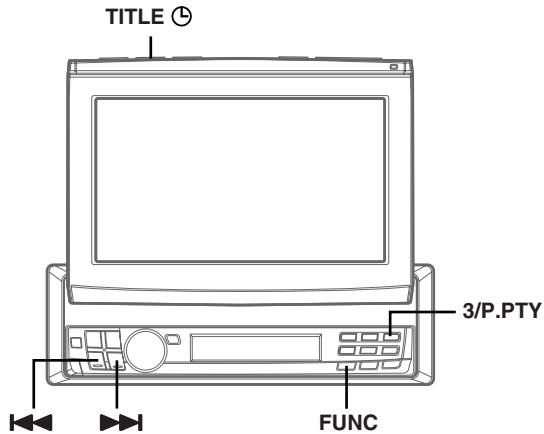

Priority PTY (Programme Type)

This function allows presetting of a programme type such as music category, news, etc. You can listen to a programme in the preset programme type as the unit automatically gives priority to the preset programme type when it begins broadcasting, and interrupts the programme you are currently listening. This feature is functional when your unit is set to a mode other than the LW and MW.

- 1 Press **FUNC** so that the FUNC indicator appears in the sub-display. To perform the same operation with the monitor open, press **FUNC** only when the "FUNC" indicator lights red in the monitor.
- 2 Press **3/P.PTY** to activate the PRIORITY PTY mode.
In the sub-display, "PRIO PTy" is displayed for 2 seconds and then the programme type for 3 seconds. In the monitor, "P.PTY" is displayed, and the current programme type name appears. The initial setting is "NEWS."
NOTE
If no button is pressed within 5 seconds after pressing 3/P.PTY, the PRIORITY PTY mode is automatically cancelled.
- 3 Press **◀◀** or **▶▶** within 5 seconds while "NEWS" is being displayed to choose a desired programme type. Then press **3/P.PTY**. The PRIORITY PTY function will activate.

- 4 Press **3/P.PTY** to activate the PRIORITY PTY mode again.
 - To change the programme category, perform the step 3.
 - To disable the PRIORITY PTY function, press **3/P.PTY** for at least 2 seconds.

NOTE

In the PRIORITY PTY function, unlike in the TA function, the volume does not increase during operation.

- 5 Press **FUNC** to activate the normal mode. The FUNC indicator will turn off.

Displaying Radio Text


Text messages from a radio station can be scrolled in the display.

- 1 Tune in a radio station that transmits text messages.
- 2 Press **TITLE** to display the Radio Text.
- 3 The display shows "R/T WAIT" for a few seconds. When the "Scroll Setting" is set to "AUTO" (refer to page 42), the display scrolls. When set to "MANUAL," the scrolling is cancelled. It continues until other operation is performed.
- 4 To cancel the Radio Text mode, press **TITLE**.

NOTE

If there is no receivable text message or the unit cannot receive a text message properly, the display shows "No Radio Text" (monitor) or "NO TEXT" (sub-display).

DAB Operation (Optional)

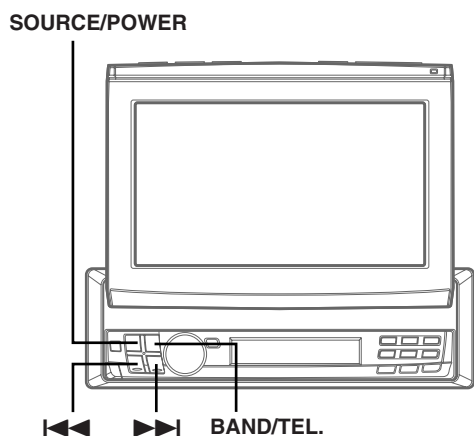

Using DAB Receiver for the Ensemble Seek Tuning

DAB (Digital Audio Broadcasting) offers excellent sound quality even in a moving vehicle, enabling you to receive various types of information, including weather and traffic information, and it also displays information sent from the broadcasting stations. You can also let urgent broadcasts or announcements interrupt a current broadcast.

NOTES

- If you connect the DAB Receiver Box TUA-T100DAB (separately sold), you can control DAB for the reception of broadcast.
- CD quality sound can be obtained from DAB broadcasts, although quality may differ on some services.
- Some broadcasting stations may perform test broadcasts.
- When DAB reception is poor, metallic noise may occur. This is not a malfunction.

- 1 Press **SOURCE/POWER** to select DAB.
- 2 Press **BAND/TEL.** to select DAB1, DAB2, or DAB3.
- 3 If you press and hold **◀◀** or **▶▶** for at least 2 seconds while receiving DAB1, 2, or 3, it starts searching for ensemble automatically. By selecting the mode in the “Changing the Display Mode” section (page 19), the display shows the status of the broadcasting stations that have been received as follows:

Channel No. Display:

The channel numbers of received stations are displayed.

Ensemble Label Display:

The Ensemble Label of received station is displayed.

Service Label Display:

The Ensemble Label is displayed for 2 seconds and then the Service Label is displayed after receiving the broadcasting station.

Component Label Display:

The Ensemble Label is displayed for 2 seconds, then the Service Label is displayed for 2 seconds, and then the display is changed to the Component Label after receiving the broadcasting station.


Dynamic Label Display:

The Ensemble Label is displayed for 2 seconds, then the Service Label is displayed for 2 seconds, and then the display is changed to the Dynamic Label after receiving the broadcasting station.

NOTE

When you use DAB, you can select a desired ensemble which may contain one or more services, any of which can be received. Furthermore, each service contains a Service Component, which itself can contain any number of Primary or Secondary services, depending on the Service Component. Several different kinds of service can therefore be selected.

DAB Operation (Optional)

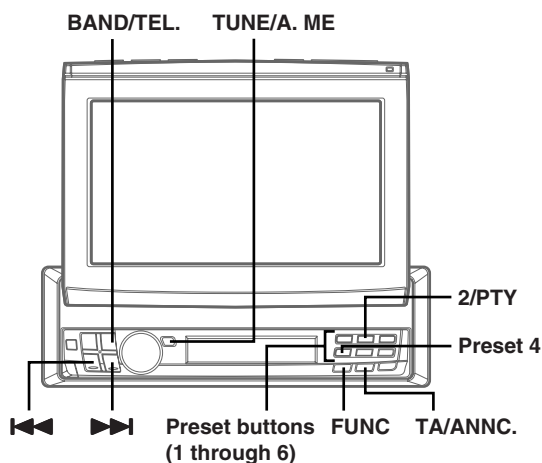

Memorizing the Service

- 1 Select the service that you want to memorize.
- 2 Press any one of the **preset buttons (1 through 6)** for at least 2 seconds while the “FUNC” indicator light goes out. The selected service is memorized.
- 3 To memorize more, repeat the above steps 1 and 2.

NOTES

- You can memorize up to 18 stations (6 stations for each band; DAB1, DAB2, DAB3).
- If you select a preset button that has already memorized a service, the new selection takes it over.
- When you are not receiving DAB, the service is not memorized. (Memorize the service when the DAB reception is good.)

Changing the Service

Services are received within the ensemble that you are currently receiving.

- 1 While receiving the ensemble, momentarily press **◀◀** or **▶▶**, and select the service that you desire.
The selected service label is displayed for 2 seconds, and then you return to the display that you select with the steps described under the section “Changing the Display Mode” (page 19).

Changing the Service Component

You can change Audio Services of the Service Component between the Primary and Secondary, when listening to an Audio Service that has a Secondary Service Component.

- 1 Press **FUNC** to turn on the “FUNC” indicator.
- 2 Press **preset 4** to change the Service Component between the Primary and Secondary broadcast.
Every time you press the button the selection toggles.
The Component label is displayed for 2 seconds, and then you return to the display that you selected with the steps described under the section “Changing the Display Mode” (page 19).

NOTE

If there exists a Secondary Service Component within a service, the indicator “S” blinks on the display, “P” indicator lights ON. When receiving the Secondary Service Component, the indicator “S” remains lit “P” indicator lights OFF.

Receiving the Memorized Service

- 1 Press **BAND/TEL.** to select your desired band.
- 2 Press one of the **preset buttons (1 through 6)**. The selected service is received.
By selecting the mode in the “Changing the Display Mode” section (page 19), the display shows the status of the broadcasting stations that have been received as follows:

Channel No. Display:

The channel numbers of received stations are displayed.

Ensemble Label Display:

The Ensemble Label of received station is displayed.

Service Label Display:

The Ensemble Label is displayed for 2 seconds and then the Service Label is displayed after receiving the broadcasting station.

Component Label Display:

The Ensemble Label is displayed for 2 seconds, then the Service Label is displayed for 2 seconds, and then the display is changed to the Component Label after receiving the broadcasting station.

Dynamic Label Display:

The Ensemble Label is displayed for 2 seconds, then the Service Label is displayed for 2 seconds, and then the display is changed to the Dynamic Label after receiving the broadcasting station.

NOTE

When you receive the Secondary Service Component, you memorize the service, but when you call out this memorized service, the Primary Service Component will be called out.

DAB Operation (Optional)

Memorizing the Ensemble Automatically

- 1 Press **BAND/TEL.** to select the band that you want to receive.
- 2 Press and hold **TUNE/A.ME** for at least 2 seconds.
The ensemble is searched for, and six ensembles are automatically received and memorized with the preset buttons (1 through 6). When memorization has completed, the Ensemble that was memorized last is received.

By selecting the mode in the “Changing the Display Mode” section (see page 19), the display shows the status of the broadcasting stations that have been received as follows:

Channel No. Display:

The channel numbers of received stations are displayed.

Ensemble Label Display:

The Ensemble Label of received station is displayed.

Service Label Display:

The Ensemble Label is displayed for 2 seconds and then the Service Label is displayed after receiving the broadcasting station.

Component Label Display:

The Ensemble Label is displayed for 2 seconds, then the Service Label is displayed for 2 seconds, and then the display is changed to the Component Label after receiving the broadcasting station.

Dynamic Label Display:

The Ensemble Label is displayed for 2 seconds, then the Service Label is displayed for 2 seconds, and then the display is changed to the Dynamic Label after receiving the broadcasting station.

NOTE

If no ensemble is received, the one that has been received before you perform this automatic memorization is received.

PTY (Programme Type) Tuning

- 1 Press **FUNC** and the “FUNC” indicator lights.
- 2 During radio (DAB receiving) mode, press **2/PTY** to go to the PTY Select mode.
- 3 Press **◀◀** or **▶▶** to select your desired programme type.
- 4 After selecting a programme type, and when the “FUNC” indicator is lit, press **2/PTY** to go to the PTY Search mode.
The selected programme type is searched for.
NOTE
To cancel the PTY Search mode and return to the PTY select mode during the PTY search, press 2/PTY, ◀◀ or ▶▶.
- 5 When the station is received, the received programme type is displayed for 5 seconds. If no station is found, “NO PTY” is displayed for 2 seconds.

NOTE

Above functions can be performed only for services within an ensemble.

Turning ON/OFF Traffic News Announcement


When you set to ON, you can automatically receive the Traffic News.

- 1 Press **TA/ANNC.** to set ON/OFF for the Traffic News.

NOTES

- You can also set the RDS stations at the same time.
- This operation can also be performed by turning the Traffic News ON/OFF in the “Setting the Announcement Select Mode” section on page 18.

DAB Operation (Optional)

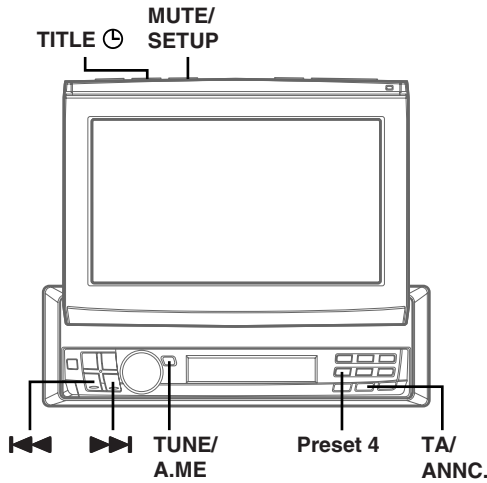

Setting the Announcement Select Mode

- 1 Press **TA/ANNC.** for at least 2 seconds to turn ON the Announcement Select mode.
- 2 Press **◀◀** or **▶▶** to select “ANNOUN,” and then press **TUNE/A.ME** to set it to ON.
- 3 After turning ON the “ANNOUN,” press **◀◀** or **▶▶** to select your desired Announcement.



- 4 Press **TUNE/A.ME** to set ON/OFF for the selected Announcement. Repeat Steps 3 and 4 to set more.

- 5 To set the Announcement Select mode OFF, press and hold **TA/ANNC.** for at least 2 seconds.

NOTES

- When one of the selections between **ALLSEL (All Select)** and **FINANCE (Financial news)** is set ON, no announcement interrupts are made if you set OFF for the **ANNOUN (Announcement)**.
- If you set ON/OFF with the **ALLSEL (All Select)** selection, you can set ON/OFF for the selections from **TRAFFIC (Traffic News)** to **FINANCE (Financial news)**.
- The ON/OFF setting of **TRAFFIC (Traffic News)** is reflected in the setting of the “Turning ON/OFF Traffic News Announcement” section on page 17.


TIPS

- When an urgent broadcast is received, the mode automatically changes to the DAB mode to receive the Alarm Announcement. If you adjust the volume level at this time, that volume level is memorized, and that volume level is applied the next time you receive an urgent broadcast.
- If the announcement that you select in Step 3 interrupts, the selected announcement Label is displayed. If you adjust the volume level at this time, that volume level is memorized, and that volume level is applied the next time announcement interrupts.


DAB Operation (Optional)

Changing the Display Mode


You can display information that is sent from broadcasting stations, such as the channel number or the service name that you are receiving or listening.


- 1 While receiving DAB, press **TITLE**  to change the display mode.

When the monitor is open (displayed in the monitor):

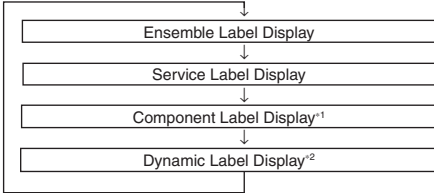

When the monitor is closed (displayed in the sub-display):

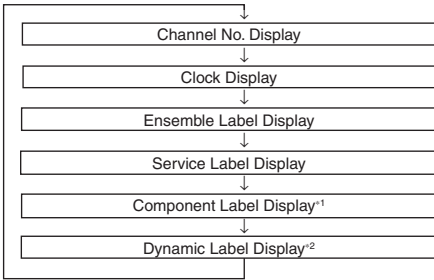

- *1 You can display this only when the broadcasting station supplies the Service Component Label. Otherwise, "NO COMP" (NO component) is displayed.
- *2
- If you set "AUTO" for "Scroll Setting," the character information that is sent from the broadcasting station is scrolled when it displayed. If you are set to "MANUAL" while displaying the Dynamic Label and press and hold **TITLE**  for at least 2 seconds, you can scroll the character information once.
 - "NO TEXT" is displayed when broadcasting stations which contain no Dynamic Label are received. However, when a station is waiting for its reception, "WAITING" is displayed.

Receiving Announcement Information of DAB Regional (Local) Stations


- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds.
- 2 Press **preset 4** to select RADIO setting mode. Press **preset 4** again to select DAB REGIONAL.
- 3 Press **◀◀** or **▶▶** to select DAB REGIONAL ON or OFF.

ON: You can automatically receive announcement interruptions that are valid for the region you are currently in.

OFF: Announcement interruptions are valid for all regions.

For any other settings, press **preset 4** or another preset button.
- 4 Press **MUTE/SETUP** to return to normal mode.

DAB Operation (Optional)

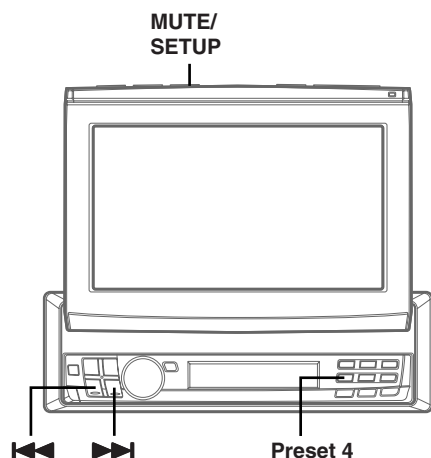

Setting for Automatic Change from DAB to RDS

When the DAB reception is poor, you can set this selection ON to automatically change to the RDS station (a station that can be received) within the same broadcasting station until good reception is achieved. You can switch this for voice only (except Service label/Dynamic label display). The display and operation remain as for DAB.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds.
- 2 Press **preset 4** to select RADIO setting mode. Press **preset 4** again to select RDS/DAB SW.
- 3 Press **◀◀** or **▶▶** to select RDS/DAB ON or OFF.
For any other settings, press **preset 4** or another preset button.

- 4 Press **MUTE/SETUP** to return to normal mode.

NOTE

When reception is being changed from DAB to RDS, the DAB indicator blinks.

Setting ON/OFF for DRC (Dynamic Range Control)


If you set this ON when receiving the sound of a wide Dynamic Range, the DRC (Dynamic Range Control) gain increases when the source sound is small, and the DRC (Dynamic Range Control) gain decreases when the source sound is large, making the Dynamic Range narrower to give you better and more comfortable sound even in the vehicle that produces a large noise.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds.
- 2 Press **preset 4** to select RADIO setting mode. Press **preset 4** again to select DRC.
- 3 Press **◀◀** or **▶▶** to select DRC ON or OFF.
For any other settings, press **preset 4** or another preset button.
- 4 Press **MUTE/SETUP** to return to normal mode.


NOTE

When a radio programme is set to ON, sound other than what you previously set may be produced depending on the broadcast. In this case, turn the programme OFF.

CD/MP3/Changer Operation (Optional)

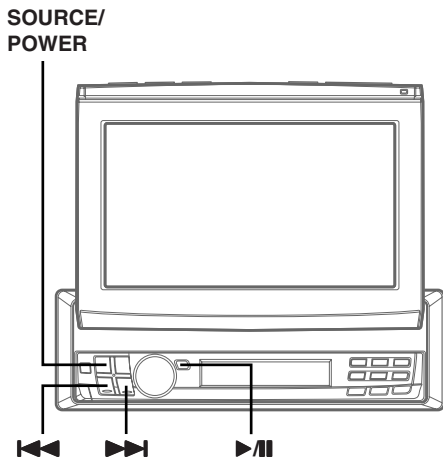

Example of MP3 compatible CD changer mode Screen

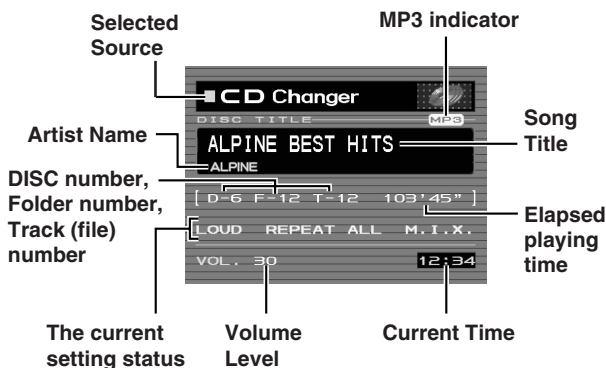

- 2 Press **◀◀** or **▶▶** to select the desired track (file).
Returning to the beginning of the current track (file) :
Press **◀◀**.
Fast backward :
Press and hold **◀◀**.
Advancing to the beginning of the next track (file) :
Press **▶▶**.
Fast forward :
Press and hold **▶▶**.
- 3 To pause playback, press **▶||**.
Pressing **▶||** again will resume playback.
- 4 To eject the disk, press **eject** on the CD player.

NOTE

If the HDA-5460 model is connected to the unit, some operations (for example changing the source, selecting the file by holding buttons up or down, etc.), can be carried out on this unit.


Playing Optional CD Player or Changer

When an optional Alpine CD player or CD/MP3 changer is connected, you can control it from the CVA-1014R/CVA-1014RB/CVA-1014RR. This section describes operation assuming that an Alpine CD player is connected.
(When a CD/MP3 changer is connected, see page 24 to select your desired disc.)

- 1 Press **SOURCE/POWER** until the "CD" appears in the display.
Insert a CD into the CD player, the player starts playing.

CD/MP3/Changer Operation (Optional)

M.I.X. (Random Play)

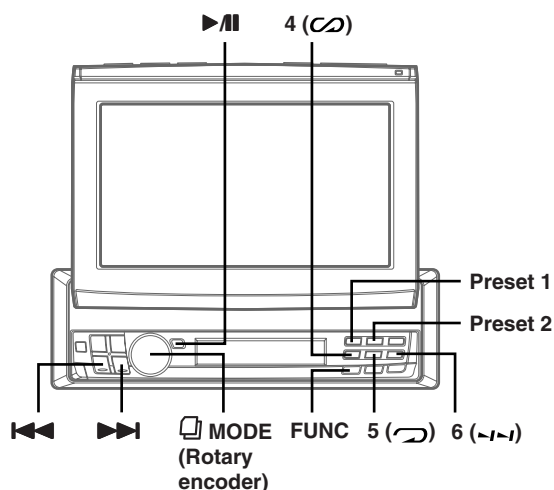

- 1 Press 4 (∞) in the play or pause mode. The tracks (files) on the disc will be played back in a random sequence. After all the tracks on the disc have been played back once, the player will begin a new random sequence play until the M.I.X. mode is cancelled.

To cancel M.I.X. play, press 4 (∞) again to turn off the M.I.X.

NOTES

- If a CD Changer or an MP3 compatible CD changer equipped with the ALL M.I.X. function is connected, ALL M.I.X. will also be selectable.

In this mode, the tracks on all the CDs in the current magazine will be included in the random playback sequence.

□ → M.I.X. → ALL M.I.X. → (off) □

- When you select "FOLDER" in the "Setting the Range of MP3 File Selection" section on page 25 and set to M.I.X., the files in the folder are played back in random sequence. After all the files have been played back, play does not shift to the next folder.

When the monitor is open: displayed in the monitor

- In case a 6-disc CD changer or an MP3 compatible CD changer is connected:
In CD changer mode, press **FUNC** to light the "FUNC" indicator in red and go to step 1.
- In case a 12-disc CD changer is connected:
In changer mode, press **FUNC** twice to light the "FUNC" indicator in red and go to step 1.

When the monitor is closed: displayed in the sub-display

- In case a 6-disc CD changer or an MP3 compatible CD changer is connected:
In CD changer mode, press **FUNC** to illuminate the "FUNC" indicator and go to step 1.
- In case a 12-disc CD changer is connected:
In changer mode, press **FUNC** twice to illuminate the "FUNC" indicator and go to step 1.

Repeat Play

- 1 Press 5 (↺) (Repeat) to play back repeatedly the track being played. The track (file) will be played repeatedly.

Press 5 (↺) again and select OFF to deactivate the repeat play.

NOTES

- If a CD Changer or an MP3 compatible CD changer is connected and the REPEAT (RPT) ALL mode is selected, the unit repeatedly plays back all tracks on the disc selected.

Displayed in monitor:

□ → REPEAT → REPEAT ALL → (off) □

Displayed in the sub-display:

□ → RPT → RPT ALL → (off) □

- When you select "FOLDER" in the "Setting the Range of MP3 File Selection" section on page 25 and set to REPEAT (RPT) ALL, the files in the selected folder will be repeatedly played back.

When the monitor is open: displayed in the monitor

- In case a 6-disc CD changer or an MP3 compatible CD changer is connected:
In CD changer mode, press **FUNC** to light the "FUNC" indicator in red and go to step 1.
- In case a 12-disc CD changer is connected:
In changer mode, press **FUNC** twice to light the "FUNC" indicator in red and go to step 1.

When the monitor is closed: displayed in the sub-display

- In case a 6-disc CD changer or an MP3 compatible CD changer is connected:
In CD changer mode, press **FUNC** to illuminate the "FUNC" indicator and go to step 1.
- In case a 12-disc CD changer is connected:
In changer mode, press **FUNC** twice to illuminate the "FUNC" indicator and go to step 1.

CD/MP3/Changer Operation (Optional)

Scanning Programmes

- 1 Press **6** (↔) to activate the Scan mode.
The first 10 seconds of each track will be played back in succession.

To stop scanning, press **6** (↔) and deactivate the Scan mode.

NOTES

- When you select "FOLDER" in the "Setting the Range of MP3 File Selection" section on page 25, the first 10 seconds of each File in the Folder will be played back.

When the monitor is open: displayed in the monitor

- In case a 6-disc CD changer or an MP3 compatible CD changer is connected:
In CD changer mode, press **FUNC** to light the "FUNC" indicator in red and go to step 1.
- In case a 12-disc CD changer is connected:
In changer mode, press **FUNC** twice to light the "FUNC" indicator in red and go to step 1.

When the monitor is closed: displayed in the sub-display


- In case a 6-disc CD changer or an MP3 compatible CD changer is connected:
In CD changer mode, press **FUNC** to illuminate the "FUNC" indicator and go to step 1.
- In case a 12-disc CD changer is connected:
In changer mode, press **FUNC** twice to illuminate the "FUNC" indicator and go to step 1.

Selecting Folders (concerning MP3)

- 1 Press **FUNC** to illuminate the "FUNC" indicator, and press **preset 1** or **preset 2** to select the folder.

File/Folder Search (concerning MP3)

You can select an MP3 file from the file/folder name list and play back.

- 1 When the monitor is open in MP3 mode, press and hold the  **MODE (Rotary encoder)** for at least 2 seconds during playback.
The unit switches to File/Folder Search mode, and the file/folder name list is displayed.
- 2 Press **◀◀** or **▶▶** to select the desired file or folder.

Press and hold **▶/||** for at least 2 seconds to select File Search or Folder Search.


When the folder name list is displayed:

If there are files in the folder, a triangle appears by the side of each folder name.


Select the desired folder and press and hold **▶/||** for at least 2 seconds to display file name list, and then press **◀◀** or **▶▶** to select the desired file.

When the file name list is displayed:


To search for other folders containing desired files, press and hold **▶/||** for at least 2 seconds to display the folder name list.

- 3 Press the  **MODE (Rotary encoder)** to execute the setting.
The selected file, or the first file of the selected folder starts to play.

NOTE

During search, press and hold the  **MODE (Rotary encoder)** for at least 2 seconds to cancel the File Search mode.

CD/MP3/Changer Operation (Optional)

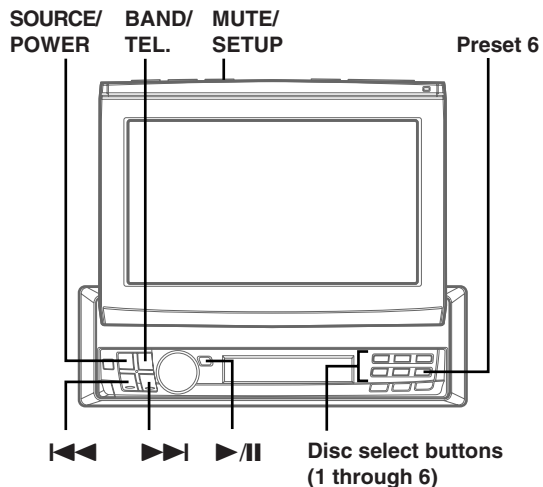

- 2 Press the **disc select buttons (1 through 6)** corresponding to one of the discs loaded in the CD Changer. The selected disc number appears in the display and CD playback starts.

NOTES

- After selecting the desired disc, you can operate in the same way as for the CD player. For details, please see this section.
- When the "FUNC" indicator is lit in red in the monitor, or is lit in the sub-display, the disc select buttons become nonfunctional.

When a 12-disc CD Changer is connected:

To select discs numbered from 1 to 6, the procedure is the same as for the 6-disc CD Changer. To select discs numbered from 7 to 12, first press the FUNC button. In the sub-display, this changes the "D" indicator to "d." The "FUNC" indicator is lit in yellow on the monitor. Then press the desired disc select button. With FUNC activated, the disc select buttons 1 to 6 will represent discs 7 to 12 respectively.

Controlling CD Changer

An optional 6-disc or 12-disc CD Changer may be connected to the CVA-1014R/CVA-1014RB/CVA-1014RR if it is Ai-NET compatible. With a CD Changer connected to the Ai-NET input of the CVA-1014R/CVA-1014RB/CVA-1014RR, the CD Changer will be controllable from the CVA-1014R/CVA-1014RB/CVA-1014RR.

Using the KCA-400C (the Multi-Changer Switching device) or the KCA-410C (Versatile Link Terminal) multiple changers can be controlled by the CVA-1014R/CVA-1014RB/CVA-1014RR.

See the Multi-Changer Selection section on page 25 for selecting the CD Changers.

NOTE

The controls on the CVA-1014R/CVA-1014RB/CVA-1014RR for CD Changer operation are operative only when a CD Changer is connected.

- 1 Press **SOURCE/POWER** to activate the CD changer mode. The display shows the disc number and track number.

NOTES

- The source indicator varies depending on the connected source.
- Press **BAND/TEL.** to switch the Disc mode in the CD/Changer mode.

Playing MP3 Files with the CD Changer

If you connect a changer compatible with MP3, you can play CD-ROMs, CD-Rs, and CD-RWs containing MP3 files.

- 1 Press **SOURCE/POWER** to switch to the CD Changer mode. Disc number, Folder Number, File Number and Elapsed Time are displayed.
- 2 Press any one of the **disc select buttons (1 through 6)** corresponding to one of the discs loaded in the CD Changer.
- 3 To pause playback, press **▶/||**. Pressing **▶/||** again will resume playback.

CD/MP3/Changer Operation (Optional)

Multi-Changer Selection

Alpine's Ai-NET system will support up to 6 CD Changers. When operating two or more changers, the KCA-400C (Multi-Changer Switching device) must be used. If you use 1 Switching device, you can connect up to 4 CD Changers. If you use 2 Switching devices, you can connect up to 6 CD Changers. When using KCA-410C (Versatile Link Terminal), you can connect two changers and two external outputs (AUX).

- 1 Press **SOURCE/POWER** on the CVA-1014R/CVA-1014RB/CVA-1014RR to activate the CD Changer mode.

Alternatively, press **SOURCE** on the optional Remote Control to activate the CD Changer mode. Proceed to step 3 below to select the desired CD Changer.

- 2 Press **BAND/TEL.**, or **BAND** on the Remote Control, to activate the CD Changer Selection mode.
- 3 The CD Changer Selection mode remains active for 3 seconds after step 2 is performed. Press **BAND/TEL.**, or **BAND** on the Remote Control, until the desired CD Changer indicator appears on the display.

NOTE

If the selected CD Changer is not connected, the display will show "NO CHANGER."

- 4 To operate the selected changer, see each operation in this section.

NOTE


*If an optional CD/DVD player is connected to the unit, the disc mode can be switched each time you press **BAND/TEL.** (see "Switching Disc Mode" on page 48).*

Setting the Range of MP3 File Selection

When an MP3 compatible CD changer is connected, you can set the range of MP3 file selection to "entire disc contents" or "folder contents only." This setting is effective for Repeat/M.I.X./Scan play (see page 22 to 23).

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 6** to activate the OTHER setting mode. Press **preset 6** again to select MP3 PLAY.
- 3 Press **◀◀** or **▶▶** to select ALL or FOLDER.
ALL :
plays all the files on one disc
FOLDER:
plays files in the selected folder only
NOTE
During Repeat play, this setting is effective when REPEAT (RPT) ALL is selected (Refer to "Repeat Play" in page 22).
For any other settings, press **preset 6** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

DVD/Video CD/CD Player Operation (Optional)

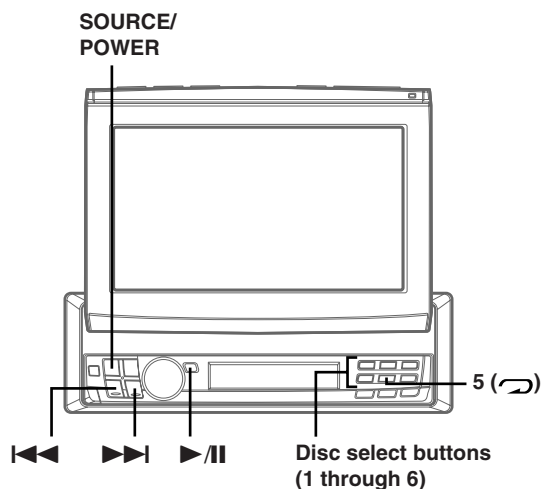

Playing DVD/Video CD/CD

If an optional Alpine DVD/video CD/CD player is connected to the CVA-1014R/CVA-1014RB/CVA-1014RR, you can control it from the CVA-1014R/CVA-1014RB/CVA-1014RR.

⚠ WARNING

It is dangerous (and illegal in many states) for the driver to watch the TV/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.

Install the CVA-1014R/CVA-1014RB/CVA-1014RR correctly so that the driver cannot watch TV/Video unless the vehicle is stopped and the emergency brake is applied.

If the CVA-1014R/CVA-1014RB/CVA-1014RR is not installed correctly, the driver will be able to watch the TV/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.

- 1 Press **SOURCE/POWER** to select the DVD mode.
Insert a disc into the DVD/video CD/CD player, the player starts playing.

Still/Pause

- 1 Press **▶/||** during DVD/video CD/CD play to freeze frame or pause. To resume normal play, press **▶/||** for a second time.

Chapter (DVD)/Track (Video CD) Sensor

- 1 Lightly press **◀◀** or **▶▶** during DVD/video CD/CD play to return to the beginning of the chapter/track being currently played or advance to the beginning of the next chapter/track respectively.

NOTE

The word "chapter or track" means a division of the recorded picture/sound on a DVD/video CD/CD respectively.

Fast Forward/Backward

- 1 Press and hold **◀◀** or **▶▶** during play to fast backward or forward respectively. Release the button when you reach the desired portion you wish to play. Playback starts from that portion.

DVD/Video CD/CD Player Operation (Optional)

Repeat Play

- 1 Press **5** (↔) during play to repeatedly play the chapter/track or title/disc being currently played. Each press changes the repeat play as follows:

DVD:



Video CD/CD:



NOTES

- The track/disc repeat modes cannot be used on video CDs with playback control (PBC). Press "MENU" to turn the PBC function off. For more details, see the operating instructions of your DVD player.

When the monitor is open: displayed in the monitor

- In case a 6-disc DVD changer is connected:
In DVD changer mode, press **FUNC** to light in red the "FUNC" indicator and go to step 1.

When the monitor is closed: displayed in the sub-display

- In case a 6-disc DVD changer is connected:
In DVD changer mode, press **FUNC** to illuminate the "FUNC" indicator and go to step 1.

Controlling DVD Changer


If an optional Alpine DVD Changer is connected to the CVA-1014R/CVA-1014RB/CVA-1014RR, the DVD Changer can be controlled from the CVA-1014R/CVA-1014RB/CVA-1014RR.

- 1 Press **SOURCE/POWER**. The "DVD Changer" appears in the monitor. "DVD CHG" is displayed in the sub-display.
- 2 Press the **disc select buttons (1 through 6)** corresponding to one of the discs loaded in the DVD changer. Playback starts.

NOTES

- After selecting the desired disc, you can operate in the same way as for the DVD/Video CD/CD Player. For details please see elsewhere in this section.
- When the "FUNC" indicator is lit in red in the monitor, or is lit in the sub-display, the disc select buttons become nonfunctional.

Navigation System Operation (Optional)

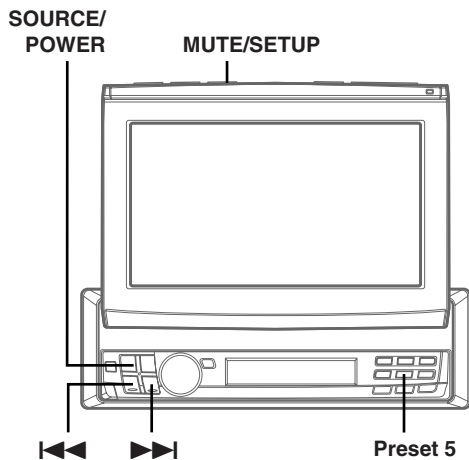

- 3 Press **◀◀** or **▶▶** to select ON or OFF.
ON: The volume level of the navigation system's voice guidance can be adjusted in 15 steps.
OFF: The navigation system's voice guidance is not output.
(For details about adjusting volume level, refer to "Adjusting Volume/Balance/Fader" on page 8.)
For any other settings, press **preset 5** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTES

- The volume level of the audio will be automatically reduced when the voice guidance of the Navigation system starts.
- When the voice guidance of the Navigation system starts to interrupt the audio, the display is automatically changed to the navigation screen.

Turning on the Navigation Mode

If an optional Alpine Navigation System is connected, the display shows the navigation screen.

- 1 Press **SOURCE/POWER** to select the Navigation mode.

NOTE

If the Navigation mode does not appear in the display by pressing **SOURCE/POWER**, set the external setting of NAV.IN to ON (Refer to "Setting the External Input" on page 45).

Interrupt Feature (NAV. MIX)

With an Alpine navigation system connected to the CVA-1014R/CVA-1014RB/CVA-1014RR, the voice guidance of the navigation system will be mixed with the radio or CD audio, etc. You can also adjust the volume level of the voice guidance. If you use this unit connected to an external audio processor, you cannot use this function (except PXA-H700/PXA-H701 series).

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 5** to activate the SYSTEM setting mode. Press **preset 5** again to select NAV. MIX.

Interrupt Feature (NAV.MIX OUT)


With an Alpine navigation system connected to the CVA-1014R/CVA-1014RB/CVA-1014RR, the navigation system's voice guidance is mixed in and output from the Rear/Subwoofer Output RCA connectors.

This function is not available when an external audio processor is connected.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 5** to activate the SYSTEM setting mode. Press **preset 5** again to select NAV.MIX OUT.
- 3 Press **◀◀** or **▶▶** to select ON or OFF.
Select ON to allow the navigation system's voice guidance to interrupt the external amplifier.
For any other settings, press **preset 5** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

iPod™ Operation (Optional)

2 Press **◀◀** or **▶▶** to select the desired song.

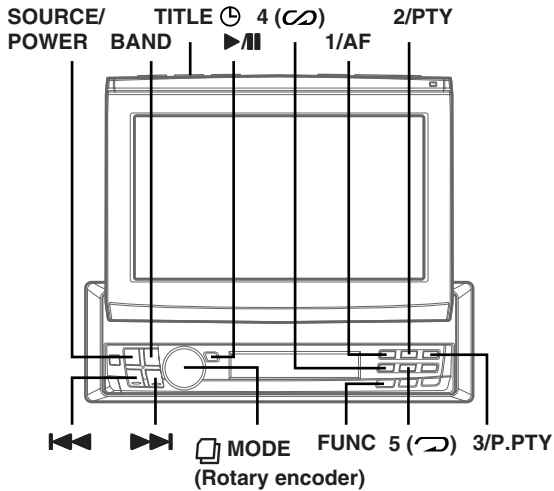

Return to the beginning of the current song:
Press **◀◀**.

Fast backward:
Press and hold **◀◀**.

Advance to the beginning of the next song:
Press **▶▶**.

Fast forward:
Press and hold **▶▶**.


3 To pause playback, press **▶/||**.
Pressing **▶/||** again will resume playback.

NOTES

- If a song is playing on the iPod when it is connected to the adapter, it will continue playing after the connection.
- If there are more than 255 songs, they can be played back, but cannot be correctly displayed.
- If using the iPod with a changer, the Versatile Link Terminal (KCA-410C) must be used. In this case, press **BAND** to select the changer mode applicable to the iPod.

Example of iPod mode Screen

“CD Changer” is displayed in the iPod mode.

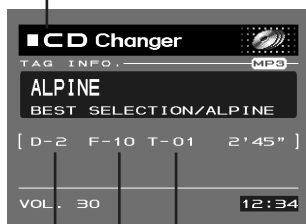

Search mode display “01” fixed display
File No. display*

* The maximum file number that can be displayed is 255.
Any file beyond 255 is still displayed as 255.

When iPod or iPod mini is connected to an optional Alpine Interface adapter for iPod™ (KCA-420i), it can be controlled from the CVA-1014R/CVA-1014RB/CVA-1014RR. However, operation from iPod cannot be performed.

NOTES

- For details, refer to the Owner’s Manual of the connected Interface adapter for iPod™ (KCA-420i).
- For each function, refer to the iPod’s documentation.

Playback

1 Press **SOURCE/POWER** to switch to the CD Changer mode.
The iPod is controllable from the CVA-1014R/CVA-1014RB/CVA-1014RR in the CD Changer mode.

Searching for a desired Song

The folder/file search function has been modified to accommodate the iPod.

Folder search.....Search by Song

File search **Search by Playlist, Artist, Album

** By selecting Disc 1, 2 or 3 in CD changer mode, you can choose the method by which to search.

Disc 1 selection : Playlist search mode
Disc 2 selection : Artist search mode
Disc 3 selection : Album search mode



NOTES

- The maximum number of playlists, artists and albums that can be searched by the file search is 255.
If there are more than 256 playlists, artists, albums, they may not be correctly searched by any of search modes.
- The maximum number of songs that can be searched by the folder search is 255.
- When Shuffle (M.I.X.) is on, the search function cannot be used.
- If there is only a single playlist/artist/album stored in the iPod, none of the search modes will function.
- If a playlist search is performed, the “iPod’s name” is displayed.
- If a song is selected in the artist search mode, further searches are by albums of that artist. To return to a search for all songs, select the “iPod name” in the playlist search mode.
- “NO SUPPORT” (monitor) or “NO SUPRT” (sub-display) is displayed when text information is not compatible with the CVA-1014R/CVA-1014RB/CVA-1014RR.



iPod™ Operation (Optional)

- It is recommended that playlists consist of no more than 255 songs. Also, if all songs in the iPod are associated with a playlist, access to each song is more efficient.
- When connected to the adapter, and search is first performed, be sure to begin the operation from step 1.



■ Searching by Playlist

- 1 Press **1/AF**.
The playlist search mode is selected.
- 2 When the monitor is open, press and hold the  **MODE (Rotary encoder)** for at least 2 seconds during playback.
The unit switches to file or folder search mode, and the playlist or song name list is displayed.
- 3 Press and hold **▶/||** for at least 2 seconds to select file search.
The playlist name is displayed.
- 4 Press **◀◀** or **▶▶** to select the desired playlist.
- 5 Press the  **MODE (Rotary encoder)**.
The selected playlist will be played back repeatedly.



To search for a song in the selected playlist

- 1 Press and hold the  **MODE (Rotary encoder)** for at least 2 seconds.
- 2 Press and hold **▶/||** for at least 2 seconds to select folder search.
- 3 Press **◀◀** or **▶▶** to select the desired song.
- 4 Press the  **MODE (Rotary encoder)**.
The selected song will be played back.



■ Searching by artist name

- 1 Press **2/PTY**.
The artist search mode is selected.
- 2 When the monitor is open, press and hold the  **MODE (Rotary encoder)** for at least 2 seconds during playback.
The unit switches to file or folder search mode, and the artist or song name list is displayed.
- 3 Press and hold **▶/||** for at least 2 seconds to select file search.
The artist name is displayed.
- 4 Press **◀◀** or **▶▶** to select the desired artist.
- 5 Press the  **MODE (Rotary encoder)**.
All songs of the selected artist will be played back repeatedly.
The search mode will be automatically changed to the album search mode, and the disc number is displayed as 3.



To search for an album of the selected artist

- 1 Press and hold the  **MODE (Rotary encoder)** for at least 2 seconds.
 - Press and hold **▶/||** for at least 2 seconds to select file search in the folder search mode.
- 2 Press **◀◀** or **▶▶** to select the desired album.
- 3 Press the  **MODE (Rotary encoder)**.
The selected album will be played back.



To search for a song in the selected album

- 1 Press and hold the  **MODE (Rotary encoder)** for at least 2 seconds.
- 2 Press and hold **▶/||** for at least 2 seconds to select folder search.
- 3 Press **◀◀** or **▶▶** to select the desired song.
- 4 Press the  **MODE (Rotary encoder)**.
The selected song will be played back.

■ Searching by album name

- 1 Press **3/P.PTY**.
The album search mode is selected.
- 2 When the monitor is open, press and hold the  **MODE (Rotary encoder)** for at least 2 seconds during playback.
The unit switches to file/folder search mode, and the album/song name list is displayed.
- 3 Press and hold **▶/||** for at least 2 seconds to select file search.
The album name is displayed.
- 4 Press **◀◀** or **▶▶** to select the desired album.
- 5 Press the  **MODE (Rotary encoder)**.
All songs of the selected album will be played back repeatedly.






To search for a song in the selected album

- 1 Press and hold the  **MODE (Rotary encoder)** for at least 2 seconds.
- 2 Press and hold **▶/||** for at least 2 seconds to select folder search.
- 3 Press **◀◀** or **▶▶** to select the desired song.
- 4 Press the  **MODE (Rotary encoder)**.
The selected song will be played back.

iPod™ Operation (Optional)

■ Searching by song name

If a song is selected using the playlist/artist/album search mode, new song searches will only display songs from the current playlist/artist/album. To search all songs in the iPod, select the "iPod name" in the playlist search mode, and then perform the search.


- 1 When the monitor is open, press and hold the  **MODE (Rotary encoder)** for at least 2 seconds during playback.
The unit switches to file/folder search mode.
- 2 Press and hold  for at least 2 seconds to select folder search.
- 3 Press  or  to select the desired song.
- 4 Press the  **MODE (Rotary encoder)**.
The selected song will be played back.

Random Play Shuffle (M.I.X.)

The Shuffle function of the iPod is displayed as M.I.X. on the CVA-1014R/CVA-1014RB/CVA-1014RR.

Shuffle Songs (M.I.X.):

All songs in the iPod are played back in random sequence. If a song has been selected in the playlist/artist search mode before selecting Shuffle song, only the songs of the playlist/artist/album are played back randomly.


- 1 Press **FUNC**.
The FUNC indicator lights.
- 2 Within 5 seconds, press 4  in the play or pause mode.
The songs will be played back in random sequence.
M.I.X. → (off) → M.I.X.
(Shuffle Songs) (Shuffle Songs)
- 3 To cancel M.I.X. play, select (off) with the above procedure.

NOTE

For details of the search mode, refer to "Searching for a desired Song" (page 29).

Repeat Play

- 1 Press **FUNC**.
The FUNC indicator lights.



- 2 Within 5 seconds, press 5 .
The songs will be played back repeatedly.
REPEAT → (off) → REPEAT
(Repeat One) (Repeat One)

Repeat One:


A single song is repeatedly played back.

- 3 To cancel repeat play, select (off) with the above procedure.

NOTE

During repeat playback, no other songs are selectable by pressing or touching  or .

Displaying the Text

- 1 Press **TITLE** .
The mode will change every time the button is pressed.

iPod mode:

The monitor is open (displayed in the monitor).

TAG (TRACK/ALBUM/ARTIST NAME) DISPLAY
→ "----*1/iPod" DISPLAY (fixed display) →
FRAME DISPLAY*1 → TITLE DISPLAY*3 → TAG
(TRACK/ALBUM/ARTIST NAME) DISPLAY

The monitor is closed (displayed in sub-display).

"01" (fixed display)/ERAPSED TIME DISPLAY →
CLOCK DISPLAY → TAG (TRACK/ALBUM/
ARTIST NAME) DISPLAY → "----"*1 DISPLAY
(fixed display) → "iPod" DISPLAY (fixed display)
→ FRAME DISPLAY*2 → TITLE DISPLAY*3 →
"01" (fixed display)/ERAPSED TIME DISPLAY

*1 "ROOT" is displayed when the file number is shown as 01 (displayed "F-01" in the monitor).


*2 Though the numeric value displayed differs from the actual sampling or bit rate (depending on head unit), this is not a malfunction.

*3 The title cannot be input in the iPod mode. The monitor display will be blank or the sub-display will show "-----".

NOTES

- Only alphanumeric characters (ASCII) can be displayed.
- When the artist name, album name or song name is set on iTunes, and the amount of characters is increased, songs may not be played back when connected to the adapter. Therefore, a maximum of 250 characters is recommended. The maximum number of characters for the head unit is 64 (64 byte).
- Some characters may not be correctly displayed.
- "NO SUPPORT" (monitor) or "NO SUPRT" (sub-display) is displayed when text information is not compatible with the CVA-1014R/CVA-1014RB/CVA-1014RR.

MobileHub™ Link Operation (Optional)

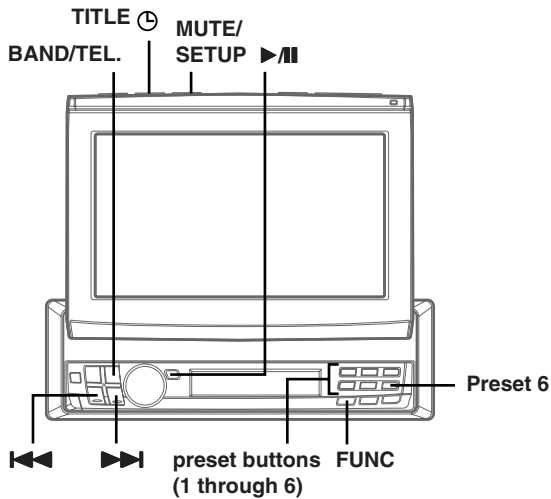

About MobileHub™ Link

Connect a separately sold Junction Box and a portable telephone (available from Nokia) to control the incoming and outgoing calls of the portable telephone.

Functions that can be operated from CVA-1014R/CVA-1014RB/CVA-1014RR.

Incoming Calls	Outgoing Calls	Short Messages
Automatically receive	Call out (Speed dial)	Display receiving history
Manually receive	Call out (phone book)	Display short message
Missed call announcement (information icon)	Call out (dialled)	Mail arrival announcement (information icon)s
	Call out (received)	
	Call out (missed call)	

CAUTION

- Even with hands-free operation, a driver can be distracted during telephone operation or receiving a call. For the sake of safety, drivers are requested to refrain from operating the telephone while driving.
- For the sake of safety, operations other than incoming calls and Speed-Dial outgoing calls cannot be used.

NOTES

- If a portable telephone is connected, its address book, incoming and outgoing history and short message history are downloaded to the Junction Box.
- Please refer to the instruction manual of the Junction BOX.

Telephone Mode On and Off

- 1 Press and hold **BAND/TEL.** for at least 2 seconds.
See relevant pages for each item.

NOTES

- When a portable telephone is not connected, "NO PHONE" is displayed for at least 2 seconds, then the mode returns to the original source mode.
- When the portable telephone is taken off the Junction BOX during an incoming or outgoing call, or during a hands-free call, the call will be treated as an ordinary one by the portable telephone.
- When there is an incoming call while the power of CVA-1014R/CVA-1014RB/CVA-1014RR is OFF, the power of CVA-1014R/CVA-1014RB/CVA-1014RR will turn ON automatically for an ordinary call by the portable telephone, but not for a hands-free call.
- Even if the power of the portable telephone is OFF, when CVA-1014R/CVA-1014RB/CVA-1014RR is set to the telephone mode, the power of the portable telephone will be turned ON.
- Even if the ACC power of the vehicle is turned OFF (even if the engine is stopped) during a hands-free call, the call is not disconnected, and an ordinary call by the portable telephone is possible.
- If there is an incoming call during operation (except an outgoing call or talking), operation mode will end and switch to the incoming or talking mode.
- An outgoing call from a portable telephone is also possible. However, you cannot perform different operations at the same time from a portable telephone and CVA-1014R/CVA-1014RB/CVA-1014RR as malfunction can result.
- With a Junction BOX connected, outgoing and incoming history will also be recorded in the portable telephone.
- While telephoning, DEFEAT is set to ON. When the call has finished, the unit returns to the setting which you previously set.
- The telephone volume can be adjusted from the CVA-1014R/CVA-1014RB/CVA-1014RR. The volume you set during the call is memorized, and is automatically applied again on the next call.
- If you press **TITLE** (with a circle and cross symbol) in the display for selecting the calling method, the Network Operator display will be shown. Press **TITLE** (with a circle and cross symbol) again to return to the previous display.
- During a call, you can send dial tone signals 1 to 6 using **preset buttons 1 through 6**, and dial tone signals 7 to 9, 0, * and # by pressing **FUNC**, and then **preset buttons 1 through 6**.

Incoming Calls

- 1 Press **▶/||** to receive an incoming call.
- 2 Press and hold **BAND/TEL.** for at least 2 seconds to finish a call.
The telephone mode will end and return to the original source mode.

NOTES

- When the Automatic Calling mode is on, you can talk after 3 seconds of receiving the incoming call.
- To switch between automatic calling and manual calling, refer to "Setting the Call Receiving Method" (page 34). The initial setting at the factory is automatic calling mode.
- Press and hold **BAND/TEL.** for at least 2 seconds during an incoming call to disconnect it.
- You can call back by pressing **▶/||** within 5 seconds after finishing a call.

MobileHub™ Link Operation (Optional)

Calling

The lists for Speed Dial, Phone Book, outgoing history, incoming history and incoming missed call history can be displayed. You can place a call by these lists.

■ Calling by using the Speed Dial

You can place a call by retrieving one of the telephone numbers registered in No. 1 to 9 of the address book.

- 1 Press and hold **BAND/TEL.** for at least 2 seconds to display "SPEED DIAL".
- 2 Press and hold (for at least 2 seconds) a **preset button (1 through 6)** to place a call. By pressing **FUNC**, and then pressing a **preset button (1 through 3)** for at least 2 seconds, you can place a call to the number registered in 7 to 9.

NOTE

*You can place a call by pressing ►/|| after momentarily pressing the **preset button (1 through 6)** of the number you wish to call.*

- 3 Press and hold **BAND/TEL.** for at least 2 seconds to end the call. The telephone mode will end and return to the original source mode.

■ Calling by the Phone book

You can call up the Phone book registered in the portable telephone to call from.

- 1 Press and hold **BAND/TEL.** for at least 2 seconds.
- 2 Press **BAND/TEL.** to select "PHONE BOOK" (on the monitor) or "PHONE Bk"(on the sub-display). The names in the phone book are displayed in alphabetical order.
- 3 Press ◀◀ or ▶▶ to select the addressee from the phone book. To skip alphabetically to the next (or previous) set of name, press and hold ◀◀ or ▶▶ for at least 2 seconds.

- 4 Press ►/|| to place a call when the monitor is closed. Or press ►/|| twice when the monitor is open. At the first press, the name and telephone number of the addressee is displayed. Then the second press places the call.

- 5 Press and hold **BAND/TEL.** for at least 2 seconds to end the call. The telephone mode is cancelled and returns to the original source mode.

■ Calling by the outgoing history

You can place a call to any of the last 999 dialled calls recorded in memory.

- 1 Press and hold **BAND/TEL.** for at least 2 seconds.
- 2 Press **BAND/TEL.** again repeatedly to select "DIALED."
- 3 Press ◀◀ or ▶▶ to select the addressee from the outgoing history. Press and hold ◀◀ or ▶▶ to change the addressee continuously.
- 4 Press ►/|| to place a call when the monitor is closed. Or press ►/|| twice when the monitor is open. At the first press, the name and telephone number of the addressee is displayed. Then the second press places the call.
- 5 Press and hold **BAND/TEL.** for at least 2 seconds to end the call. The telephone mode will end and return to the original source mode.

NOTE

You cannot use this function if there is not an outgoing history on the unit.

MobileHub™ Link Operation (Optional)

■ Calling by the incoming history

You can place a call to any of the last 999 received calls recorded in memory.

- 1 Press and hold **BAND/TEL.** for at least 2 seconds.
- 2 Press **BAND/TEL.** again repeatedly to select "RECEIVED."
- 3 Press **◀◀** or **▶▶** to select the addressee from the incoming history. Press and hold **◀◀** or **▶▶** to change the addressee continuously.
- 4 Press **▶/||** to place a call when the monitor is closed. Or press **▶/||** twice when the monitor is open. At the first press, the name and telephone number of the addressee is displayed. Then the second press places the call.
- 5 Press and hold **BAND/TEL.** for at least 2 seconds to end the call. The telephone mode will end and return to the original source mode.

NOTE

You cannot use this function if there is not an incoming history on the unit.

■ Calling by the incoming missed call history

- 1 Press and hold **BAND/TEL.** for at least 2 seconds.
- 2 Press **BAND/TEL.** again repeatedly to select "MISSED."
- 3 Press **◀◀** or **▶▶** to select the addressee from the absent incoming history. Press and hold **◀◀** or **▶▶** to change the addressee continuously.
- 4 Press **▶/||** to place a call when the monitor is closed. Or press **▶/||** twice when the monitor is open. At the first press, the name and telephone number of the addressee is displayed. Then the second press places the call.
- 5 Press and hold **BAND/TEL.** for at least 2 seconds to end the call. The telephone mode will end and return to the original source mode.

NOTE

You cannot use this function if there is not an incoming missed call history on the unit.

SMS (Short Message Service) Operation

You can receive short messages and display the contents.


- 1 All received messages are indicated by an icon (on the monitor) or "NEW MSG" (on the sub-display). When the monitor is open, press and hold **BAND/TEL.** for at least 2 seconds.
- 2 Press **BAND/TEL.** again repeatedly until "SMS INBOX" is indicated and the list of received message is displayed.
- 3 Press **◀◀** or **▶▶** to select a message and then **▶/||** to display the message content. Press **▶/||** again to return to the list.
- 4 Press and hold **BAND/TEL.** for at least 2 seconds to return to the original source mode.

Setting the Call Receiving Method

Connecting to the Junction Box is necessary to set the call receiving method.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 6** to activate the OTHER setting mode. Press **preset 6** again to select TEL RECEIVE.
- 3 Press **◀◀** or **▶▶** to select AUTO or MANUAL.
AUTO:
The incoming call is automatically accepted after 3 seconds.
MANUAL:
The incoming call is manually accepted by pressing **▶/||**.
For any other settings, press **preset 6** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Other Useful Features

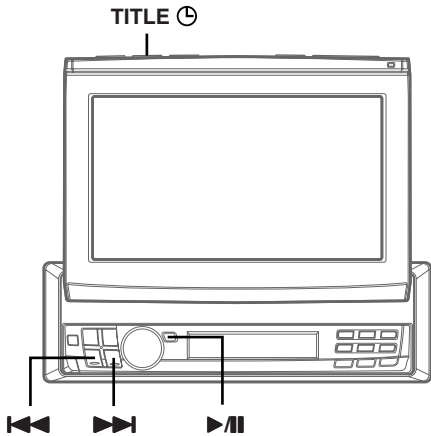

Displaying the Title/Text

It is possible to display the disc/station title if the title has been previously inputted. For details, see "Tiling Discs/Stations" (page 36). Text information, such as the disc name and the track name, will be displayed if playing a CD text compatible disc. It is also possible to display the folder name, the file name, and the ID3 tag, etc. while playing MP3 files.

- 1 Press **TITLE** . The mode will change every time the button is pressed.

About "Title" and "Text"

Title: Lets you input characters for the unit to display. You can enter the name of a Disc/Station as a title. Some characters may not be displayed correctly.

Text: Lets you display characters of a CD text disc.




CD text disc mark indicates that the CD has text data.

However, some characters may not be displayed correctly.


Radio mode:
The monitor is open.
(displayed in the monitor)

TITLE DISPLAY


Radio mode:
The monitor is closed.
(displayed in the sub-display)

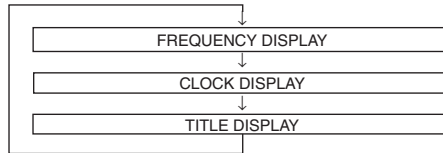

 
CD/Video CD mode:
The monitor is open.
(displayed in the monitor)
(Text is displayed for the CVA-1014R/CVA-1014RB/CVA-1014RR when a compatible changer with CD text is connected.)




CD/Video CD mode:
The monitor is closed
(displayed in the sub-display).

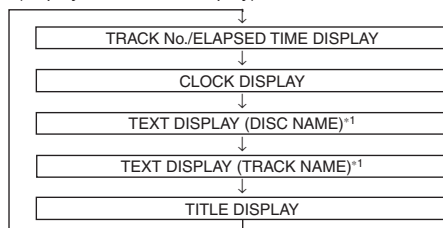

MP3 mode:
The monitor is open.
(displayed in the monitor)
(MP3 files can be played back with the CVA-1014R/CVA-1014RB/CVA-1014RR if an MP3 compatible changer is connected.)

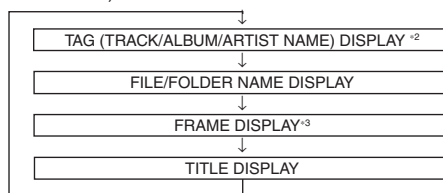

MP3 mode:
The monitor is closed.
(displayed in the sub-display)

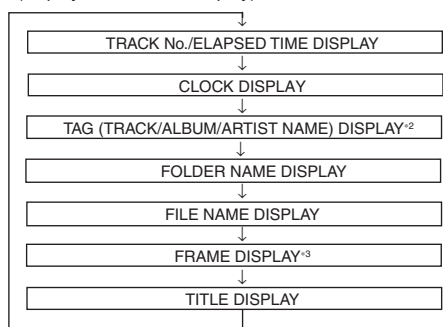

*1 Displayed during playback of a disc with CD Text. When the CD contains no Text data, the monitor display will be blank or the sub-display will show "-----"

Other Useful Features

- *2 If an MP3 file contains ID3 tag information, all the ID3 tag information is displayed (e.g., track name, artist name, and album name). All other tag data is ignored.
"NO TAG" will be displayed if an MP3 file contains no ID3 tag information.
- *3 The recording sampling rate and bit rate of the MP3 file are displayed.

NOTES

- Some characters may not be displayed correctly with this device, depending on the character type.
- The CD changer must also be CD Text compatible for the Text information to be displayed.
- When the Scroll Setting (refer to page 42) is set to "MANUAL," press and hold **TITLE** \ominus for at least 2 seconds to scroll the Text information, etc., only once.
- "NO SUPPORT" is displayed when the desired text information cannot be displayed on this unit.
- If the title was not previously input, the monitor display will be blank or the sub-display will show "-----"

Titling Discs/Stations

It is possible to title your favourite discs or radio stations.

NOTE

The Parking Brake must be engaged to access the Title display mode screen. You cannot title discs/stations while you are driving. If you attempt to drive while titling, the display will show the warning "CAN'T OPERATE WHILE DRIVING" for 5 seconds and then the unit will return to normal mode.

- 1 When the monitor is open, press **TITLE** \ominus and select the title display mode.
For details, see "Displaying the Title/Text" (page 35).
- 2 Press and hold **TITLE** \ominus for at least 2 seconds. The first character will blink.
- 3 Press **◀◀** or **▶▶** to select the desired letter/numeral/symbol available for naming.
- 4 Press **▶/||** to store the first character. The first character will stop blinking and the display will automatically advance to the next character. When that character begins to blink, you may choose the next letter or symbol of your title.

- 5 Repeat the steps 3 and 4 above to complete the titling. Pressing **▶/||** after entering the 8th character, automatically stores the title into memory.

When entering a title of less than 8 characters (for example, 3 character title):
After entering 3 characters to complete your title, the 4th character space will be blinking. Go to step 6 to complete the title.

- 6 Press **TITLE** \ominus to record the title.

NOTES

- If you cancel while entering a title, selected characters are not written.
- You can enter 24 radio station titles on this unit. If you try to store beyond the limit, the display will show "MEMORY FULL" At this point, no more titles can be stored.
- The Changer memory capacity varies depending upon the model being used.
- When you want to erase a title, enter a space into all spaces.
- The operations described in steps 3 to 5 must be made within 10 seconds. The input mode will be cancelled if no action is taken for over 10 seconds.
- Removing power from the unit may delete station titles. Use caution when manipulating the power cord.

Erasing Disc Title/Station Title

- 1 When the monitor display is open, press **TITLE** \ominus to select the disc/station titling mode. Then, press and hold **TITLE** \ominus for at least 2 seconds.
- 2 Within 10 seconds, press and hold **▶/||** for at least 2 seconds to activate the title scanning mode. The title in the display will blink.
- 3 Press **◀◀** or **▶▶** repeatedly until the title you want to erase is displayed.
- 4 Press **▶/||** to display "DELETE TITLE."
Press **▶/||** again within 10 seconds to erase the selected title.
- 5 Press **TITLE** \ominus to cancel the title erasing mode.

NOTES



- You cannot erase a CD-TEXT.
- When no title is input, "NO DATA" is displayed and then the unit returns to the disc/station titling mode.

Other Useful Features

- 4 Press **bass engine** to return to the normal mode.

NOTES

- If no buttons are pressed within 10 seconds, the Bass control setting will be turned off automatically.
- Depending on the type of external audio processors connected to the unit, you may not be able to set some settings.
- The settings of the Bass will be individually memorized for each source (FM, MW, LW and CD) until the setting is changed. Depending on the connected devices, some functions and display indications do not work.

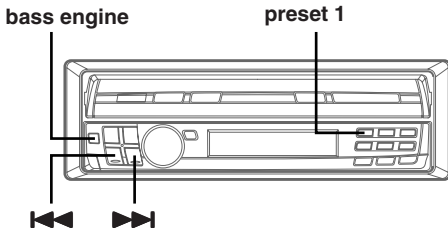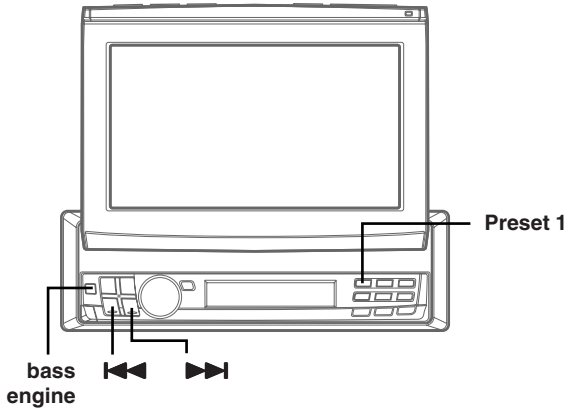

Setting the Bass Control

You can change the Bass Frequency emphasis to create your own tonal preference.

- 1 When the monitor is open, press **bass engine**. BASS ENGINE mode is displayed in the monitor.
- 2 Press **preset 1** to select the desired mode.
- 3 Press the **◀◀** or **▶▶** to adjust the selected mode.

Bass Level : -7~+7

You can emphasize or weaken the bass frequency.

Bass centre frequency :

→60Hz ↔ 70Hz ↔ 80Hz ↔ 90Hz ↔ 100Hz ↔ 130Hz ↔ 150Hz ↔ 200Hz←

Emphasizes the displayed Bass frequency ranges.

Bass Band Width (Q-Factor):

→ WIDE1 ↔ WIDE2 ↔ WIDE3 ↔ WIDE4 ←
(Narrow)←.....→ (Wide)

Changes the displayed frequency's band width to wide or narrow.

Operation with the monitor closed

You can set the Bass control with the monitor closed.


- 1 Press the **bass engine**.
- 2 Press **preset 1**. BASS is displayed for 2 seconds in the sub-display, then the value of BASS Level blinks.
- 3 Each time you press **preset 1**, the blinking shifts.

Example of sub-display



- 4 Press the **◀◀** or **▶▶** to adjust the selected mode.

Other Useful Features

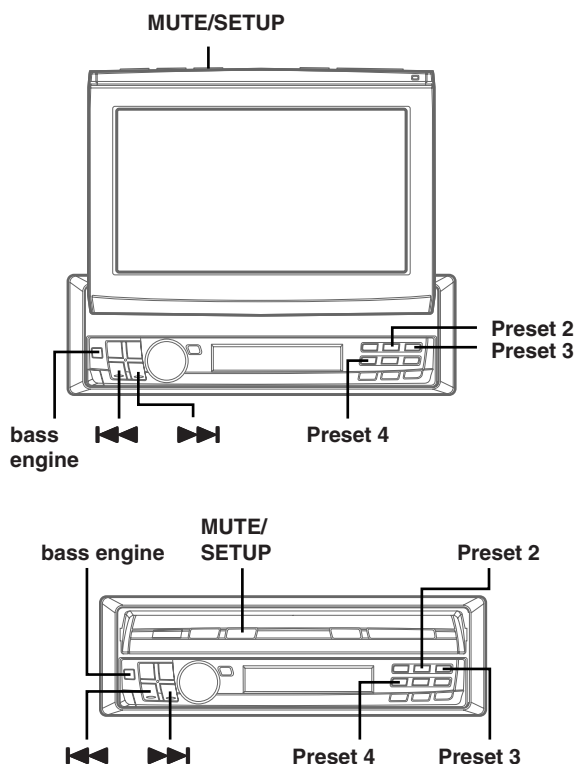

Setting the Treble Control

You can change the Treble Frequency emphasis to create your own tonal preference.

- 1 When the monitor is open, press **bass engine**.
BASS ENGINE mode is displayed in the monitor.
- 2 Press **preset 2** to select the desired mode.
- 3 Press **◀◀** or **▶▶** to adjust the selected mode.
Treble Level : -7~+7
You can emphasize the treble frequency.
Treble centre frequency:
→10.0kHz ↔ 12.5kHz ↔ 15.0kHz ↔ 17.5kHz←
Emphasizes the displayed Treble frequency ranges.
- 4 Press **bass engine** return to the normal mode.

NOTES

- If no buttons are pressed within 10 seconds, the Treble control setting will be turned off automatically.
- Depending on the type of external audio processors connected to the unit, you may not be able to set some settings.
- The settings of the Treble will be individually memorized for each source (FM, MW, LW and CD) until the setting is changed. Depending on the connected devices, some functions and display indications do not work.

Operation with the monitor closed

You can set the Treble control with the monitor closed.

- 1 Press **bass engine**.
- 2 Press **preset 2**. TREBLE is displayed for 2 seconds in the sub-display, then the value of TREBLE Level blinks.
- 3 Each time you press **preset 2**, the blinking shifts.

Example of sub-display



- 4 Press **◀◀** or **▶▶** to adjust the selected mode.

Other Useful Features

Switching Phase

Before switching Phase, select the Subwoofer ON (refer to "Subwoofer Control On and Off" on page 47).

- 1 Press **bass engine** turn on the BASS ENGINE mode.
- 2 Press **preset 3** to select Subwoofer Phase mode.
- 3 Press **◀◀** or **▶▶** to switch the phase of the subwoofer output.
When the monitor is open: displayed in the monitor
0° ↔ 180°
When the monitor is closed: displayed in the sub-display
NOR ↔ REV
- 4 Press **bass engine** to return to the normal mode.

NOTE

If no buttons are pressed within 10 seconds, the Switching Phase setting will be off automatically.

Turning Loudness On and Off

Loudness introduces a special low- and high-frequency emphasis at low listening levels. This compensates for the ear's decreased sensitivity to bass and treble sound.

- 1 Press **bass engine** to turn on the BASS ENGINE mode.
- 2 Press **preset 4** to select Loudness mode.
- 3 Press **◀◀** or **▶▶** to set LOUD to ON or OFF.
- 4 Press **bass engine** to return to normal mode.

NOTES

- *If no buttons are pressed within 10 seconds, the Loudness setting will be off automatically.*
- *When connecting an external audio processor to the unit, you cannot use this function.*

Turning Defeat Mode On and Off

When the defeat mode is on, the processor circuits are bypassed and the audio signals go directly to the line output.


- 1 Press and hold **bass engine** for at least 2 seconds. Each press toggles the DEFEAT setting between ON and OFF.

In the DEFEAT ON mode, any current adjustments are returned to their default settings as shown below.


DEFAULT:

Bass Level	: ± 0
Bass Centre Freq.	: 80 Hz
Bass Band Width	: WIDE1
Treble Level	: ± 0
Treble Centre Freq.	: 10.0 kHz
LOUD	: OFF

Other Useful Features

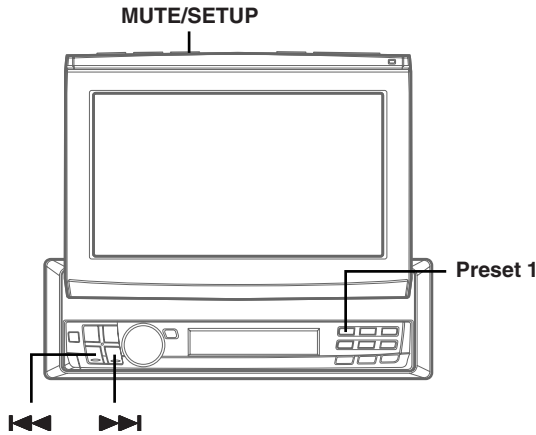

Example of SETUP. mode Screen

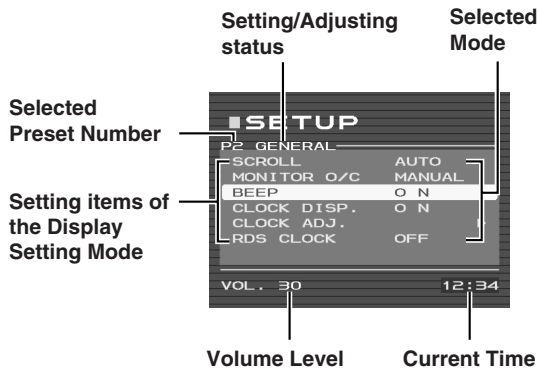

Illumination Control

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 1** to activate the DISPLAY setting mode. Press **preset 1** again to select DIMMER.
- 3 Press **◀▶** to set the Illumination control.

AUTO: In the Auto Dimmer mode, the backlighting of the monitor is dimmed when the instrument panel lighting of the vehicle is turned on (the dimmer input lead must be connected.)

ON: Deactivate the Auto Dimmer mode and keep the backlighting low.

OFF: Keep the backlighting of the monitor bright.

For any other settings, press **preset 1** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Adjusting Brightness of Picture

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 1** to activate the DISPLAY setting mode. Press **preset 1** again to select BRIGHT.
- 3 Press **◀▶** to make the picture darker or brighter. You can adjust the brightness between MIN (-16) and MAX (+16). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively.

For any other settings, press **preset 1** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTE

The brightness settings for the video sources (AUX/DVD/NAV.) will be individually memorized.

Adjusting Colour of Picture

Colour adjustment can be made only to video sources (DVD, Navigation System, etc.). Colour adjustment cannot be made if a Navigation system with the RGB feature is connected.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 1** to activate the DISPLAY setting mode. Press **preset 1** again to select COLOR.
- 3 Press **◀▶** to adjust the color between MIN (-16) and MAX (+16) until you get your desired colour. When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively.

For any other settings, press **preset 1** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTE

The Colour setting for the video sources (AUX/DVD/NAV.) will be individually memorized.

Other Useful Features

Adjusting Tint of Picture

Tint adjustment can be made only to video sources (DVD, Navigation system, etc.). Tint adjustment cannot be made if a Navigation system with the RGB feature is connected.

 
- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 1** to activate the DISPLAY setting mode. Press **preset 1** again to select TINT.
- 3 Press **◀◀** or **▶▶** to adjust the Tint (between -16 and +16). When it reaches the minimum or maximum point, display shows "R MAX" or "G MAX" respectively.
For any other settings, press **preset 1** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTE

The TINT setting for the video sources (AUX/DVD/NAV.) will be individually memorized.

Setting the Background Screen Colour (DAY/NIGHT)

The background colour can be set differently for daytime use (DIMMER OFF) and nighttime use (DIMMER ON). (For details of Dimmer ON/OFF, refer to "Illumination Control" on page 40.)


- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 1** to activate the DISPLAY setting mode. Press **preset 1** again to select B.GND(DAY) or B.GND(NIGHT).
- 3 Press **◀◀** or **▶▶** to select the colour.

For any other settings, press **preset 1** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Setting the Automatic Background Screen Colour

When the Auto Background Screen Colour is set to ON, turning the ignition key on and off changes the background screen colour to blue, green or grey.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 1** to activate the DISPLAY setting mode. Press **preset 1** again to select AUTO B.GND.
- 3 Press **◀◀** or **▶▶** to set ON or OFF.
For any other settings, press **preset 1** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

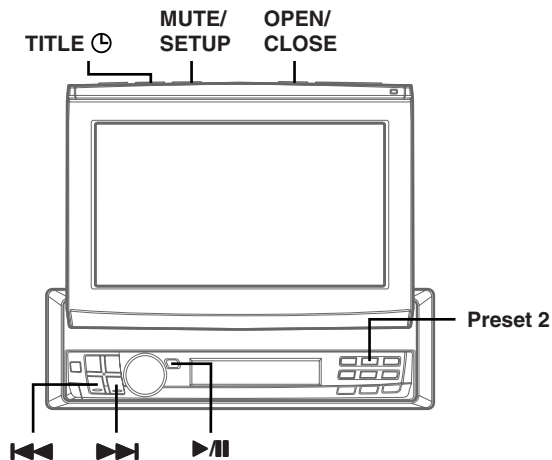Other Useful Features



Scroll Setting

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds.
- 2 Press **preset 2** to select GENERAL Setting mode. Press **preset 2** to select SCROLL.
- 3 Press **◀◀** or **▶▶** and select AUTO or MANUAL.
 - AUTO: The display of CD text, title, etc., is scrolled continuously.
 - MANUAL: The display is scrolled only when a disc is loaded or when a track is changed, etc.

For any other settings, press **preset 2** or another preset button.
- 4 When the setting is completed, press **MUTE/SETUP** to return to normal mode.

Setting Automatic Opening/ Closing of Monitor

You can set the monitor to open or close automatically or manually.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 2** to activate the GENERAL setting mode. Press **preset 2** again to select MONITOR O/C.
- 3 Press **◀◀** or **▶▶** to set the Auto Opening mode.

→ FULL ↔ CLOSE ↔ MANUAL ←

FULL:

The monitor automatically opens or closes when the ignition key is turned to ACC/ON or OFF.

CLOSE:

The monitor automatically closes when the ignition key is turned to OFF. The monitor opens manually when **OPEN/CLOSE** is pressed.

MANUAL:

Press **OPEN/CLOSE** to manually open or close the monitor.

For any other settings, press **preset 2** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Other Useful Features

Turning Sound Guide Function On or Off

The Sound Guide function will give audible feedback with a beep sound when a button on the unit is pressed to acknowledge the receipt of the signal from the button.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 2** to activate the GENERAL setting mode. Press **preset 2** again to select BEEP.
- 3 Press **◀◀** or **▶▶** to select ON or OFF.

ON: The unit beeps when a button is pressed.
OFF: No beep sound.


For any other settings, press **preset 2** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Setting the Clock Display

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 2** to select GENERAL setting mode. Press **preset 2** again to select CLOCK DISP.
- 3 Press **◀◀** or **▶▶** to turn ON or OFF the clock display on the monitor respectively.

For any other settings, press **preset 2** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Displaying Time

- 1 When the monitor is closed, press **TITLE**  repeatedly until the clock time is displayed in the sub-display.

NOTES

- Selecting any function while in the clock priority mode will interrupt the time display momentarily. The function selected will be displayed for about 5 seconds before the time returns to the display.
- The clock time is not shown on both the monitor and the sub-display simultaneously.

Setting Time

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 2** to activate GENERAL setting mode. Press **preset 2** again to select CLOCK ADJ., then press **▶/||** or **◀◀/▶▶** to appear the clock adjusting menu.
- 3 Press **preset 2** to select HOUR. Then press **◀◀** or **▶▶** to adjust the hour.
- 4 Press **preset 2** to select MINUTE. Then press **◀◀** or **▶▶** to adjust the minutes.

To quickly set the time to the nearest hour, press **preset 2** to select MINUTE ZERO, then press **▶/||** or **◀◀/▶▶**.
If the minute is ":30" or under, the hour is the current number. If the minute is more than ":30", or if you set the minute to "00", the hour is moved up.


To return to the previous mode, press **preset 2** to select RETURN, then press **▶/||** or **◀◀/▶▶**.
- 5 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Automatic Time Adjustment

Time can be automatically adjusted via RDS.

- 1 Press and hold **MUTE/SETUP** for at least 2 seconds.
- 2 Press **preset 2** to select GENERAL setting mode. Press **preset 2** again to select RDS CLOCK.
- 3 Press **◀◀** or **▶▶** to select ON or OFF.
- 4 When the setting is completed, press **MUTE/SETUP** to return to normal mode.

Other Useful Features

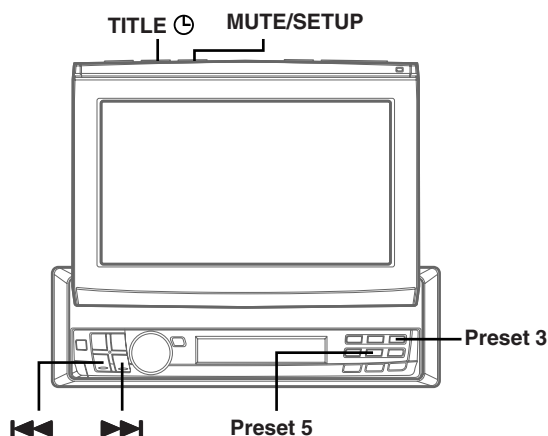

Setting the External Expansion Box

When using the optional expansion box (KCE-104V), you can use this function.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 5** to activate the SYSTEM setting mode. Press **preset 5** again to select EXPAND BOX.
- 3 Press **◀◀** or **▶▶** to set KCE-104V/OFF.
 KCE-104V: When connecting the expansion box KCE-104V (not supplied).
 OFF: When not connecting the expansion box KCE-104V (not supplied).
 (Make sure that KCE-104V is selected when the KCE-104V is connected.)
 For any other settings, press **preset 5** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTE

The CVA-1014R/CVA-1014RB/CVA-1014RR is not compatible with the KCE-103V.

Rear Monitor Setting

The optional expansion box (KCE-104V) must be connected. If AUX/NAV. is turned ON (as shown in "Setting the External Input" on page 45), and a rear-seat monitor and navigation system are connected to the CVA-1014R/CVA-1014RB/CVA-1014RR, the picture/sound for the rear-seat monitor can be selected from the CVA-1014R/CVA-1014RB/CVA-1014RR.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 3** to activate the AUX setting mode. Press **preset 3** again to select MONITOR-1 OUT/MONITOR-2 OUT.
- 3 Press **◀◀** or **▶▶** to select the mode to display on the rear monitor.

AUX-1/AUX-2/AUX-3* :

The picture/sound of the device connected to Terminal AUX will be played on the rear-seat monitor.

* AUX NAME set in the "Setting the External Input" (page 45) will be displayed.

NAV. :

The navigation screen will be displayed on the rear-seat monitor and the voice guidance will be produced if the navigation system is connected.

SPE.ANA :

The SPE.ANA image is displayed when set to ON in "Displaying Spectrum Analyzer" (page 46).

OFF :

AUX OUT mode is cancelled.

For any other settings, press **preset 3** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTE

If a DVD player or DVD changer is connected to the AUX 1, AUX 2 or AUX 3 terminal, the DVD picture appears by performing steps 1 and 2 of "Simultaneous Operation" on page 49. Then, perform steps 1 to 4 on this page so the DVD picture and sound are output.

Other Useful Features

Setting the External Input

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 3** to select the AUX setting mode. Press **preset 3** to select the desired external input, AUX SIG., AUX IN or NAV.IN.
 - If the expansion box KCE-104V (not supplied) is connected and the unit is set to Expand Box KCE-104V (ON) (page 44), you can select AUX1/AUX2/AUX3/NAV.IN.
- 3 Press **preset 3** to set AUX IN, AUX NAME, AUX SIG, SYNC MODE or NAV.IN, and press **◀◀** or **▶▶** to select the desired setting.

When the expansion box is not connected

AUX SIG.: NTSC ↔ PAL
AUX IN: ON ↔ OFF
NAV.IN: ON ↔ OFF

When the expansion box is connected

AUX IN (AUX1/2): ON ↔ OFF
AUX IN (AUX3):

AUX NAME (example of when AUX1 is set):



AUX SIG. (AUX1/2/3): NTSC ↔ PAL

SYNC MODE:
(adjusting the Visual Effect*2 display)

Adjust when the Visual Effect display with the KCE-104V connected is not clear. The Visual Effect display can be distorted depending on the input picture from external devices.

NAV.IN: ON ↔ OFF

- *1 Setting for rear camera:
With CAMERA selected in the AUX3 setting, the picture from the rear camera is displayed. Connect your vehicle's reverse lamp to the KCE-104V, to view the rear camera's image whenever the car is in Reverse gear (you can still listen to the currently selected source).

- *2 Setting the Visual Effect mode:
The Visual Effect mode can be set when a video source (e.g. DVD) is selected in AUX1/AUX2/AUX3.
- 1 Press and hold **TITLE**  for at least 2 seconds. Each press toggles the setting between ON and OFF.
 - 2 When Visual Effect is set to ON, press **TITLE**  to select the desired mode.

MODE3 can be selected when 2 rear monitors are connected and the Rear monitor setting is ON (page 44).


NOTES

- When AUX IN*3 (AUX1 IN*3,*4, AUX2 IN*4, AUX3 IN) and NAV.IN are set to ON, the EXTERNAL INPUT is displayed during the source and SIMUL switching.
 - *3 When a DVD player or DVD changer is connected, DVD player or DVD changer is displayed in the display.
 - *4 When more than two DVD players or DVD changers are connected, DVD player is displayed in AUX1 IN, and DVD changer is displayed in AUX2 IN.
- AUX SIG setting:
When setting PAL, you cannot adjust the TINT. In the Navigation mode, the unit automatically switches to NTSC.

For any other settings, press **preset 3** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Other Useful Features

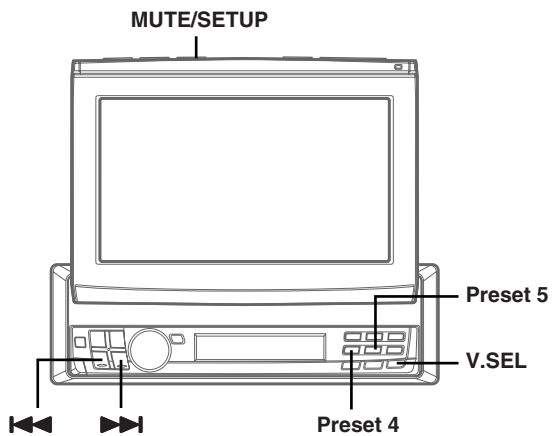

Setting Front/Rear/Subwoofer Preout of the External Expansion Box

You can use Front/Rear/Subwoofer Preout with the optional expansion box (KCE-104V). Set to ON to use KCE-104V preout.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 5** to activate the SYSTEM setting mode. Press **preset 5** again to select EXPAND PREOUT.
- 3 Press **◀◀** or **▶▶** to select ON or OFF.

Select ON to use the preout (Front/Rear/Subwoofer) of the optional expansion box (KCE-104V).

For any other settings, press **preset 5** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

CAUTION

Make sure that the preout of the external expansion box is set to OFF when using the CVA-1014R/CVA-1014RB/CVA-1014RR internal amplifier. Note that if the preout is set to ON, the volume level will be too high.

Displaying Spectrum Analyzer

When using the optional expansion box (KCE-104V), you can use this function.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 5** to activate the SYSTEM setting mode. Press **preset 5** again to select SPE.ANA.
- 3 Press **◀◀** or **▶▶** to select ON or OFF.

Set to ON, then press **V.SEL** to select the Spectrum Analyzer display (refer to "Simultaneous Operation" on page 49).

For any other settings, press **preset 5** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTE

When an external Audio Processor is connected, Spectrum Analyzer is displayed only in FM/MW/LW mode.

Other Useful Features

Switching the Tuner Mode

The CVA-1014R/CVA-1014RB/CVA-1014RR incorporates the MAX TUNE PRO for the highest quality tuner audio. Moreover, you can choose between three settings to suit your personal preferences.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 4** to activate the RADIO setting mode. Press **preset 4** again to select FM CONDITION.
- 3 Press **◀◀** or **▶▶** to select the desired setting.
NORMAL: Standard setting
HI-FI: Sound quality priority setting
STABLE: Noiseless priority setting
For any other settings, press **preset 4** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Adjusting Source Signal Levels

If the difference in volume level between FM radio and other sources is too great, adjust the FM signal level as follows.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 4** to select the RADIO setting mode. Press **preset 4** again to select FM LEVEL.
- 3 Press **◀◀** or **▶▶** to select the FM signal level HIGH or LOW to make the signal levels between the FM band and other sources closer.
For any other settings, press **preset 4** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.


Subwoofer Control On and Off

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds.
- 2 Press **preset 5** to set to the SYSTEM setting mode. Press **preset 5** again to select the SUBWOOFER mode.
- 3 Press **◀◀** or **▶▶** to select Subwoofer ON or OFF.
For any other settings, press **preset 5** or another preset button.
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTES

- Initial mode is "SUBWOOFER ON."
- Set to "SUBWOOFER OFF" unless the subwoofer is used.
- When the subwoofer is turned on, the subwoofer output level can be adjusted. For more details, refer to the Adjusting Volume/Balance/Fader (page 8).

Other Useful Features

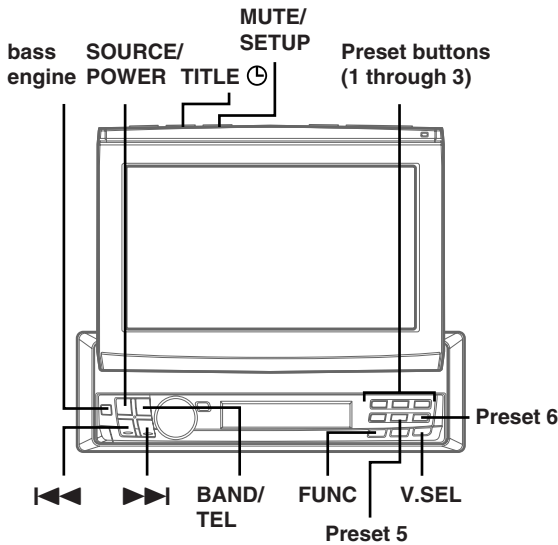

Turning Mute Mode On and Off

If an Alpine Ai-NET Interrupt Box (NVE-K200) is connected to the CVA-1014R/CVA-1014RB/CVA-1014RR, an Auxiliary Source will be allowed to interrupt the current audio source. For example, you can listen to the voice guidance of your navigation system when it occurs even while you are playing a CD or MD. The CD/MD player will be automatically muted during voice guidance. For further details, please refer to the manual for NVE-K200. The CVA-1014R/CVA-1014RB/CVA-1014RR can be used in combination with the add-on Universal Hands-free Kit (KPA-100R, KPA-105R).

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 5** to set to the SYSTEM setting mode. Press **preset 5** again to select the IN-INT. MUTE mode.
- 3 Press **◀◀** or **▶▶** to select OFF.

In the mute OFF mode:

The volume level can be adjusted in the interrupt mode.

NOTE

When the mute ON mode is selected, sound will not produce.

For any other settings, press **preset 5** or another preset button.

- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

NOTES

- Initial mode is "IN-INT. MUTE ON".
- The Auxiliary device being connected, must have an Interrupt wire with a positive trigger, for this function to operate automatically. Otherwise, a separate switch needs to be added to switch manually.

Changing the Radio Frequencies for each Country

For customers not living in Europe, change the radio frequencies as follows.

- 1 When the monitor is open, press and hold **MUTE/SETUP** for at least 2 seconds. The SETUP screen appears.
- 2 Press **preset 6** to activate the OTHER setting mode. Press **preset 6** again to select A.TUNE STEP.
- 3 Press **◀◀** or **▶▶** to select 100 kHz or 50 kHz.
100 kHz: Radio frequencies for Europe
50 kHz: Other Radio frequencies

For any other settings, press **preset 6** or another preset button.

 
- 4 After setting is completed, press **MUTE/SETUP** to return to normal mode.

Switching Disc Mode

Use this function when connecting the optional CD/DVD player, changer.

- 1 Press **BAND/TEL.** to switch the Disc mode in the CD/DVD changer mode.

Example



Other Useful Features

Operating an External Audio Processor (Optional)

You can operate a connected external audio processor from the CVA-1014R/CVA-1014RB/CVA-1014RR.

- 1 When an external audio processor is connected, press **bass engine** to activate Audio Processor mode.
- 2 Press a **preset button (1 through 3)** to select the desired function, and then **◀◀** or **▶▶** to adjust settings.

When the ERA-G310/ERA-G320/CDA-5755/PRA-H600/PXA-H510/PXA-H900 series is connected

- preset 2:** Subwoofer phase control (NORMAL/REVERSE)*¹
- preset 3:** Recalling the stored settings (Preset 1 through 6)*²

When the PXA-H400 series is connected

- preset 1:** Bass/Treble control (-7 ~ +7)
- preset 3:** Recalling the stored settings (Preset 1 through 4)

When the PXA-H700/PXA-H701 series is connected

- preset 1:** Setting the MX mode (MX compatible sources only)
- preset 2:** Subwoofer phase control (NORMAL/REVERSE)*¹

*¹ When the monitor is open: displayed in the monitor
0° ↔ 180°

When the monitor is closed: displayed in the sub-display
NOR ↔ REV

*² When the CDA-5755 series is connected:
(Preset 1 through 4)

- 3 Press **bass engine** to return to normal mode.

NOTE

 
For details about external audio processor operation, see the owner's manual of the external audio processor.

Simultaneous Operation


You can watch the video portion of another source while listening to current source.

- 1 Press **V.SEL** to select the video position.


Example of when not connecting the expansion box:



Example 1 of when connecting the expansion box (KCE-104V):

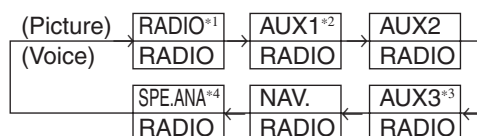

Example 2 of when connecting the expansion box (KCE-104V):

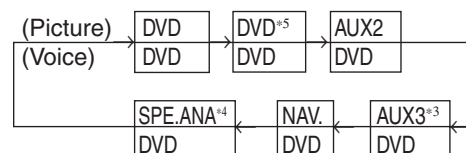

*¹ The source, band, frequencies, etc., are displayed.

*² If a DVD player or DVD changer is connected, the DVD picture will be displayed and the voice will be produced.

With the DVD player (DVA-5205P) or DVD changer (DHA-S680P) connected, press and hold **V. OUT** on the remote control supplied with the player or changer for at least 2 seconds to output DVD picture and sound.

*³ When the KCE-104V and a rear camera are connected, the unit can receive the picture (refer to "Setting the External Input" on page 45).

*⁴ Set SPE.ANA to ON to select the SPE.ANA display (refer to "Displaying Spectrum Analyzer" on page 46).

Press **TITLE** to select the desired SPE.ANA mode from 1 through 6 and SCAN.

*⁵ The source, disc number, elapsed time, etc., are displayed.

Other Useful Features


 
NOTES

- When *AUX IN (AUX1, AUX2, AUX3)* and *NAV.IN* are set to ON, the AUX (AUX1, AUX2) and NAV. mode is displayed (refer to "Setting the External Input" on page 45).
- To switch the sound source, press **SOURCE/POWER** during SIMUL. If the picture and the sound are from the same source, the SIMUL function is not cancelled.


- 2 Press and hold **V.SEL** for at least 2 seconds to cancel the SIMUL function.

Switching Display Mode


- 1 Press and hold **FUNC** for at least 2 seconds in the AUX mode. Each press changes the display mode as follows:

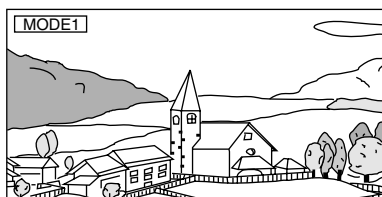


In the Mode 1 (Wide), the monitor displays a normal picture wider to fit in the wide-screen monitor by evenly stretching out the picture horizontally.

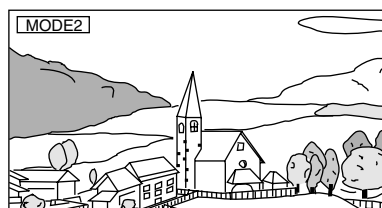

In the Mode 2 (Zoom), the monitor displays a normal picture wider to fit in the wide-screen monitor by unevenly stretching out. The centre portion of the picture is stretched out only slightly in order to make the important centre portion of the picture look natural.

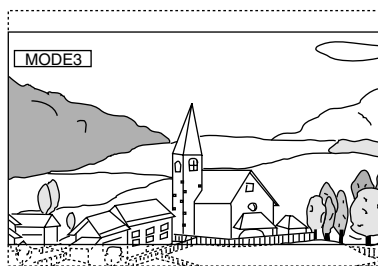

In the Mode 3 (Cinema), the monitor displays a normal picture by stretching out the picture horizontally and vertically. This mode is good for displaying a cinema type picture with the proportion of 16 to 9.

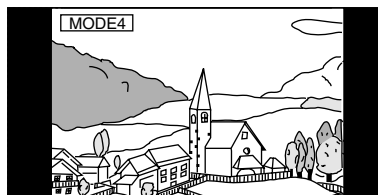


In the Mode 4 (Normal), the monitor displays normal picture at the centre of the screen with a vertical black belt at each side.

Other Useful Features

Operation with the Monitor Closed

You can operate this unit with the monitor closed for the items below.

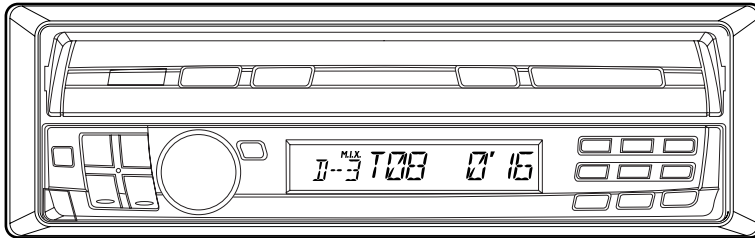

Basic Operation

Turning Power On and Off	7
Adjusting Volume/Balance (Between Left and Right)/Fader (Between Front and Rear)	8
Audio Mute Function	8

Radio Operation

Manual Tuning	9
Automatic Seek Tuning	9
Manual Storing of Station Presets	9
Automatic Memory of Station Presets	10
Tuning to Preset Stations	10

RDS Operation

Setting RDS Reception Mode and Receiving RDS Stations	11
Recalling Preset RDS Stations	11
Receiving Traffic Information	12
PTY (Programme Type) Tuning	13
Priority PTY (Programme Type)	14
Displaying Radio Text	14

DAB Operation (Optional)

Using DAB Receiver for the Ensemble Seek Tuning	15
Changing the Service	16
Changing the Service Component	16
Memorizing the Service	16
Receiving the Memorized Service	16
Memorizing the Ensemble Automatically	17
PTY (Programme Type) Tuning	17
Turning ON/OFF Traffic News Announcement	17
Setting the Announcement Select Mode	18
Changing the Display Mode	19

CD/MP3/Changer Operation (Optional)

Playing Optional CD player or Changer	21
Repeat Play	22
M.I.X. (Random Play)	22

Scanning Programmes	23
Selecting Folders (concerning MP3)	23
Controlling CD Changer	24
Playing MP3 Files with the CD Changer	24
Multi-Changer Selection	25

DVD/Video CD/CD Player Operation (Optional)

Playing DVD/Video CD/CD	26
Still/Pause	26
Chapter (DVD)/Track (Video CD) Sensor	26
Fast Forward/Backward	26
Repeat Play	27
Controlling DVD Changer	27

Navigation System Operation (Optional)

Turning on the Navigation Mode	28
--------------------------------------	----

iPod™ Operation (Optional)

Playback	29
Random Play Shuffle (M.I.X.)	31
Repeat Play	31
Displaying the Text	31

MobileHub™ Link Operation (Optional)

Telephone Mode On and Off	32
Incoming Calls	32
Calling	33

Other Useful Features

Displaying the Title/Text	35
Setting the Bass Control	37
Setting the Treble Control	38
Switching Phase	39
Turning Loudness On and Off	39
Turning Defeat Mode On and Off	39
Displaying Time	43
Operating an External Audio Processor (Optional)	49

Information

In Case of Difficulty

If you encounter a problem, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise, make sure the rest of your system is properly connected or consult your authorized Alpine dealer.

Basic

No function or display.

- Vehicle's ignition is off.
 - If connected following instructions, the unit will not operate with the vehicle's ignition off.
- Improper power lead connections.
 - Check power lead connections.
- Blown fuse.
 - Check the fuse on the battery lead of the unit; replace with the proper value if necessary.
- Internal micro-computer malfunctioned due to interference noise etc.
 - Press the Reset switch with a ballpoint pen or other pointed article.
- Weak or no battery power.
 - Check battery.

No sound or unnatural sound.

- Incorrect setting of volume/balance/fader controls.
 - Readjust the controls.
- Connections are not properly or securely made.
 - Check the connections and firmly connect.

Screen not displayed.

- Brightness control is set at the minimum position.
 - Adjust the Brightness control.
- Temperature in the vehicle is too low.
 - Increase the vehicle's interior temperature to operation temperature range.
- Connections to the DVD/CD player, navigation system are not securely made.
 - Check the connections and firmly connect.

Movement of displayed picture is abnormal.

- Temperature in the vehicle is too high.
 - Allow the vehicle's interior temperature to cool.

Unclear or noisy display.

- Fluorescent plate is worn out.
 - Replace the fluorescent plate.

Navigation system inoperative.

- Connections with the navigation system are improper.
 - Check the connections with the navigation system and connect the cables correctly and firmly.

Unclear picture display.

- Fluorescent tube is exhausted.
 - Replace the fluorescent tube*.

* The fluorescent tube replacement is not free of charge even within the warranty period, for the tube is an article of consumption.

Radio

Unable to receive stations.

- No antenna or open connection in cable.
 - Make sure the antenna is properly connected; replace the antenna or cable if necessary.

Unable to tune stations in the seek mode.

- You are in a weak signal area.
 - Make sure the tuner is in the DX mode.
- If the area you are in is a primary signal area, the antenna may not be grounded and connected properly.
 - Check your antenna connections; make sure the antenna is properly grounded at its mounting location.
- The antenna may not be the proper length.
 - Make sure the antenna is fully extended; if broken, replace the antenna with a new one.

Broadcast is noisy.

- The antenna is not the proper length.
 - Extend the antenna fully; replace it if it is broken.
- The antenna is poorly grounded.
 - Make sure the antenna is grounded properly at its mounting location.
- The station signal is weak and noisy.
 - If above solution does not work, tune in another station.

Indication for CD Changer

HI-TEMP (Monitor)

HI TEMP (Sub-display)

- Protective circuit is activated due to high temperature.
 - The indicator will disappear when the temperature returns to within operation range.

ERROR - 01

- Malfunction in the CD Changer.
 - Consult your Alpine dealer. Press the magazine eject button and pull out the magazine. Check the indication. Insert the magazine again. If the magazine cannot be pulled out, consult your Alpine dealer.
- Magazine ejection not possible.
 - Press the magazine eject button. If the magazine does not eject, consult your Alpine dealer.

ERROR - 02

- A disc is left inside the CD changer.
 - Press the EJECT button to activate the eject function. When the CD changer finishes the eject function, insert an empty CD magazine into the CD changer to receive the disc left inside the CD changer.

NO MAGAZINE (Monitor)

NO MAGZN (Sub-display)

- No magazine is loaded into the CD Changer.
 - Insert a magazine.

NO DISC

- No indicated disc.
 - Choose another disc.

Indication for iPod Mode

NO MAGAZINE (Monitor)

NO MAGZN (Sub-display)

- The iPod is not connected.
 - Make sure the iPod is correctly connected (refer to "Connections").
 - Make sure the cable is not bent excessively.
- The iPod's battery remains low.
 - Refer to the iPod's documentation and charge the battery.

NO DISC

- There are no songs in the iPod.
 - Download songs to the iPod and connect to the adapter.

ERROR - 01

- Communication error
 - Turn the ignition key off, and then set to ACC or ON again.
 - Check the display by reconnecting between the iPod and the adapter, using the iPod cable.

ERROR - 02

- Caused by the iPod Software Version not being compatible with the adapter.
 - Refer to the Owner's manual of the KCA-420i, and update the iPod Software Version to be compatible with the adapter.

Indication for Monitor

HI-TEMP (Monitor)

HI TEMP (Sub-display)

- Protective circuit is activated due to high temperature.
 - The indicator will disappear when the temperature returns to within operation range.

Specifications

MONITOR SECTION

Screen Size	6.5"
LCD Type	Transparent type TN LCD
Operation System	TFT active matrix
Number of Picture Elements	280,800 pcs. (1,200 × 234)
Effective Number of Picture Elements	99.99% or more
Illumination System	U-shaped cold cathode fluorescent tube

FM TUNER SECTION

Tuning Range	87.5 – 108.0 MHz
Mono Usable Sensitivity	0.7 μV
Alternate Channel Selectivity	80 dB
Signal-to-Noise Ratio	65 dB
Stereo Separation	35 dB

MW TUNER SECTION

Tuning Range	531 – 1,602 kHz
Sensitivity (IEC Standard)	25.1 μV/28 dB

LW TUNER SECTION

Tuning Range	153 – 281 kHz
Sensitivity (IEC Standard)	31.6 μV/30 dB

GENERAL

Power Requirement	14.4 V DC (11–15 V allowable)
Operating Temperature	+32°F to +113°F (0°C to +45°C)
Maximum Power Output	45 W × 4
Maximum Pre-Output Voltage	2 V/10 k ohms
Bass	±14 dB at 60 Hz
Treble	±14 dB at 10 kHz
Weight	2.1 kg (4 lbs. 10 oz)

CHASSIS SIZE

Width	178 mm (7")
Height	50 mm (2")
Depth	165mm (6-1/2")

NOSEPIECE SIZE

Width	170 mm (6-3/4")
Height	47 mm (1-27/32")
Depth	28.5 mm (1-1/8")

NOTES

- Due to continuous product improvement, specifications and design are subject to change without notice.
- The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that there is a possibility that 0.01% of the pixels could be either always ON or OFF.

Installation and Connections

Before installing or connecting the unit, please read the following and pages 3 and 4 of this manual thoroughly for proper use.

Warning

MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

KEEP SMALL OBJECTS SUCH AS BOLTS OR SCREWS OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR SHIFT LEVER.

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

Caution

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wires insulation from being cut by the metal edge of the hole.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

Precautions

- Be sure to disconnect the cable from the (-) battery post before installing your CVA-1014R/CVA-1014RB/CVA-1014RR. This will reduce any chance of damage to the unit in case of a short-circuit.
- Be sure to connect the colour coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage to the vehicle's electrical system.
- When making connections to the vehicle's electrical system, be aware of the factory installed components (e.g. on-board computer). Do not tap into these leads to provide power for this unit. When connecting the CVA-1014R/CVA-1014RB/CVA-1014RR to the fuse box, make sure the fuse for the intended circuit of the CVA-1014R/CVA-1014RB/CVA-1014RR has the appropriate amperage. Failure to do so may result in damage to the unit and/or the vehicle. When in doubt, consult your ALPINE dealer.
- The CVA-1014R/CVA-1014RB/CVA-1014RR uses female RCA-type jacks for connection to other units (e.g. amplifier) having RCA connectors. You may need an adaptor to connect other units. If so, please contact your authorized ALPINE dealer for assistance.
- Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect left and right channel speaker cables to each other or to the vehicle body.

IMPORTANT

Please record the serial number of your unit in the space provided below and keep it as a permanent record. The serial number plate is located on the bottom of the unit.

SERIAL NUMBER: _____
INSTALLATION DATE: _____
INSTALLATION TECHNICIAN: _____
PLACE OF PURCHASE: _____


Installation and Connections

Installation

Installing the Monitor

• Location


Before final installation, make sure the display will not hamper gear shifting when it is opened and closed in the chosen location.

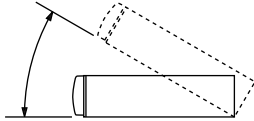

NOTE


Install at an angle within 30 degrees from horizontal.

1

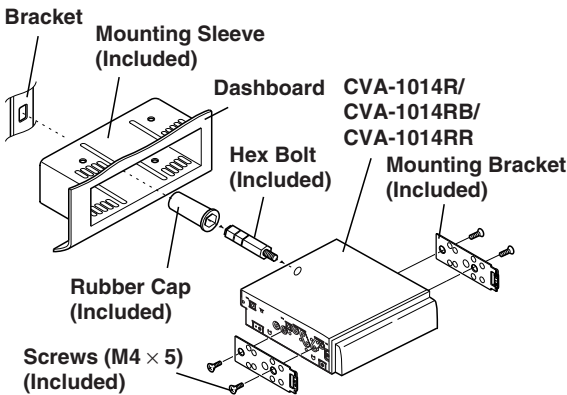

Slide mounting sleeve from main unit (see Removal Procedure below). Slide the mounting sleeve into the dashboard. Install the supplied bracket to the monitor.

2

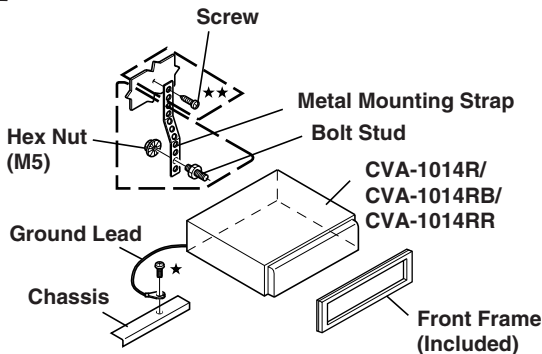


When your vehicle has the Bracket, mount the long hex bolt onto the rear panel of the CVA-1014R/CVA-1014RB/CVA-1014RR and put the Rubber Cap on the hex bolt. If your vehicle does not have the Mounting Support, reinforce the monitor unit with the metal mounting strap (not supplied). Secure the ground lead of the unit to clean metal spot using a screw (★) already attached to the vehicle's chassis.

NOTE

For the screw marked ★★, use an appropriate screw for the chosen mountinSg location.

3

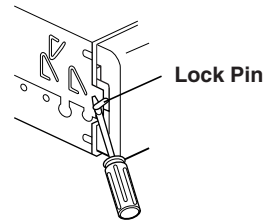


Slide the CVA-1014R/CVA-1014RB/CVA-1014RR into the dashboard. When the unit is in place, make sure the locking pins are fully seated in the down position. This can be done by pressing firmly in on the unit while pushing the locking pin down with a small screwdriver. This ensures that the unit is properly locked and will not accidentally come out from the dashboard. Install the Supplied Front Frame.

Removal

- 1 Use a small screwdriver (or similar tool) to push the locking pins to the "up" position (see above drawing). As each pin is unlocked, gently pull out on the unit to make sure it does not re-lock before unlocking the second pin.
- 2 Pull the unit out, keeping it unlocked as you do so.

<JAPANESE CAR>

Installation using the vehicle's factory brackets.

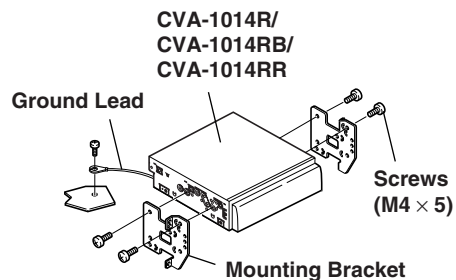


Installation and Connections

To prevent external noise from entering the audio system.

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.


Parking Brake Lead Connection

If necessary, use a pinch connector to connect the parking brake lead, etc.

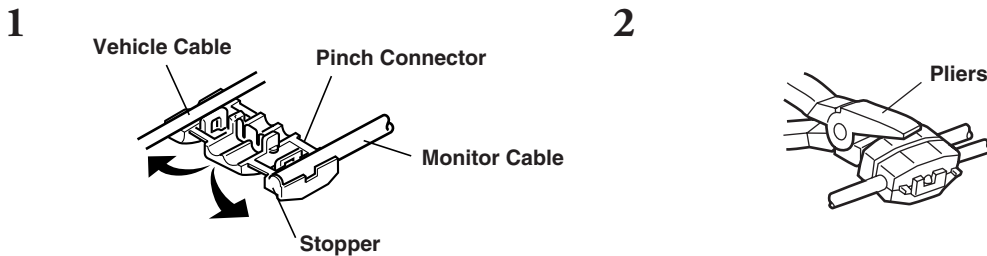

Connection Diagram of SPST Switch (Sold Separately)

(If the ACC power supply is not available)

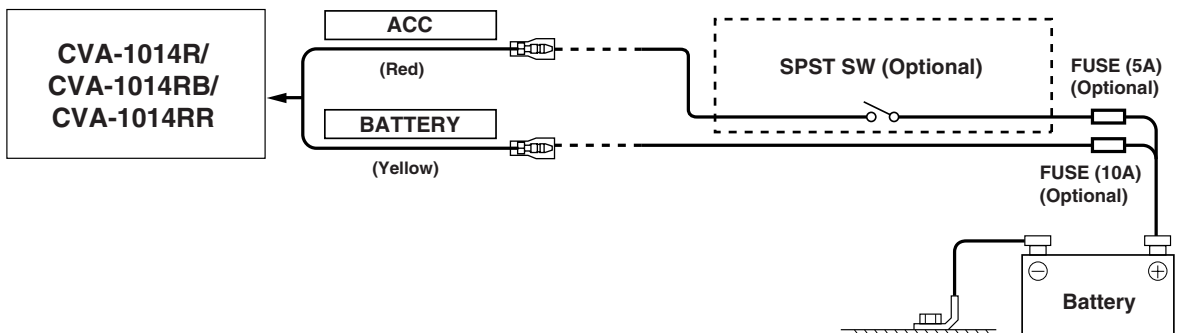


NOTES

- If your vehicle has no ACC power supply, add an SPST (Single-Pole, Single-Throw) switch (sold separately) and fuse (sold separately).
- The diagram and the fuse amperage shown above are in the case when CVA-1014R/CVA-1014RB/CVA-1014RR is used individually.
- If the switched power (ignition) lead of the CVA-1014R/CVA-1014RB/CVA-1014RR is connected directly to the positive (+) post of the vehicle's battery, the CVA-1014R/CVA-1014RB/CVA-1014RR draws some current (several hundred milliamperes) even when its switch is placed in the OFF position and the battery may be discharged.

Installation and Connections

Basic Connections

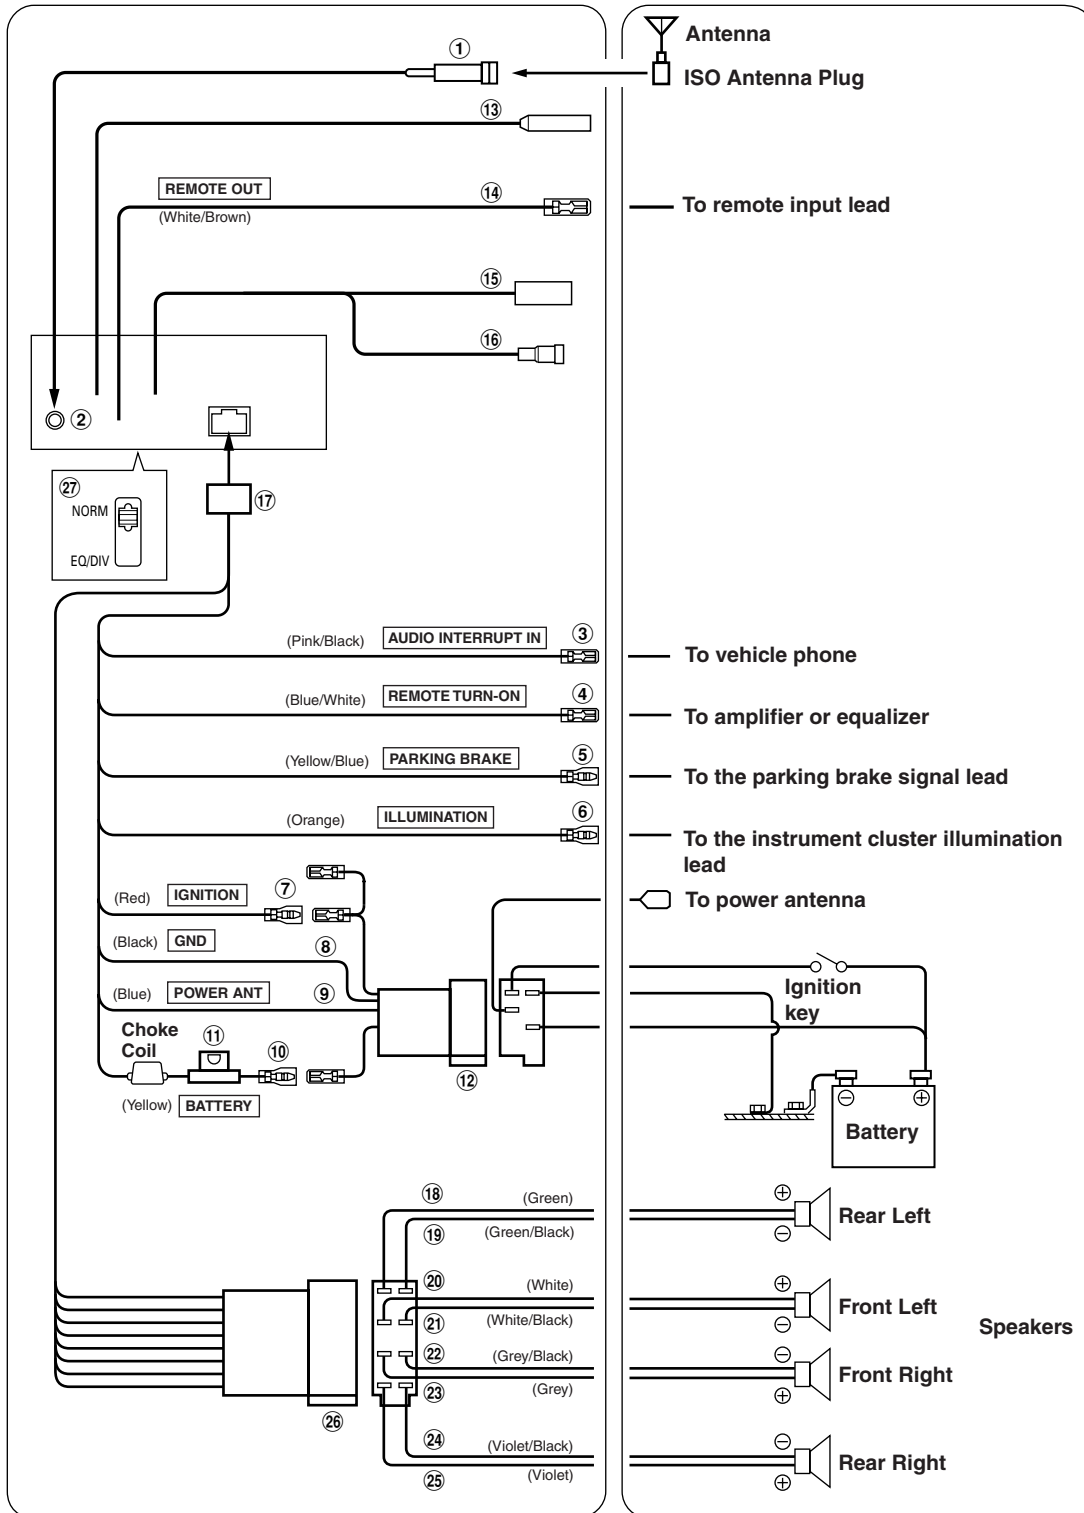

Installation and Connections

- ① ISO Antenna Converter Plug
- ② Antenna Receptacle
- ③ Audio Interrupt In Lead (Pink/Black)
Connect this lead to the Audio Interface output of a cellular phone which provides ground shorting when a call is received.
If a device having the interrupt feature is connected, audio will be automatically muted whenever the interrupt signal is received from the device.
- ④ Remote Turn-On Lead (Blue/White)
Connect this lead to the remote turn-on lead of your amplifier or signal processor.
- ⑤ Parking Brake Lead (Yellow/Blue)
Connect this lead to the power supply side of the parking brake switch to transmit the parking brake status signals to the CVA-1014R/CVA-1014RB/CVA-1014RR.
- ⑥ Illumination Lead (Orange)
This lead may be connected to the vehicle's instrument cluster illumination lead. This will allow the backlighting of the CVA-1014R/CVA-1014RB/CVA-1014RR to dim whenever the vehicle's lights are turned on.
- ⑦ Switched Power Lead (Ignition) (Red)
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+) 12V only when the ignition is turned on or in the accessory position.
- ⑧ Ground Lead (Black)
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.
- ⑨ Power Antenna Lead (Blue)
Connect this lead to the +B terminal of your power antenna, if applicable.
- ⑩ Battery Lead (Yellow)
Connect this lead to the positive (+) post of the vehicle's battery.
- ⑪ Fuse Holder (10A)
- ⑫ ISO Power Supply Connector
- ⑬ Remote Control Interface Connector
To remote control interface box.
- ⑭ Remote Control Output Lead (White/Brown)
Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.
- ⑮ RGB Input Connector
- ⑯ Ai-NET Cable
- ⑰ Power Supply Connector
- ⑱ Left Rear (+) Speaker Output Lead (Green)
- ⑲ Left Rear (-) Speaker Output Lead (Green/Black)
- ⑳ Left Front (+) Speaker Output Lead (White)
- ㉑ Left Front (-) Speaker Output Lead (White/Black)
- ㉒ Right Front (-) Speaker Output Lead (Grey/Black)
- ㉓ Right Front (+) Speaker Output Lead (Grey)
- ㉔ Right Rear (-) Speaker Output Lead (Violet/Black)
- ㉕ Right Rear (+) Speaker Output Lead (Violet)
- ㉖ ISO Connector (Speaker Output)
- ㉗ System Switch
When connecting an equalizer or divider using Ai-NET feature, place this switch in the EQ/DIV position. When no device is connected, leave the switch in the NORM position.

NOTE



Be sure turn the power off to the unit before changing the switch position.

NOTE




This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.

Installation and Connections

System Example 1: Refer also to Basic Connections.

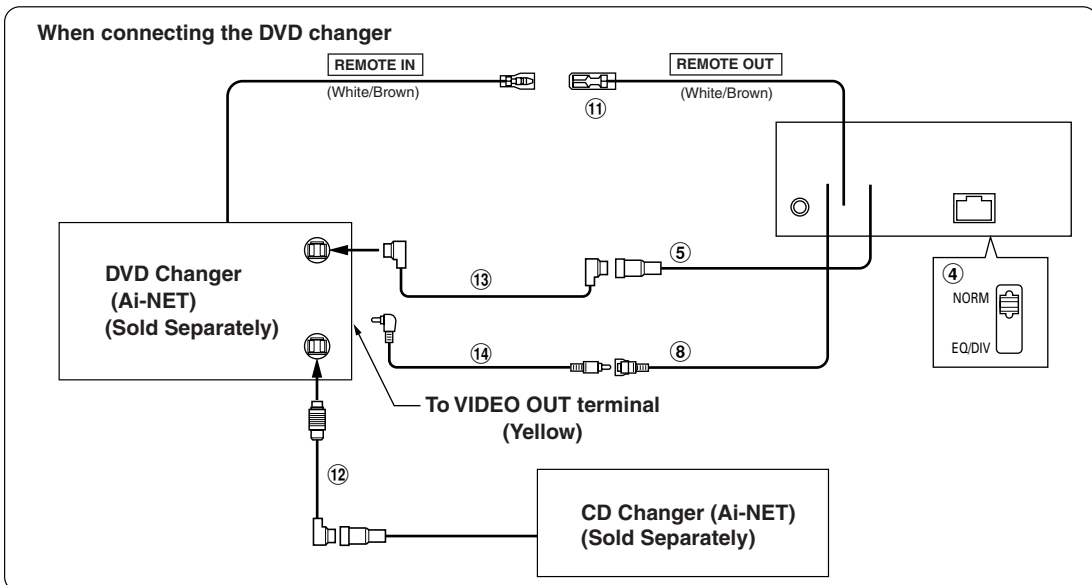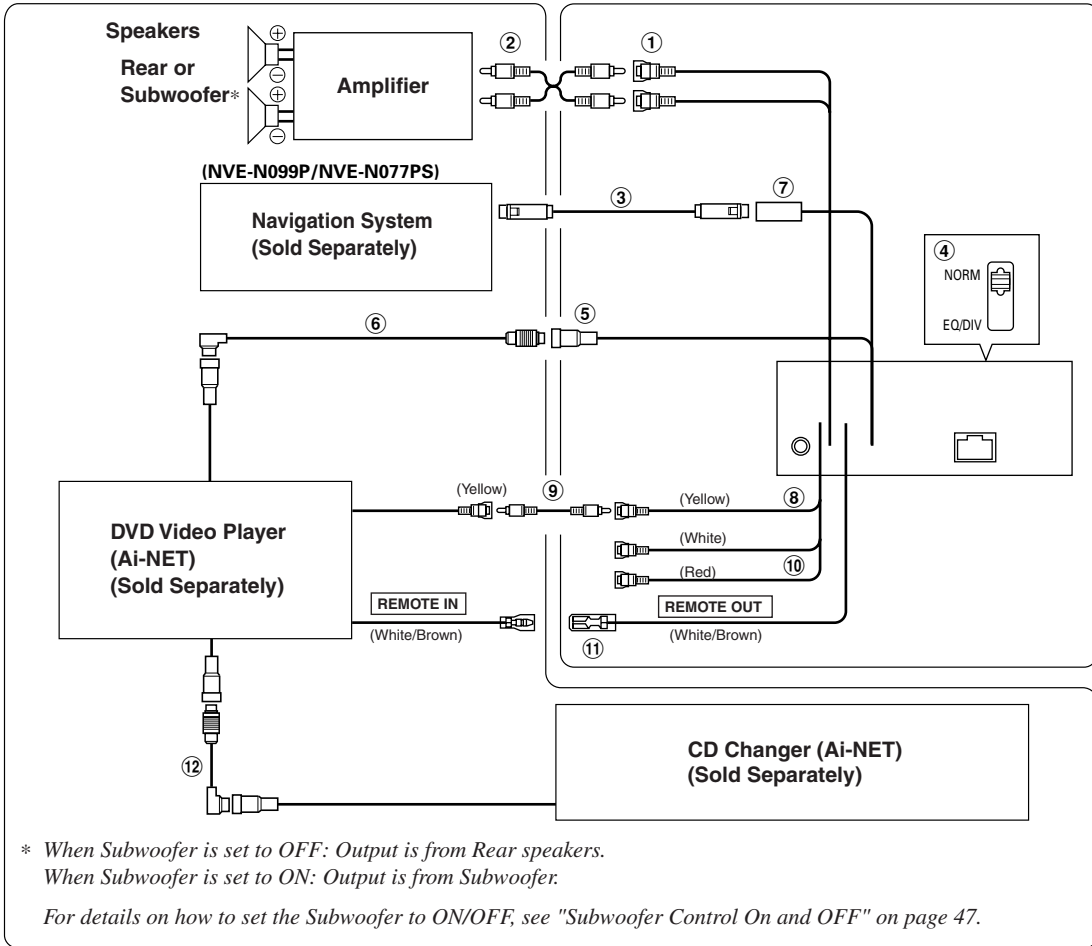


Installation and Connections

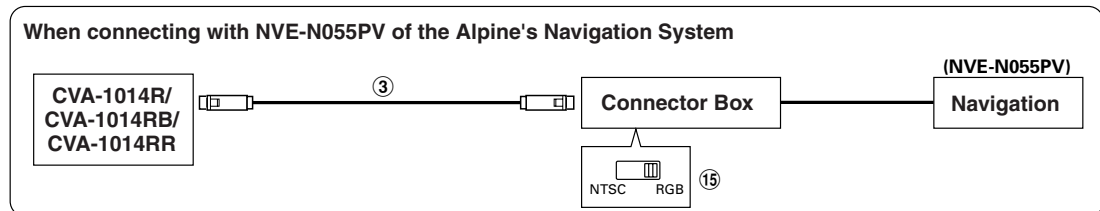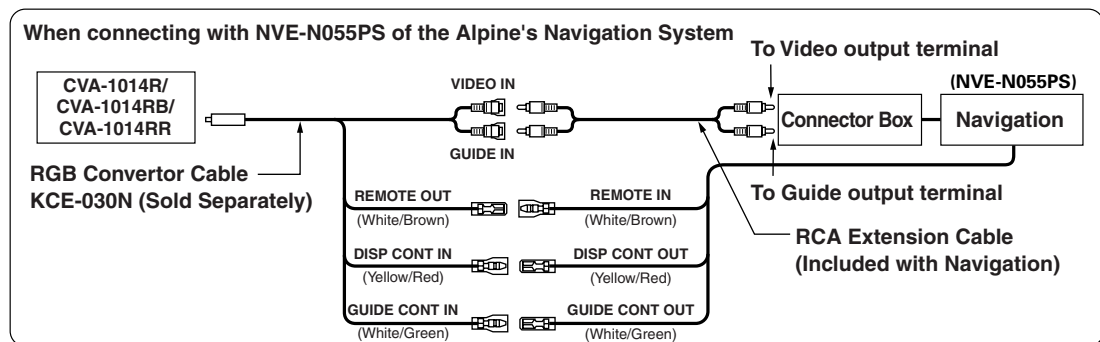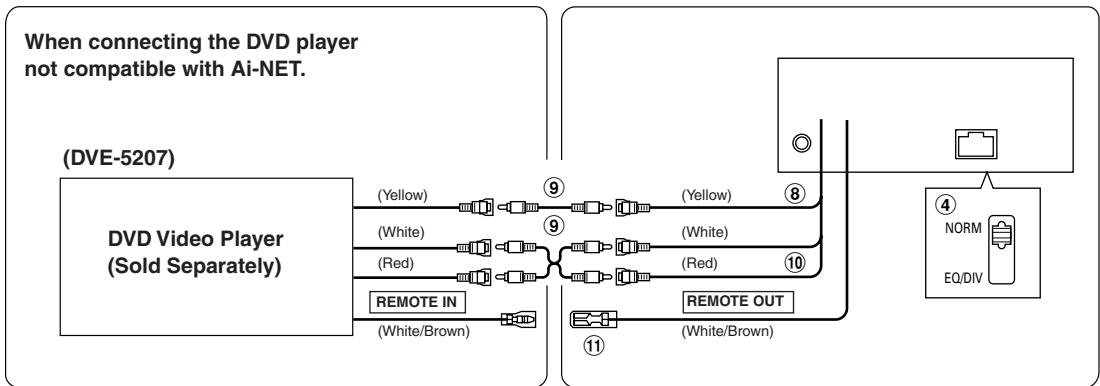

- ① Rear/Subwoofer Output RCA Connectors
RED is right and WHITE is left.
- ② RCA Extension Cable (Sold Separately)
- ③ RGB Cable (Included with Navigation)
- ④ System Switch
When connecting an equalizer or divider using Ai-NET feature, place this switch in the EQ/DIV position. When no device is connected, leave the switch in the NORM position.
- NOTE**
Be sure turn the power off to the unit before changing the switch position.
- ⑤ Ai-NET Connector
Connect this to the output or input connector of other product equipped with Ai-NET.
- ⑥ Ai-NET Cable (Included with DVD video player)
- ⑦ RGB Input Connector
Connect to the RGB output terminal of the navigation system.
- ⑧ AUX Video Input (AUX1) Connector
Connect the video output lead of a DVD video player or DVD changer to this terminal.
- ⑨ RCA Extension Cable (Included with DVD Video Player)
- ⑩ AUX Audio Input (AUX1) Connectors
(not used for this system)
- ⑪ Remote Control Output Lead (White/Brown)
Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.
- ⑫ Ai-NET Cable (Included with CD Changer)
- ⑬ Ai-NET Cable (Included with DVD Changer)
- ⑭ RCA Extension Cable (Included with DVD Changer)
- ⑮ RGB/NTSC Output Switch
To display the picture of Navigation system on the external monitor, place the switch in the NTSC Output position.


Installation and Connections

Detail of the expansion box KCE-104V (sold separately)

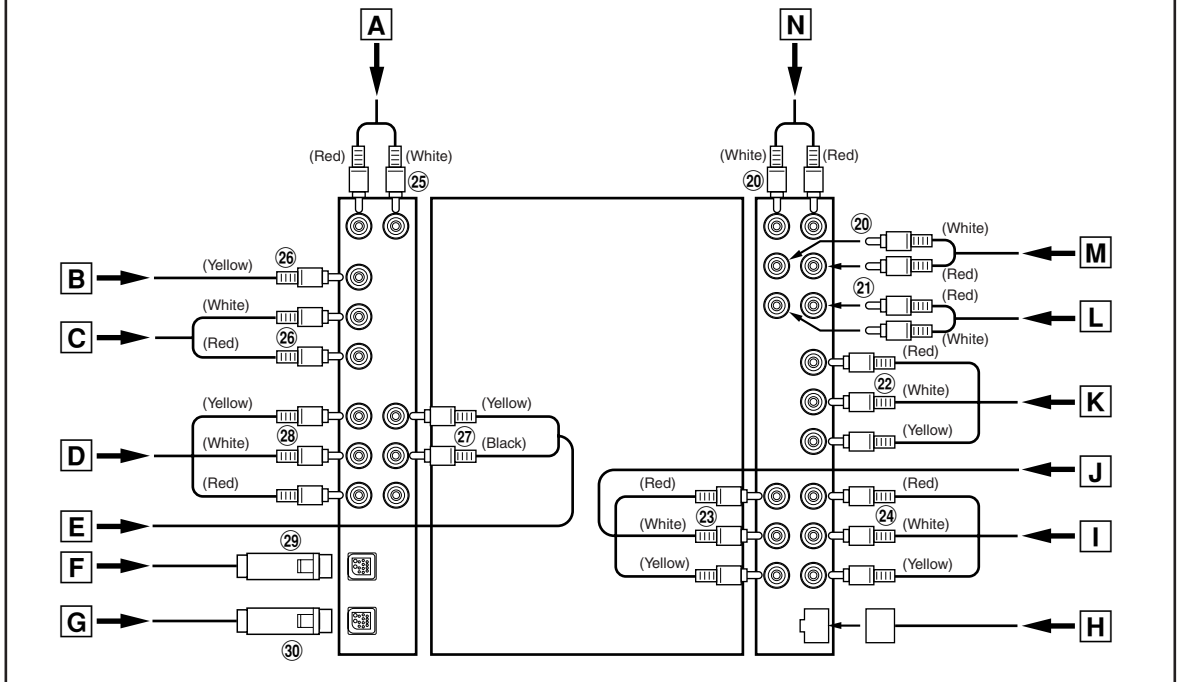


- ① **Ai-NET Connector**
Connect this to the output or input connector of other product equipped with Ai-NET.
- ② **Remote Control Output Lead (White/Brown)**
Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.
- ③ **Ai-NET Cable (Included with DVD video player)**
- ④ **Ai-NET Cable (Included with CD Changer)**
- ⑤ **Rear Select 1 Lead (Gray/Pink)**
Connect this lead to the ground lead with a push switch, etc.
- ⑥ **Rear Select 2 Lead (Black/Pink)**
Connect this lead to the ground lead with a push switch, etc.
- ⑦ **Switched Power Lead (Ignition) (Red)**
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+) 12V only when the ignition is turned on or in the accessory position.
- ⑧ **Reverse Lamp Signal Input Lead (Orange/White)**
Used to automatically switch to the rear camera input. Connect this lead to the positive side of the vehicle's reverse lamp. The video input will automatically switch to the rear camera whenever the vehicle is backing up.
- ⑨ **Battery Lead (Yellow)**
Connect this lead to the positive (+) post of the vehicle's battery.
- ⑩ **Ground Lead (Black)**
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.
- ⑪ **Fuse Holder (7.5A)**
- ⑫ **System Switch**
When connecting an equalizer or divider using Ai-NET feature, place this switch in the EQ/DIV position. When no device is connected, leave the switch in the NORM position.
- ⑬ **RGB Input Connector**
Connect to the RGB output terminal of the KCE-104V.
- ⑭ **Rear/Subwoofer Output RCA Connectors**
RED is right and WHITE is left.
- ⑮ **AUX Audio Input (AUX1) Connectors**
- ⑯ **AUX Video Input (AUX1) Connector**
- ⑰ **RCA Extension Cable (Included with DVD video player)**
- ⑱ **RCA Extension Cable (Sold Separately)**
- ⑲ **RCA Extension Cable (Included with the KCE-104V)**
- ⑳ **To Front/Rear PREOUT Terminals of the KCE-104V**
- ㉑ **To Subwoofer Terminals of the KCE-104V**
- ㉒ **Connect to the AUX Input (AUX1) Connectors of the CVA-1014R/CVA-1014RB/CVA-1014RR**
- ㉓ **To AUX1 Output Terminals of the KCE-104V**
- ㉔ **To AUX2 Output Terminals of the KCE-104V**
- ㉕ **To Sound Input Terminals of the KCE-104V (from the CVA-1014R/CVA-1014RB/CVA-1014RR)**
- ㉖ **To AUX Input1 Terminals of the KCE-104V**
- ㉗ **To AUX Input2 Terminals of the KCE-104V**
- ㉘ **To AUX Input3 Terminals of the KCE-104V**
- ㉙ **Connect to the RGB Terminal of the Navigation System**
- ㉚ **Connect to the RGB Input Terminal of the CVA-1014R/CVA-1014RB/CVA-1014RR**
- ㉛ **RGB Cable (Included with the KCE-104V)**
- ㉜ **RGB Cable (Included with Navigation System)**
- ㉝ **RCA Extension Cable (Included with the TUE-T152)**

 CD changer for CVA-1014R/CVA-1014RB/CVA-1014RR.
 CD-Wechsler für CVA-1014R/CVA-1014RB/CVA-1014RR.
 Changeur CD pour CVA-1014R/CVA-1014RB/CVA-1014RR.
 Cambiador de CD para CVA-1014R/CVA-1014RB/CVA-1014RR.
 Cambia CD per CVA-1014R/CVA-1014RB/CVA-1014RR.
 CD-växlare för CVA-1014R/CVA-1014RB/CVA-1014RR.




CHA-S634

CD changer for CVA-1014R/CVA-1014RB/CVA-1014RR.
 CD-Wechsler für CVA-1014R/CVA-1014RB/CVA-1014RR.
 Changeur CD pour CVA-1014R/CVA-1014RB/CVA-1014RR.
 Cambiador de CD para CVA-1014R/CVA-1014RB/CVA-1014RR.
 Cambia CD per CVA-1014R/CVA-1014RB/CVA-1014RR.
 CD-växlare för CVA-1014R/CVA-1014RB/CVA-1014RR.

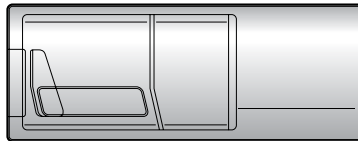

CHA-1214

 You cannot connect to CVA-1014R/CVA-1014RB/CVA-1014RR.
 Il est impossible de se raccorder au CVA-1014R/CVA-1014RB/CVA-1014RR.
 No es posible conectarlo a CVA-1014R/CVA-1014RB/CVA-1014RR.
 Ein Anschluß an CVA-1014R/CVA-1014RB/CVA-1014RR ist nicht möglich.
 Non è possibile effettuare il collegamento a CVA-1014R/CVA-1014RB/CVA-1014RR.
 Du kan inte ansluta till CVA-1014R/CVA-1014RB/CVA-1014RR.



CHM-S630

Alpine CD Changers Give You More!

More musical selections, more versatility, more convenience.

An Alpine CD Changer adds more musical choices to your sound system. All models except CHM-S630 can be controlled from Alpine head units and deliver excellent sound quality. The CHA-S634 is a high-performance 6-disc changer with a new M DAC, Ai-NET compatibility, Optical Digital Output, 150 Disc Title Memory and CD TEXT. The CHA-1214 Ai-NET model holds 12 discs, and the CHM-S630 M-Bus model is a super-compact 6-disc changer.

Von Alpine CD-Wechslern haben Sie mehr!

Mehr Musikauswahl, mehr Vielseitigkeit, mehr Komfort.

Mit einem Alpine CD-Wechsler erweitern Sie die Musikauswahl Ihres Systems. Sämtliche Modelle außer dem CHM-S630 lassen sich von einer Alpine-Bedieneinheit aus steuern und liefern hervorragende Klangqualität. Der CHA-S634 ist ein Ai-NET-kompatibler Hochleistungs-Wechsler für 6 CDs mit dem neuen M-DAC, Digitalausgang für Glasfaserkabel, CD-Titelspeicher für 150 Titel und CD-TEXT. Das Ai-NET-Modell CHA-1214 nimmt 12 CDs auf, und der M-Bus-kompatible CHM-S630 ist ein superkompakter Wechsler für 6 CDs.

Changeurs de CD Alpine : vous avez le choix!

Plus de sélections musicales, plus de souplesse, plus de confort.

Un changeur de CD Alpine permet d'augmenter la plage des sélections musicales de votre système embarqué. Tous les modèles, l'exception du CHM-S630, peuvent être contrôlés à partir des autoradios Alpine et offrent une excellente qualité audio. Le modèle CHA-S634 est un changeur 6 disques ultra performant compatible Ai-NET et équipé d'un convertisseur N/A standard, d'une sortie optique numérique, d'une mémoire d'une capacité de 150 titres et de la fonction CD TEXT. Le modèle CHA-1214 Ai-NET peut contenir 12 disques. Le modèle CHM-S630 M-Bus est un changeur 6 disques super compact.

¡Los cambiadores Alpine de CD le ofrecen más!

Más selecciones musicales, más versatilidad y más ventajas.

Un cambiador Alpine de CD añade más opciones musicales a su equipo de sonido. Todos los modelos, excepto el CHM-S630, pueden controlarse desde las unidades principales de Alpine y proporcionar un sonido de calidad excepcional. El modelo CHA-S634 es un cambiador de 6 discos de alto rendimiento con el nuevo DAC "M" y compatibilidad con Ai-NET, salida digital óptica, memoria de títulos de 150 discos y TEXTO CD. El modelo CHA-1214 Ai-NET admite 12 discos y el modelo CHM-S630 Bus-M es un cambiador de 6 discos y tamaño reducido.

I caricatori CD Alpine danno di più!

Più scelta, più versatilità, più comodità.

Un caricatore CD Alpine offre maggiore scelta. Tutti i modelli, eccetto il modello CHM-S630, possono essere controllati tramite le unità di controllo Alpine e producono un suono di qualità eccellente. CHA-S634 è un caricatore a 6 dischi Ai NET compatibile e dotato di un nuovo M DAC, di un'uscita ottica digitale, memorizzazione dei titoli di 150 dischi e CD TEXT. Il modello CHA-1214 Ai NET può contenere un massimo di 12 dischi, mentre il modello CHM-S630 M-Bus è un caricatore a 6 dischi ultra compatto.

Alpines CD-växlare ger mer!

Fler musikval, mer variation, större bekvämlighet.

Med Alpines CD-växlare i systemet får du större musikalisk valfrihet. Alla modeller, utom CHM-S630, kan styras från Alpines huvudenheter och ger enastående ljudkvalitet. CHA-S634 är en högpresterande växlare för 6 skivor med en ny M D/A-omvandlare, kompatibel med Ai-NET, optisk digitalutgång, titelminne för 150 skivor och CD-TEXT. Modellen CHA-1214 Ai-NET rymmer 12 skivor och modellen CHM-S630 M-Bus är en superkompakt växlare för 6 skivor.

Appendix

Product Information Card

Produkt-Informationskarte

Carte d'informations sur le produit

Tarjeta de información del producto

English

Filling in this Product Information Card is voluntary. If you fill in this card and send it to Alpine, your data will be tabulated into reference data for future Alpine product development. In addition, in the future you may receive information about new products or Survey Mail requesting additional opinions about Alpine products or services. If you agree to the above term, please sign your name in the indicated space and return the card. Any additional comments or inquiries may be sent to: Person in charge of Customer Service department Alpine Electronics (Europe) GmbH.
Frankfurter Ring 117, 80807 München, Germany
Phone: +49-(0)89-32 42 640

Deutsch

Das Ausfüllen dieser Produktinformations-Karte ist freiwillig. Sollten Sie diese Karte vervollständigen, so werden die Daten für zukünftige Produktentwicklungen von Alpine als Referenzdaten herangezogen. Ebenso können Sie in der Zukunft Informationen über neue Alpine Produkte erhalten oder uns auch Ihre Meinung über Alpine Produkte und Dienstleistungen im Rahmen von Kunden-Befragungen mitteilen. Stimmen Sie dem Kontakt durch Alpine zu, so würden wir Sie bitten, in dem dafür vorgesehenen Feld zu unterschreiben und die Karte kostenfrei an uns zurückzuschicken. Zusätzliche Kommentare und Meinungen können Sie gerne an den zuständigen Kontakt im Kundendienst Alpine Electronics (Europe) GmbH senden.
Frankfurter Ring 117, 80807 München, Germany
Phone: 089-32 42 640

Français

En remplissant volontairement cette fiche, et en l'envoyant à Alpine, vous acceptez que ces informations soient utilisées par Alpine, dans le cadre de développement de nouveaux produits. Par ailleurs, vous autorisez Alpine à solliciter votre opinion par mailing sur de nouveaux produits ou services. Si vous acceptez les termes ci-dessus, veuillez signer cette carte à l'endroit indiqué, et nous la retourner. Tout autre commentaire ou demande doit être adressé à l'attention de: Responsable du service consommateur Alpine Electronics (Europe) GmbH.
Frankfurter Ring 117, 80807 München, Germany
Phone: +49-(0)89-32 42 640

Español

El envío de la información solicitada es voluntario. Si Vd. nos la remite, será utilizada de modo confidencial para el desarrollo de futuros productos Alpine. Si Vd. desea recibir información sobre nuevos productos de nuestra gama, indique su nombre en el espacio designado y remitanos la tarjeta. Cualquier solicitud adicional puede ser enviada a: Persona responsable del Servicio de Atención al Cliente de Alpine Electronics (Europe) GmbH.
Frankfurter Ring 117, 80807 München, Germany
Phone: +49-(0)89-32 42 640

Q1. PRODUCT PURCHASED

- Cassette Player
- CD Player
- MD Player
- DVD Player
- CD Changer
- Amplifier
- Speaker
- Subwoofer
- Monitor Controller
- Video Monitor
- Navigation
- Processor/Equalizer
- CD/Video CD Changer
- Other _____

Q2. MODEL NUMBER: _____

Q3. DATE OF PURCHASE:

Month: _____ Year: _____

Q4. If navigation system, which monitor?

- Alpine → (Model No.) _____
- Other → (Brand Name) _____

Q5. STORE TYPE WHERE PURCHASED:

- Car Audio Specialist
- Audio/Video Store
- Electronics/Appliance Store
- Car Accessories Shop
- Other _____

Q6. Type of vehicle in which this unit is installed:

Make: _____ Model: _____
Purchased Model _____
Year: _____ Year: _____

Q7. How was this vehicle purchased?

- Purchase
- Lease

Q8. Purpose of buying this unit?

- Addition
- Replacement

- ↓
• Previous brand replaced?
1. Factory installed

- Alpine
- Other → (Brand Name) _____

Q9. Have you purchased Alpine products before?

- First time
- Two or More times

Q10. When you purchased this Alpine unit, did you compare it with other brand?

- Yes → (Brand Name) _____
- No

Q11. GENDER

- Male
- Female

Q12. AGE _____

Q13. MARITAL STATUS

- Single
- Married

Q14. OCCUPATION

- Company Owner/Self-employed/
Freelance
- Manager
- Company Employee
- Civil Servant
- Educator
- Student
- Other _____

Q15. Comments _____

Q1. gekauftes Gerät

- Kassetten-Spieler
- CD-Spieler
- MD-Spieler
- DVD-Spieler
- CD-Wechsler
- Verstärker
- Lautsprecher
- Subwoofer
- Monitor-Controller
- Video-Monitor
- Navigationssystem
- Prozessor/Equalizer
- CD/Video-CD-Wechsler
- andere _____

Q2. Modellnummer: _____

Q3. Kaufdatum:

Monat: _____ Jahr: _____

Q4. Falls Navigationssystem: Welcher Monitor?

- Alpine → (Modellnr.) _____
- Anderer Hersteller →
(Herstellername) _____

Q5. Art des Geschäfts, in dem Sie das Gerät gekauft haben:

- Spezialist für Auto-Audioanlagen
- Audio/Video-Geschäft
- Elektro-Geschäft
- Autozubehör-Geschäft
- Anderer Hersteller _____

Q6. Art des Fahrzeugs, in das das Gerät installiert wurde:

Marke: _____ Modell: _____
gekauft im _____
Jahr: _____ Baujahr: _____

Q7. Wie haben Sie das Fahrzeug gekauft?

- Kauf
- Leasing

Q8. Zweck des Kaufs dieses Geräts?

- Zusätzlich
- Austausch

- ↓
• Marke des ausgetauschten Geräts?

- Serienmäßige Ausstattung
- Alpine
- Anderer Hersteller →
(Herstellername) _____

Q9. War dies das erste Mal, dass Sie ein Alpine-Gerät gekauft haben?

- Erstes Mal
- Zweites Mal oder öfter

Q10. Haben Sie dieses Alpine-Gerät vor dem Kauf mit Geräten anderer Hersteller verglichen?

- Ja → (Herstellername) _____
- Nein

Q11. Geschlecht

- Männlich
- Weiblich

Q12. Alter _____

Q13. Familienstand

- Ledig
- Verheiratet

Q14. Beruf

- Selbständige/Firmeninhaber/treiberberuflich
Tätige
- Leitende Angestellte
- Sonstige Angestellte
- Beamte
- Schulbildung
- Studium
- Sonstige _____

Q15. Kommentar: _____

Q1. PRODUIT ACHETE

- Lecteur de cassette
- Lecteur de CD
- Lecteur MD
- Lecteur DVD
- Changeur de CD
- Amplificateur
- Haut-parleur
- Haut-parleur de graves
- Station Multimedia
- Moniteur Vidéo
- Navigation
- Processeur/Egaliseur
- Changeur de CD/CD Vidéo
- Autre _____

Q2. NUMERO DU MODELE: _____

Q3. DATE D'ACHAT:

Mois: _____ Année: _____

Q4. Si c'est un système de navigation, quel moniteur?

- Alpine → (N° du modèle) _____
- Autre → (Marque) _____

Q5. TYPE DE MAGASIN OU VOUS AVEZ ACHETE LE PRODUIT:

- Spécialiste autoradio
- Magasin audio/vidéo
- Magasin d'électronique/appareils
- Magasin d'accessoires automobiles
- Autre _____

Q6. Type de véhicule dans lequel cet appareil est installé:

Marque: _____ Modèle: _____
Année _____ Année du
d'achat: _____ modèle: _____

Q7. Comment avez-vous acheté ce véhicule?

- Achat
- Location-bail

Q8. Pourquoi avez-vous acheté cet appareil?

- Addition
- Remplacement

- ↓
• Marque précédente remplacée?

- Installée en usine
- Alpine
- Autre → (Marque) _____

Q9. Aviez-vous déjà acheté des produits Alpine?

- Première fois
- Deux fois ou plus

Q10. Lorsque vous avez acheté ce produit Alpine, l'avez-vous comparé à une autre marque?

- Oui → (Marque) _____
- Non

Q11. SEXE

- Masculin
- Féminin

Q12. AGE _____

Q13. SITUATION DE FAMILLE

- Célibataire
- Marié

Q14. PROFESSION

- Entrepreneur/Travailleur indépendant/
Free-lance
- Directeur
- Employé de bureau
- Fonctionnaire
- Educateur
- Etudiant
- Autre _____

Q15. Commentaires _____

Q1. Producto Comprado

- Radio/Cassette
- Radio/CD
- Reproductor de MD
- Reproductor de DVD
- Cambiador de CD
- Amplificador
- Altavoz
- Subwoofer
- Monitor de control
- Monitor de video
- Sistema de navegación
- Procesador/Equalizador
- Cambiador de CD/Video CD
- Otros _____

Q2. Número de modelo: _____

Q3. Fecha de compra:

Mes: _____ Año: _____

Q4. En caso de sistema de navegación, ¿qué monitor?

- Alpine → (N° de modelo) _____
- Otro → (Nombre de marca) _____

Q5. TIPO DE TIENDA DONDE COMPRÓ:

- Especialista en audio de automóviles
- Tienda de audio/video
- Tienda de electrónica/electrodomésticos
- Tienda de accesorios automovilísticos
- Otros _____

Q6. Tipo de vehículo en que la unidad está instalada:

Marca: _____ Modelo: _____
Año de _____ Año del
compra: _____ modelo: _____

Q7. ¿Cómo fue comprado este vehículo?

- compra
- Leasing

Q8. ¿Propósito de comprar esta unidad?

- Mejora del sistema
- Sustitución

- ↓
• ¿Sustitución de marca anterior?

- Installée en usine
- Alpine
- Otros → (Nombre de marca) _____

Q9. ¿Ha comprado Vd. productos Alpine anteriormente?

- Primera vez
- Dos o más veces

Q10. Cuando usted compró esta unidad Alpine, ¿la comparó con otros fabricantes?

- Si → (Nombre de marca) _____
- No

Q11. SEXO

- Masculino
- Femenino

Q12. Edad _____

Q13. Estado civil

- Soltero
- Casado

Q14. Ocupación

- Propietario de empresa/Autónomo/
Profesional independiente
- Gerente
- Empleado de compañía
- Empleado público
- Profesor
- Estudiante
- Otros _____

Q15. Comentarios _____

Scheda informazioni prodotto

Italiano

La compilazione di questa formulario è volontaria. Se compilate questo formulario, ritornandolo ad Alpine, i Vostri dati saranno raccolti in un file di riferimento per lo sviluppo dei nuovi prodotti Alpine. In aggiunta Voi potrete ricevere in futuro informazioni riguardanti i nuovi prodotti o la richiesta di una Vostra opinione circa i prodotti o i servizi forniti da Alpine. Se siete d'accordo, Vi preghiamo di ritornarci il formulario compilato negli appositi spazi con i Vostri dati. In caso desideriate fornire altri commenti o richiedere informazioni aggiuntive, potete indirizzare il tutto a : Responsabile dipartimento Servizio Clienti Alpine Electronics (Europe) GmbH.
Frankfurter Ring 117, 80807 München, Germany
Phone: +49-(0)89-32 42 640

Q1. PRODOTTO ACQUISTATO

1. Lettore di cassette
2. Lettore CD
3. Lettore MD
4. Lettore DVD
5. CD Changer
6. Amplificatore
7. Altoparlante
8. Subwoofer
9. Radio Monitor
10. Monitor video
11. Sistema di navigazione
12. Processore/equalizzatore
13. Cambia CD/Video CD
14. Altro _____

Q2. NUMERO MODELLO: _____

Q3. DATA DI ACQUISTO:

Mese: _____ Anno: _____

Q4. In caso di acquisto di un sistema di navigazione, quale monitor possiede?

1. Alpine → (No. Modello) _____
2. Altro → Nome marca _____

Q5. NEGOZIO DI ACQUISTO:

1. Specialista Car Stereo
2. Negozio di audio/video
3. Negozio di elettronica/elettrodomestici
4. Negozio accessori automobile
5. Altro _____

Q6. Tipo di veicolo posseduto:

Marca: _____ Modello: _____
Anno _____ Anno _____
acquisto: _____ modello: _____

Q7. Modalità acquisto

1. Acquisto
2. Leasing

Q8. Scopo acquisto

1. Aggiunta
 2. Sostituzione
- ↓
- Marca sostituita
 - 1. Installato di fabbrica
 - 2. Alpine
 - 3. Altro → (Nome marca) _____

Q9. Avevate già acquistato prodotti Alpine?

1. No
2. Due o tre volte

Q10. Nell'acquistarlo, avete paragonato questo prodotto ad un'altra marca?

1. Sì → (Nome marca) _____
2. No

Q11. SESSO

1. Maschile
2. Femminile

Q12. ETÀ _____

Q13. STATO CIVILE

1. Celibe/nubile
2. Coniugato/coniugata

Q14. LAVORO

1. Proprietario di azienda/artigiano/libero professionista
2. Manager
3. Impiegato
4. Impiegato statale
5. Insegnante
6. Studente
7. Altro _____

Q15. Commenti _____

- ◆ I agree to the above stated terms of the Alpine Product Information Card.
- ◆ Ich stimme dem Kontakt durch Alpine für Informations- und Befragungszwecke zu.
- ◆ J'accepte les termes de cette carte d'information produit Alpine.
- ◆ Estoy conforme con los términos de la tarjeta de información sobre producto de Alpine.
- ◆ Accetto i termini della scheda informazioni prodotti Alpine.

_____ (Date/Datum/Date/Fecha/Data)

_____ (Signature/Unterschrift/Signature/Firma)

Name/Nom/Nombre/Nome

(First Name/Vorname/Prénom/Primer nombre/Nome)

(Surname/Familiennome/Nom de famille/Apellido/Cognome)

Home Address/Privatanschrift/Adresse/Dirección/Indirizzo

(Street/Straße/Rue/Calle/Via) (Post Code/Postleitzahl/Code postal/Código postal/Codice postale)

(Town/City/Stadt/Ville/Ciudad/Città) (Country/Land/Pays/Pais/Paese)

Telephone Number: _____

E-Mail/Correo electrónico: _____

Q1 NO. Other	Q2
-----------------	----

Q3 Month	Year	Q4 NO.1. Model No.
NO.2. Brand Name		

Q5 NO. Other	Q6 Make:	Model:
	Purchased Year:	Model Year:


Q7 NO.	Q8 NO. 1	Previous brand replaced.	Brand Name
	2	1. 2. 3.	→

Q9 NO.	Q10 1 → Brand Name	Q11 NO.
	NO. 2	

Q12 years old	Q13 NO.	Q14 NO. Other
---------------------	---------	------------------

Q15 Comments _____

LUFTPORT
PAR AVION
PRIORITAIRE

NE PAS AFFRANCHIR

NICHT FREIMACHEN
NO STAMP REQUIRED

REPONSE PAYEE/ WERBEANTWORT
ALLEMAGNE

ALPINE ELECTRONICS (EUROPE) GmbH
Frankfurter Ring 117, 80807 München,
Germany