



DVA-5205P

DVD/VIDEO CD/ CD PLAYER

- **OWNER'S MANUAL (Page 2-71)**
Please read this manual to maximize your enjoyment of the outstanding performance and feature capabilities of the equipment, then retain the manual for future reference.
- **MODE D'EMPLOI (Page 72-141)**
Veuillez lire ce mode d'emploi pour tirer pleinement profit des excellentes performances et fonctions de cet appareil, et conservez-le pour toute référence future.
- **MANUAL DE OPERACION (Página 142-211)**
Lea este manual, por favor, para disfrutar al máximo de las excepcionales prestaciones y posibilidades funcionales que ofrece el equipo, luego guarde el manual para usarlo como referencia en el futuro.





Precautions



Warning

This symbol means important instructions.

Failure to heed them can result in serious injury or death.

DO NOT DISASSEMBLE OR ALTER. Doing so may result in an accident, fire or electric shock.

KEEP SMALL OBJECTS SUCH AS BATTERY OUT OF THE REACH OF CHILDREN. Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES. Failure to do so may result in fire or electric shock.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND. (Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE. Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

DO NOT WATCH VIDEO WHILE DRIVING. Watching the video may distract the driver from looking ahead of the vehicle and cause an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISE WHILE DRIVING. Failure to do so may result in an accident.

USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS. Use for other than its designed application may result in fire, electric shock or other injury.

DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS. Doing so may result in personal injury or damage to the product.

DO NOT BLOCK VENTS OR RADIATOR PANELS. Doing so may cause heat to build up inside and may result in fire.



 **Caution**

This symbol means important instructions.

Failure to heed them can result in injury or property damage.

DO NOT MIX NEW BATTERIES WITH OLD BATTERIES. INSERT WITH THE CORRECT BATTERY POLARITY. When inserting the batteries, be sure to observe proper polarity (+ and -) as instructed. Rupture or chemical leakage from the battery may cause fire or personal injury.

HALT USE IMMEDIATELY IF A PROBLEM APPEARS. Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Center for repairing.





Precautions

Temperature

Be sure the temperature inside the vehicle is between +60°C (+140°F) and -10°C (+14°F) before turning your unit on.

Moisture Condensation

You may notice the CD playback sound wavering due to condensation. If this happens, remove the disc from the player and wait about an hour for the moisture to evaporate.

Damaged Disc

Do not attempt to play cracked, warped, or damaged discs. Playing a bad disc could severely damage the playback mechanism.

Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

Never Attempt the Following

Do not grip or pull out the disc while it is being pulled back into the player by the automatic reloading mechanism.

Do not attempt to insert a disc into the unit when the unit power is off.

Inserting Discs

Your player accepts only one disc at a time for playback. Do not attempt to load more than one disc.

Make sure the label side is facing up when you insert the disc. Your player will automatically eject any disc that is inserted incorrectly.

Playing a disc while driving on a very bumpy road may result in skips, but this will not scratch the disc or damage the player.

Irregular Shaped Discs

Make sure the discs you use in this unit do not have any irregularities. The outer and inner edges should be round and smooth. Use of irregularly shaped discs may cause damage to the mechanism.

New Discs

As a protective measure to prevent the CD from jamming, the CD player will automatically eject discs with irregular surfaces or inserted incorrectly. When a new disc is inserted into the player and ejected after initial loading, using your finger, feel around the inside of the centre hole and outside edge of the disc. If you feel any small bumps or irregularities, this could inhibit proper loading of the disc. To remove the bumps, rub the inside edge of the hole and outside edge of the disc with a ball-point pen or other such instrument, then insert the disc again.

Installation Location

Make sure the DVA-5205P will not be installed in a location subjected to:

- Direct sun and heat
- High humidity and water
- Excessive dust
- Excessive vibrations



Precautions

Warnings and Cautions	2
Contents	5



Quick Guide

About DVDs	6
Discs playable on this DVD player	7
When using remote control	8
Loading and unloading discs	9
Turning the power on and off	10
Switching between NTSC and PAL configuration	11
Adjusting the volume	11
Playing discs	12
Stopping playback	13
Fast-forwarding/fast-reversing	14
Finding the beginnings of chapters or tracks	14
Playing still frames (pausing)	15
Frame-by-frame playback	15
Slow motion playback	15



Convenient Functions

Searching by title number	16
Searching directly by chapter or track number ..	17
Searching by elapsed time	18
Chapter/track/title repeat playback	19
Switching the audio language	19
Switching the angle	20
Switching the subtitles (subtitle language)	20
Displaying the subtitles	21
Displaying the disc status	21
Video output ON/OFF	23

SET UP

Changing the Default Settings

Changing the default settings (setup)	24
Changing the language settings	24
Changing the TV screen settings	26
Changing the country code setting	27
Setting the rating level (parental lock)	28
Changing the downsampling setting	30
Changing the digital output setting	32
Changing the LED indicator setting	34

Custom setting – Changing the Closed Caption setting	35
Custom setting – Changing the Ai-NET settings	36
Custom setting – Changing the H.U. Control settings	38



Digital Audio Processor (Optional)

Operating the digital audio processor (optional)	40
Adjusting the parametric equalizer	41
Adjusting the surround settings	42
Storing the surround settings	43
Recalling the surround settings	44
Adjusting the time compensation	45
Using the Pro Logic mode	45
ADJUST – Setting the speaker mode	46
ADJUST – Adjusting the acoustic image ...	47
ADJUST – Mixing the rear audio channels	48
ADJUST – Center speaker time compensation	49
ADJUST – Rear speaker time compensation ...	50
ADJUST – Achieving powerful sound at low volumes ..	51
ADJUST – Adjusting the speaker level	52
MODE – Adjusting the volume, fader and balance	53
MODE – Adjusting the subwoofer	54
MODE – Turning the defeat function on and off	55



Operating from the Head Unit (CDA-7865R)

Operating from the head unit	56
Operating from the head unit's remote control unit	58

Others


Terminology	60
List of language codes	61
List of country codes	63
In case of difficulty	66
Specifications	67
Functions of remote control unit buttons ...	68




About DVDs

Music CDs and DVDs have grooves (tracks) in which the digital data is recorded. The data is represented as microscopic pits recorded into the track – these pits are read by a laser beam to play the disc. On DVDs, the density of the tracks and pits is twice that of CDs, so DVDs can contain more data in less space.

CD-ROMs

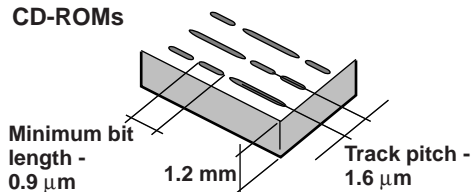

DVDs

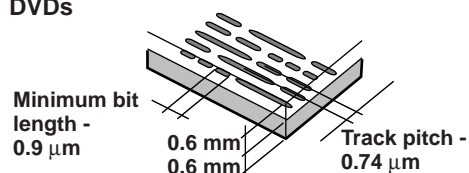

A 12 cm disc can contain one movie or about four hours of music.

In addition, DVDs provide sharp picture quality with vivid colors thanks to a horizontal resolution of over 500 lines (compared to less than 300 for VHS tape). With the addition of an optional, digital audio processor (PXA-H510), you can recreate the power and presence of a movie theater with Dolby Digital 5.1-channel Surround.

Moreover, DVDs offer a variety of functions.

- **Multiple audio*** (page 19)

Movies can be recorded in up to eight languages. The desired language can be selected from the remote control unit.

- **Subtitles function*** (page 20)

Movies can include subtitles in up to 32 languages. The desired subtitle language can be selected from the remote control unit.

- **Multi angle function*** (page 20)

When the DVD contains a movie shot from multiple angles, the desired angle can be selected from the remote control unit.

- **Multi story function***

With this function, a single movie includes various story lines. You can select different story lines to view various versions of the same movie. Operation differs from disc to disc. Story line selection screens including instructions appear during the movie. Just follow the instructions.

Note: * The functions audio languages, subtitle languages, angles, etc., differ from disc to disc. For details, refer to the disc's instructions.



Discs playable on this DVD player

• Playable discs

The discs listed below can be played on this DVD player. Other discs cannot be played.

	Mark (logo)	Recorded content	Disc size	Max. playing time
DVD Video		Audio + Video (Moving pictures)	12 cm*	One-sided disc Approx. 4 hours
				Two-sided disc Approx. 8 hours
			8 cm	One-sided disc Approx. 80 Minutes
				Two-sided disc Approx. 160 Minutes
Video CD		Audio + Video (Moving pictures)	12 cm	Approx. 74 Minutes
			8 cm	Approx. 20 Minutes
Music CD		Audio	12 cm	Approx. 74 Minutes
			8 cm (CD single)	Approx. 20 Minutes

* Two-layer DVD disc compatible

• Discs that cannot be played

DVD-ROMs, DVD-R/DVD-RAMs, CD-ROMs, CD-R/CD-RWs, photo CDs, etc.

• DVD region number (playable region number)

This DVD player will playback any disc whose region number is 2 (or All). DVDs on which you do not find a region number "2" or mark "ALL" listed below, cannot be played on this DVD player.



• Video CDs

This DVD player is compatible with playback control (PBC) compatible video CDs (version 2.0).

"PBC" is a function by which you can use menu screens recorded on the disc to find the scene you want to watch and view various types of information in dialog style.

• Disc terminology

Title

If titles are programmed for the DVD, these are the largest unit of division of the information recorded on the disc.

Chapter

 
Each Title may also be divided into smaller divisions called Chapters. These can be specific scenes or musical selections.

* This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

* **Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.**

* **"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, inc.**






When using remote control

When using remote control

• Mode Switch

To operate the DVD Player, make sure the mode switch is on "DVD". DVD operations are shown as the blue characters on the remote control unit.

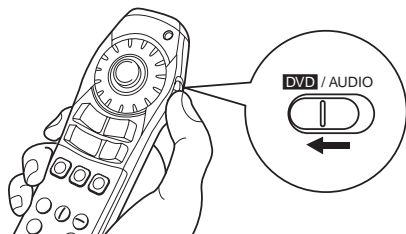


Switching to "AUDIO" mode, makes it possible to operate Alpine audio products as well. Audio operations are shown as the white characters on the remote control unit.


- Point the remote control at the remote sensor within about 2 meter.
- It may not be possible to operate the remote control unit if the remote control sensor is exposed to direct sunlight.
- The remote control is a small, light weight precision device. To avoid damage, short battery life, operational errors and poor button response, observe the following.
 - Do not apply any shock.
 - Do not put in a trouser pocket.
 - Keep away from food, moisture and dirt.
 - Do not place in direct sunshine.

Replacing the batteries


- 1** **Opening the battery cover**
Push on the cover and slide it as indicated by the arrows then the cover will be removed.

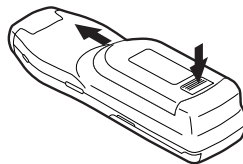

- 2** **Replacing the battery**
Remove the old batteries. Insert new ones matching the (+) and (-) polarities as shown in the diagram inside the remote control.

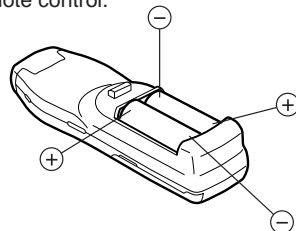

- 3** **Closing the cover**
Push the cover in the arrow direction until a click is heard.

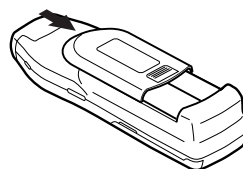

Note: Use two AA size batteries.



Warning

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE. Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.




Loading and unloading discs



Turn on the power before loading and unloading discs.
(Refer to page 10 "Turning the power on and off".)


Loading discs

- 1 Press the door in gently then slide it downwards.**

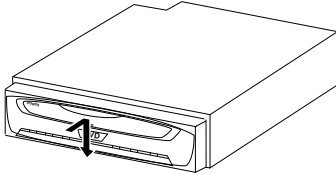


- 2 Insert the disc with the side containing words or diagrams facing upwards.**

Once the disc is partially inserted, it is drawn in automatically. Playback starts.

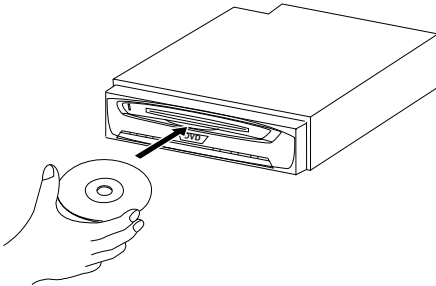


- 3 Close the door.**
Be sure to close the door to prevent dust from getting inside.

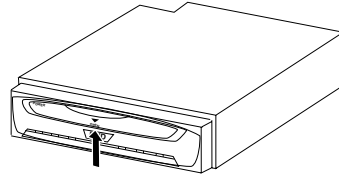

Unloading discs

- 1 Press the door in gently then slide it downwards. The disc is automatically ejected part way.**
If the disc is not removed, it is automatically drawn back into the player after a while.

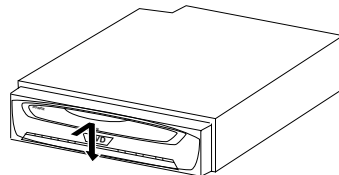

Notes:

- If the ignition key is on ACC or ON, a disc can be inserted even when the power is OFF. The power then goes ON automatically.
- For two-sided DVDs, play one side of the disc to the end, then unload the disc, turn it over and reload it to play the other side. Refer to the indications on the disc ("Side 1"/"Side 2").
- Never insert map discs for navigation purposes as they could damage the equipment.
- If wrong disc, upside-down discs or dirty discs have been inserted, "DISC ERROR" is displayed. Open the door and remove the disc.


Notes:

- If the ignition key is on ACC or ON, a disc can be removed even when the power is OFF. After removing the disc, the power goes OFF again automatically.
- Even if you open the door, the disc will not be ejected in the ACC OFF mode or in the disc loading mode ("LOADING" is displayed).

⚠ Caution Never close the door while the disc is being unloaded. Doing so could scratch the disc or damage the player.



Turning the power on and off

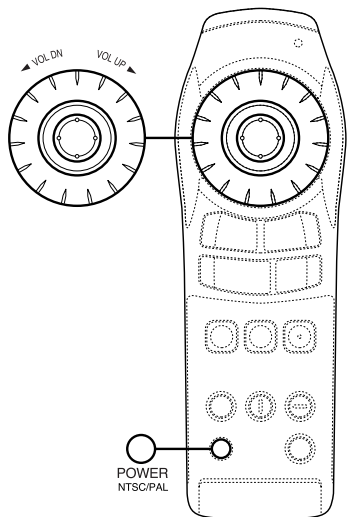

Turning the power on and off

- 1 Press "POWER".
The power turns on.



Caution When connected with an Alpine head unit

If the DVA-5205P is connected to anything other than the CVA-1005R/IVA-M700R/IVA-C800R (for ex.: CVA-1000R), the default DVD setting must be changed. See page 36, "Custom setting – Changing the Ai-NET settings" to change the SETUP to CD mode and see page 38, "Custom setting – Changing the H.U. CONTROL settings" to change the SETUP to ON mode before using it.

- 2 To turn the power off, press "POWER" again.

Play Position Memory Function

- Even if you turn power off or switch the Ignition Key to OFF during playback or change the video source, playback will continue from the point where playback stopped when the power is turned ON again.
The play position memory is released if the disc is removed or the Reset switch is pressed.

Notes:

- With this unit connected to an Ai-NET compatible head unit, there will be about a 3 second delay during power-up from the remote control. This is caused by the systems communications being carried out by the various components and is not a defect.
- When connected with an Ai-NET compatible head unit, the power cannot be turned off from the remote control unit. Turn off the DVA-5205P's power by switching the head unit's source. For details, refer to "Operating from the head unit" (page 56).

• Reading this manual



Stopping playback



Stopping playback

Press the stop button during playback to stop playback. That position is stored in the memory.

- 1 Press "■" during playback.



These indicate the discs for which the function can be used.

...DVDs

...Video CDs

...Music CDs

Tips • Using the PRE-STOP function (DVD, Video CD only)

When the PRE-STOP function is used, the position at which playback is stopped is stored in the memory, and playback resumes from that position.

- 1 Press "■" once during playback.
"PRE-STOP" is displayed.



- 2 Press "▶" in the PRE-STOP mode.
Playback starts from the position at which it was stopped.

This indicates supplementary explanation of operation of this system.



Switching between NTSC and PAL configuration

Switch the video output configuration to NTSC or PAL according to the type of television and the disc recording method.

- 1 Press "NTSC/PAL" for at least 5 seconds.



Notes:


- PAL is the standard and there is no need to change the setting. The system is set to PAL at time of shipment from the factory.
- The image output configuration must be correct. Otherwise the following message appears and playback does not start: "VIDEO SIGNAL SYSTEM IS NOT CORRECT".

Adjusting the volume

Adjust the volume for connecting only with the Digital Audio Processor (PXA-H510).

- 1 Move the rotary encoder to the right or left.

Turn to the right to increase the volume. Turn to the left to decrease the volume.

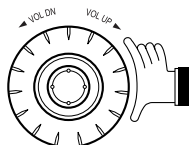

Note: If an Ai-NET product (head unit) has been connected in addition to the Digital Audio Processor (PXA-H510), or if this equipment is connected singly to a TV monitor, adjust the volume on the connected equipment.

Tips

Using the Number Keys.

This describes use of the Number Keys, particularly the "+10" key.

To input 10: Press the "+10" key once and then press the "0" key.

To input 16: Press the "+10" key once and then press the "6" key.


To input 23: Press the "+10" key twice and then press the "3" key.

* Each time the "+10" key is pressed, the number increases by 10.





Playing discs

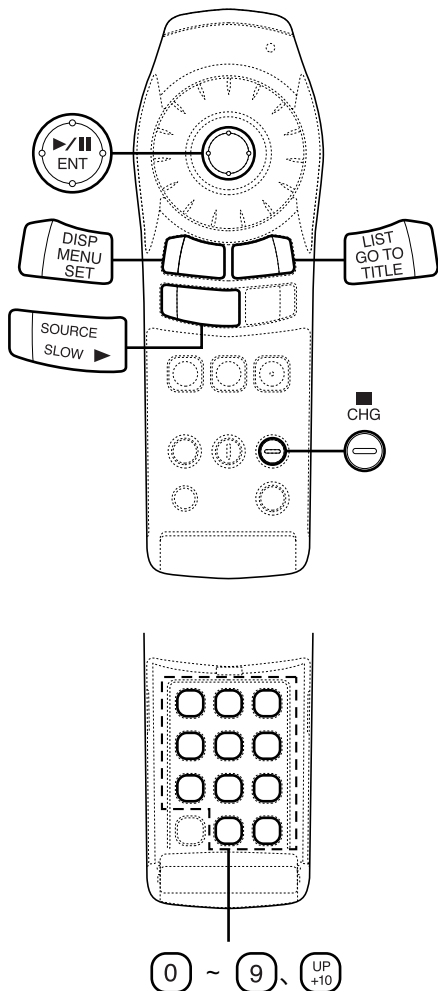


Playing discs



⚠ Caution

- With some DVDs, certain operations are disabled. Such operations are not possible on such DVDs.
- The DVD functions described in this manual are not supported by all DVDs. See the individual DVDs instructions for details on the features supported.
- Fingerprints on a disc may adversely affect playback. If a problem occurs, remove the disc and check for fingerprints on the playback side. Clean the disc if necessary.
- When using the remote control, be careful to press one button at time. Pressing multiple buttons at the same time may cause erroneous operation.
- Even if you switch the power or the Ignition Key to OFF during playback or change the video source, playback will continue from the point where it stopped when the power is turned ON again. If the disc is removed or the Reset switch is pressed, the play position memory is released.

- 1 Press "▶".
Playback starts.

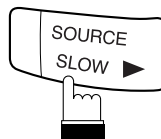

• If a menu screen appears


On DVDs and video CDs with playback control (PBC), menu screens may appear automatically. If this happens, perform the operation described below to start playback.

Note: For many discs, the menu screen can also be displayed by pressing "MENU" or "TITLE" (for at least 2 seconds).



DVD menu


Use the "Joystick" or the number keys ("0" to "9" and "+10") to select the desired item, then press "ENT" or "▶".

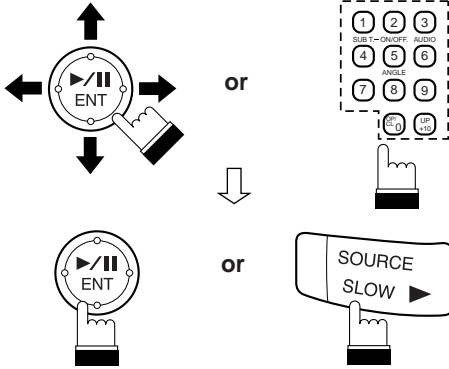

Note: For some discs it is not possible to select items from the menu screen using the number keys ("0" to "9" and "+10").

Video CD menu

Use the number keys ("0" to "9" and "+10") to select the desired number, then press "ENT" or "▶".

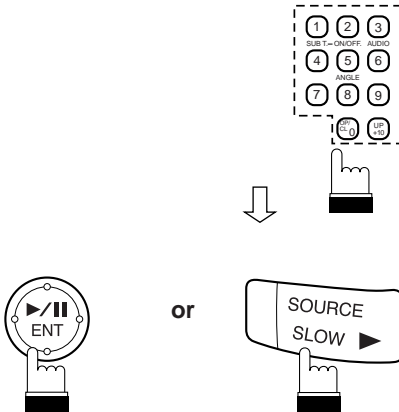


Note: The menu screen does not appear when the PBC function is turned off. If this is the case, press "MENU" to turn on the PBC function.

Stopping playback



Press the stop button during playback to stop playback. That position is stored in the memory.

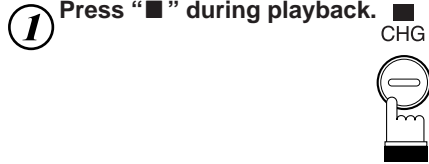

Tips: Using the PRE-STOP function (DVD, Video CD only)
When the PRE-STOP function is used, the position at which playback is stopped is stored in the memory, and playback resumes from that position.

1 Press "■" once during playback.
"PRE-STOP" is displayed.



2 Press "▶" in the PRE-STOP mode.
Playback starts from the position at which it was stopped.




Canceling the PRE-STOP function
Either press "■" again in the PRE-STOP mode or eject the disc and turn the power or the ignition key off to clear the memory.

Notes:

- For some discs, the position at which playback was stopped may not be accurate.
- Playback starts at the beginning of the disc **whenever** ignition is turned off or another Ai-NET source is selected.



Fast-forwarding/fast-reversing Finding the beginnings of chapters or tracks

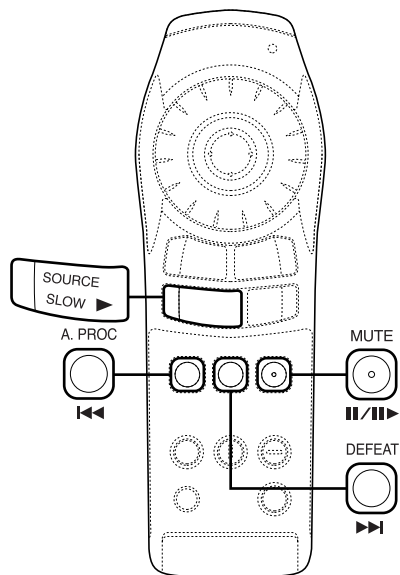

Fast-forwarding/ fast-reversing



- 1** During playback, press “◀◀” (fast-reverse) or “▶▶” (fast-forward) for at least 2 seconds.

A.PROC




or

DEFEAT



Press “▶” to return to normal playback.

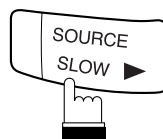

Notes:

- No sound or subtitles are played during fast-forwarding/fast-reversing.
- For DVDs and video CDs with playback control (PBC), the menu screen may reappear during fast-forwarding/fast-reversing.

Finding the begin- nings of chapters or tracks



- 1** During playback, press “◀◀” or “▶▶”.
- The chapter/track switches each time the button is pressed, and playback of the selected chapter/track starts.

A.PROC



or

DEFEAT



- ▶▶: Press this to start playback from the beginning of the following chapter or track.
- ◀◀: Press this to start playback from the beginning of the current chapter or track.

Playing still frames (pausing) Frame-by-frame playback Slow motion playback



Note: Some DVDs do not have chapters.

Supplementary explanation

“**Chapters**” are divisions of movies or musical selections on DVDs.

“**Tracks**” are divisions of movies or musical selections on video and music CDs.


Frame-by-frame playback



- 1** In the pause mode, press “||/||▶”. The picture advances by one frame each time the button is pressed.



Press “▶” to resume normal playback.

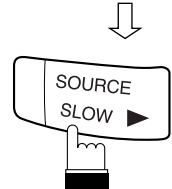


Note: No sound is played during frame-by-frame playback.


Playing still frames (pausing)



- 1** During playback, press “||/||▶” once.

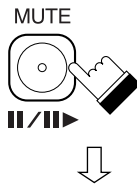

Press “▶” to resume playback.

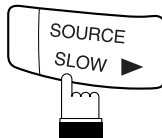


Notes:

- No sound is played during the still frame mode.
- When a playback starts after about 5 minutes of temporary still (pause), a picture or sound may stop for an instant period, but this is not a failure.


Slow motion playback



- 1** During playback, press “SLOW” for at least 2 seconds.

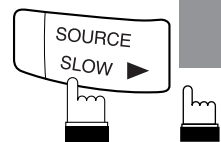

Press “▶” to resume normal playback.

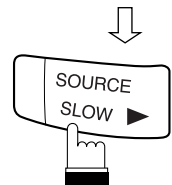


Notes:

- During the slow motion playback, the playback speed may change or the playback may skip to the next picture depending on the disc, but this is not a failure.
- No sound is played during slow motion playback.
- Slow playback is not available when playing back a slide show.



Searching by title number

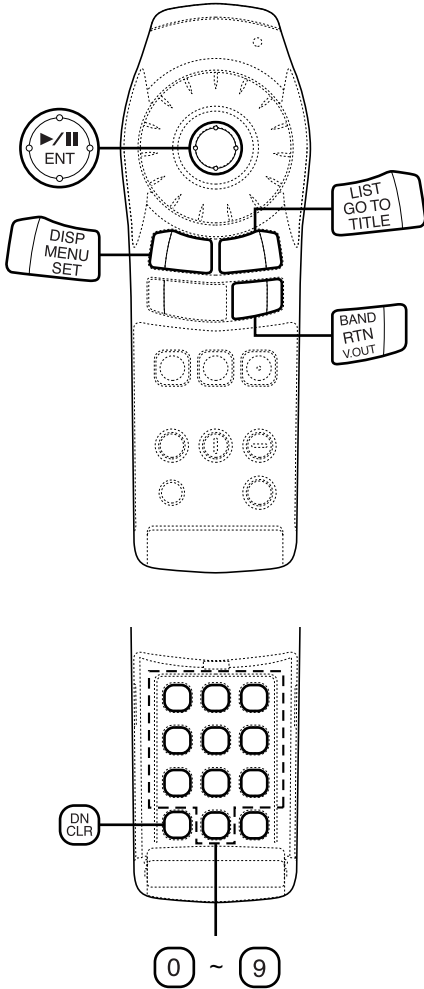


Searching by title number (DVD)

Use this function to easily find positions on the DVD using the DVD's title menu.



1 During playback, press "GO TO".

The mode switches each time the button is pressed. Select "TITLE".

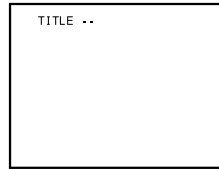

TITLE → CHAPT → TIME → Normal playback

2 Input the number of the title you want to play using the number keys ("0" to "9").

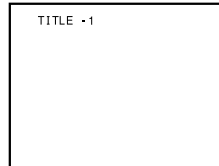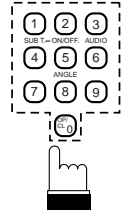

(When title number 1 is input)

Notes:

- This function cannot be used on discs on which no title numbers are recorded.
- To input the title number, the "+10" key is not used. Use the number keys "0" to "9".
- Press "CLR" to delete the last digit in the title number. Press "CLR" for at least 2 seconds to clear all title numbers.
- Press "RTN" to cancel the title search mode and resume normal playback.

Searching directly by chapter or track number



- 3** Press “ENT”.
Playback starts from the selected title number.



Notes:


- This function cannot be used on discs on which no chapter numbers are recorded.
- To input the chapter or track number, the “+10” key is not used. Use the number keys “0” to “9”.
- Press “CLR” to delete the last digit in the chapter/track number. Press “CLR” for at least 2 seconds to clear “Chapter” and “Track” numbers.
- Press “RTN” to cancel the chapter/track search mode and resume normal playback.
- With video discs containing playback control (PBC), function of “searching directly by track number” is not available under the PBC ON status. Press “MENU” to turn the PBC function off.

Searching directly by chapter or track number



Use this function to easily move to the beginnings of the chapters or tracks on the disc.



- 1** During playback, press “GO TO”.
The mode switches each time the button is pressed. Select “CHAPT” or “TRACK”.

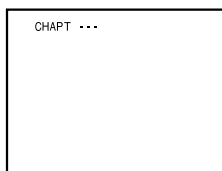

DVD Video
TITLE → CHAPT → TIME → Normal playback

Video-CD/CD
TRACK → TIME → Normal playback

 - 2** Input the number of the chapter or track you want to play using the number keys (“0” to “9”).

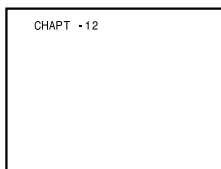


(When chapter number 12 is input)





Searching by elapsed time

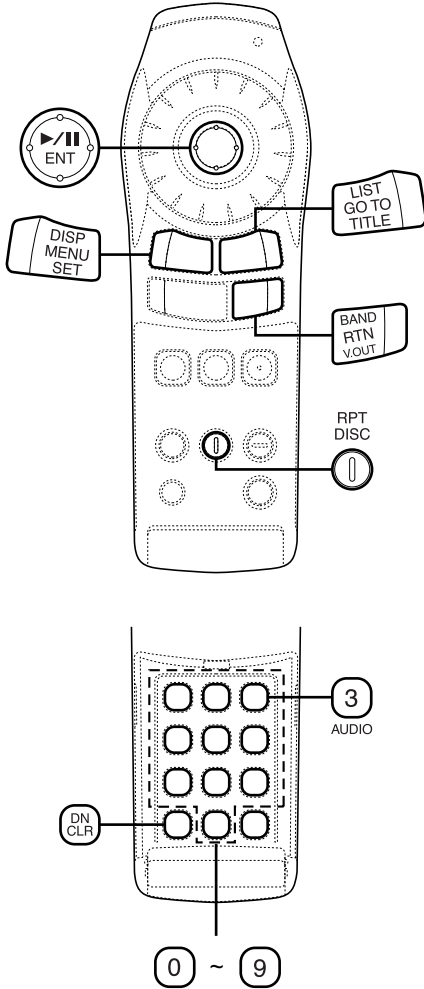


Searching by elapsed time



Use this function to search by specifying the elapsed time.



- 1** During playback, press “GO TO”. The mode switches each time the button is pressed. Select “TIME”.

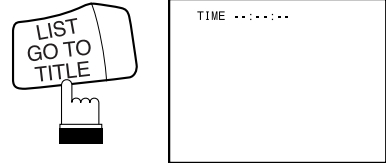

DVD Video
 TITLE → CHAPT → TIME → Normal playback

Video-CD/CD
 TRACK → TIME → Normal playback

- 2** Input the elapsed time from which you want to start playback using the number keys (“0” to “9”).

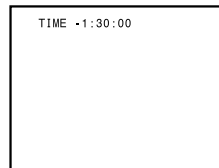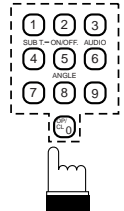

(When 1 hour, 30 minutes is input as the elapsed time)

Notes:

- Input the hours first, followed by the minutes, then the seconds.
- To input the elapsed time, the “+10” key is not used. Use the number keys “0” to “9”.
- Press “CLR” to delete the last digit in the elapsed time. Press “CLR” for at least 2 seconds to erase all the set times.
- Press “RTN” to cancel the elapsed time search mode and resume normal playback.
- With DVDs, the precision of the elapsed time search function differs from disc to disc.
- With video discs containing playback control (PBC), function of “searching by elapsed time” is not available under the PBC ON status. Press “MENU” to turn the PBC function off.



- 3** Press “ENT”.
Playback starts from the specified elapsed time.



Switching the audio language



On DVDs including multiple audio modes or multiple audio languages, the audio language can be switched during playback.

- 1** During playback, press “AUDIO” for at least 2 seconds.

The sound switches between the different audio modes recorded on the disc each time the button is pressed.



Chapter/track/ title repeat playback



Use this function to play the disc’s titles, chapters or tracks repeatedly.

- 1** During playback, press “RPT”.

The repeat mode switches each time the button is pressed.


RPT
DISC



Notes:

- The language selected with the default settings is set when the power is turned on or the disc is replaced. If the disc does not include that language, the disc’s default language is set.
- For some discs it is not possible to switch the audio language during playback.
- Some time may be required for the audio language to change.

DVD

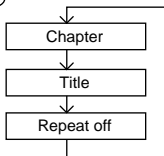


The chapter is played repeatedly.

The title is played repeatedly.

The mode returns to normal playback (setting at factory shipping)

Video CD CD

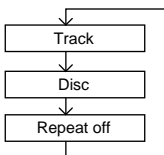

The track is played repeatedly.

The entire disc is played repeatedly.

(setting at factory shipping)

- 1** During playback, press “AUDIO” for at least 2 seconds.

The combination of the left and right channels changes each time the button is pressed.




→ LL → RR → LR

Note: The track/disc repeat modes cannot be used on video CDs with playback control (PBC). Press “MENU” to turn the PBC function off.



Switching the angle Switching the subtitles (subtitle language)

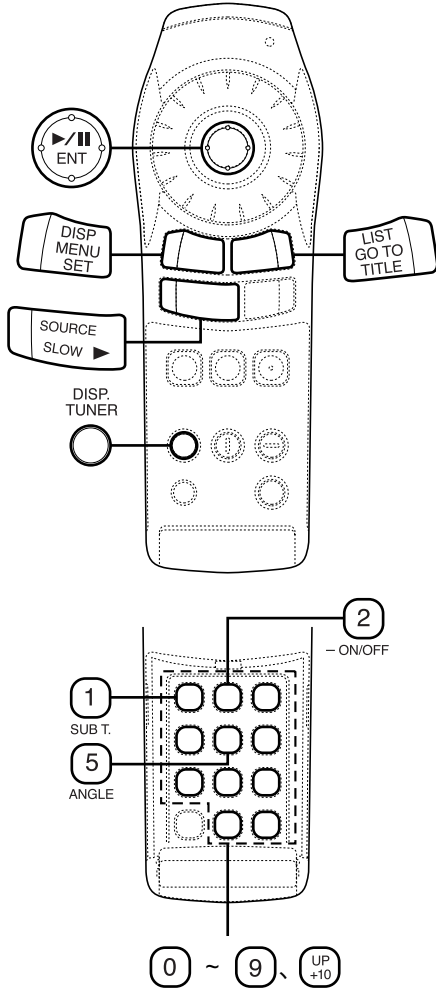

Switching the angle (DVD)

With DVDs on which images photographed from multiple angles are recorded, the angle can be switched during playback.

1 During playback, press “ANGLE” for at least 2 seconds.

The angle switches between the angles recorded on the disc each time the button is pressed.



Notes:

- Some time may be required for the angle to change.
- Depending on the disc, the angle may switch in one of two ways.
 - Seamless : The angle switches smoothly.
 - Non-seamless : When the angle is switched, a still picture is displayed first, after which the angle switches.

Switching the subtitles (subtitle language) (DVD)

With DVDs on which multiple subtitle languages are recorded, the subtitle language can be switched during playback.

1 During playback, press “SUB T.” for at least 2 seconds.

The subtitle language switches between the languages recorded on the disc each time the button is pressed.



Notes:


- Some time may be required for the subtitle language to change.
- The language selected with the default settings is set when the power is turned on or the disc is replaced. If the disc does not include that language, the disc's default language is set.



Displaying the subtitles



With DVDs on which subtitles are recorded, you can select whether to display the subtitles or not during playback.

- 1 During playback, press “– ON/OFF” for at least 2 seconds. 


The currently displayed subtitles are turned on and off each time the button is pressed.

Note: For some discs, the subtitles will be displayed even when this is set to off.


Displaying the disc status



Use the procedure described below to display the status (title number, chapter number, etc.) of the currently playing DVD on the screen.

- 1 During playback, press “DISP.”. 

The playback status is displayed.

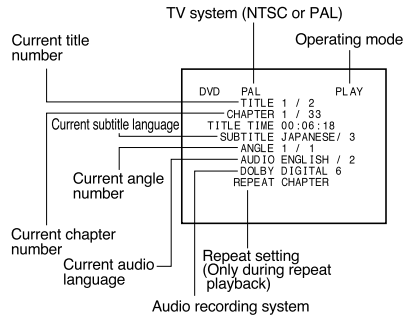



- **Switching from the menu**
For some discs, the audio language, angle and subtitles can be switched from the disc menu.

- 1 Press “MENU” or “TITLE” (for at least 2 seconds), select the item, then press “ENT”.




- 2 Use the “Joystick” or the number keys (“0” to “9” and “+10”) to select the language or angle, then press “ENT” or “▶”.

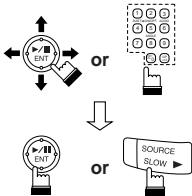

- 2 Press “DISP.” once more to turn the display off.  



Displaying the disc status

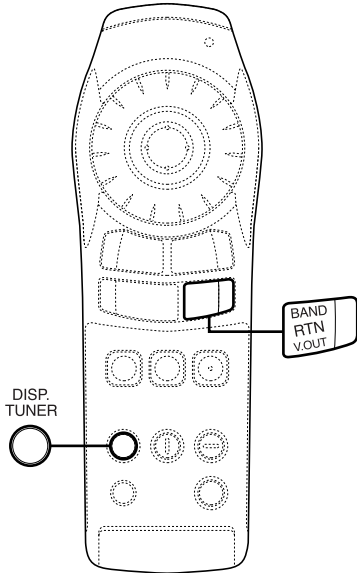

Displaying the disc status



Use the procedure described below to display the status (track number, etc.) of the currently playing video CD or music CD on the screen.

1 During playback, press "DISP.".

The playback status is displayed.

DISP.
TUNER



Playback control (PBC)

ON/OFF (For video CDs only)

TV system (NTSC or PAL)

Playback disc

(CD: Music CD

VCD: Video CD)


Operating mode

Current track

number

Track playback

time

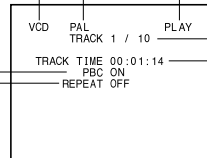

Repeat setting (Default setting-disc repeat)

Note: For music CDs, the playing status is displayed even when "DISP." is not pressed.

2 Press "DISP." once more to turn the display off.

DISP.
TUNER





Video output ON/OFF (Only when CVA-1005R/IVA-M700R/ IVA-C800R is connected)

When this unit is used with the CVA-1005R/IVA-M700R/IVA-C800R + the TME-M750 (Extra Monitor for Rear Seat), the DVD video can be viewed independently of what's being viewed on the CVA-1005R/IVA-M700R/IVA-C800R.

For example, DVD video can be monitored on the Rear Monitor, while a Navigation map is displayed on the CVA-1005R/IVA-M700R/IVA-C800R. If an audio source is selected, the main audio system will be used to listen to the CVA-1005R/IVA-M700R/IVA-C800R. Use the RCA connectors at the rear of the DVA-5205P to feed audio to your Rear monitor.

Note: This output is at a fixed level and requires a preamp with a volume control to adjust listening levels.

1 Set **AUX OUT** of “**Selecting Rear Monitor**” on the **CVA-1005R/IVA-M700R/IVA-C800R** side to **AUX 1**.

2 Change the source on the **CVA-1005R/IVA-M700R/IVA-C800R** side to **MD, CD, radio, etc.**

3 Use the “**Playing 2 Sources Simultaneously**” function on the **CVA-1005R/IVA-M700R/IVA-C800R** side to select **DVD** with the **V.SEL** button.

4 Press “**V.OUT**” on the remote control unit for this equipment at least **2 seconds**.



To release, press “**V.OUT**” for at least 2 seconds.



Note: Refer to the Instruction Manual of the CVA-1005R/IVA-M700R/IVA-C800R for operation on the CVA-1005R/IVA-M700R/IVA-C800R side.



2 Use the “Joystick” to make the selection, then press “ENT”.

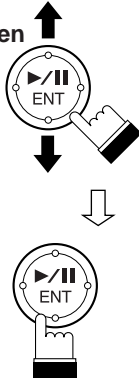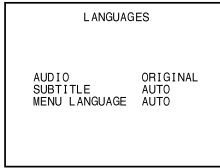

AUDIO

Set the audio language produced from the speakers.

SUBTITLE

Set the language of the subtitles displayed on the screen.


MENU LANGUAGE

Set the language used for the menus (title menu, etc.).


The setup screen for the selected language is displayed.



AUDIO
(audio languages)

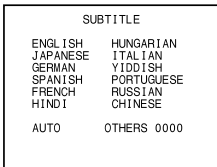

SUBTITLE
(subtitle languages)

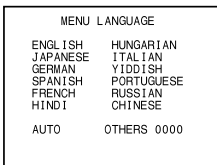

MENU LANGUAGE
(menu languages)

ORIGINAL

The disc is played with the audio language set as the priority language for the disc. (AUDIO only)


AUTO

The disc is played with the subtitle language set as the priority language for the disc. (SUBTITLE/MENU LANGUAGE only)


OTHERS

Set this to play the disc with a language other than one of the languages displayed. Use the keys “0” to “9” to input the 4-digit language code, then press “ENT”. For the language codes, refer to “List of language codes” (page 61).

3 Use the “Joystick” to select the desired language, then press “ENT”.

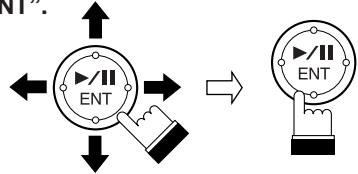

Displays the setting contents.

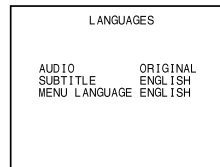


SET UP



Notes:

- If the disc does not include the selected language, the disc's default language is set.
- Languages set upon shipment from the factory:
Audio language : ORIGINAL
Subtitle language : AUTO
Menu language : AUTO
- Press “RTN” to return to the previous screen.

4 Press “SET” for at least 2 seconds.

The settings are stored and the set up mode is canceled.

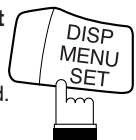

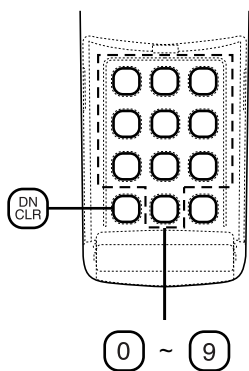
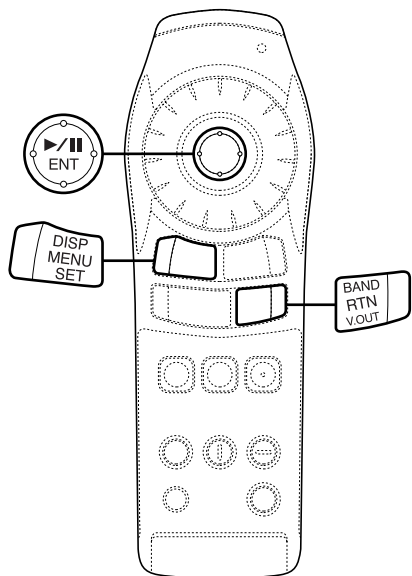


Changing the TV screen settings

Use the procedure described below to set the output screen according to the type of TV monitor being used.

1 Select “TV SCREEN” under “Changing the default settings (SET UP)” on page 24.

2 Use the “Joystick” to make the selection, then press “ENT”.

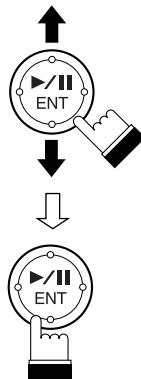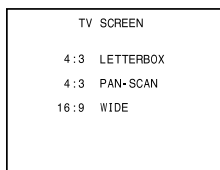

4 : 3 LETTERBOX

Select this when connected to a conventional 4:3 size (normal TV aspect ratio) monitor. There may be black stripes visible at the top and bottom of the screen. The width of these stripes will depend upon the original aspect ratio of the theatrical release of the movie.



4 : 3 PAN-SCAN

Select this when connected to a conventional 4:3 size monitor. The picture will fill the entire TV screen. However, due to the mismatch in aspect ratio, parts of the movie at the extreme left and right sides will not be visible.




Changing the country code setting

16 : 9 WIDE

Select this when connected to a wide screen TV. This is selected upon shipment from the factory.



Displays the setting contents.

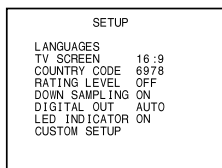


Notes:

- For some discs, the picture may not be set to the selected screen size. (For details, refer to the explanation on the disc's jacket.)
- Press "RTN" to return to the previous screen.

3 Press "SET" for at least 2 seconds.

The settings are stored and the set up mode is canceled.

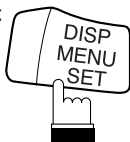


Changing the country code setting



Set the country code when setting the rating level (Parental lock).

1 Select "COUNTRY CODE" under "Changing the default settings (SET UP)" on page 24.

2 Press "ENT" to reset the country code.

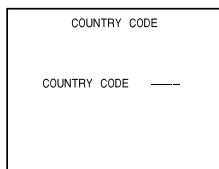


 3 Use keys "0" to "9" to input the 4-digit country code, then press "ENT".

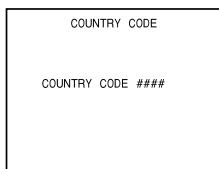

SET UP

Displays the setting contents.

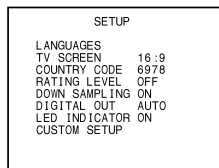




Notes:

- For the country codes, refer to "List of country codes" (Page 63).
- Can be erased one digit at a time each time "CLR" is pressed.
- Press "RTN" to return to the previous screen.

4 Press "SET" for at least 2 seconds.

The settings are stored and the set up mode is canceled.

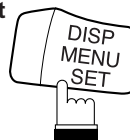

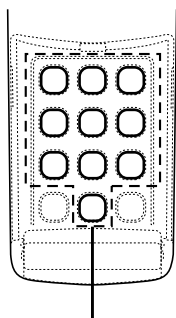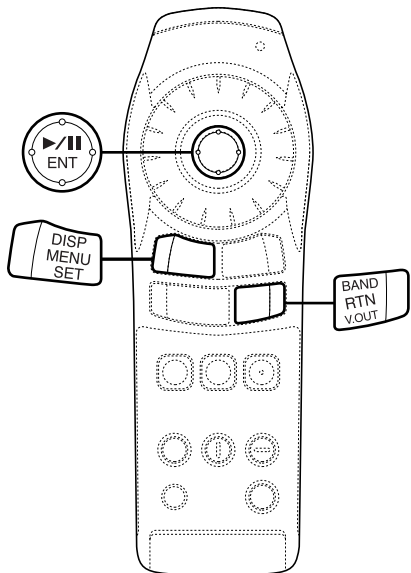


0 ~ 9

Setting the rating level (parental lock)

Use this function to restrict the viewing of movies to children of appropriate age levels only.



1 Select "RATING LEVEL" under "Changing the default settings (SET UP)" on page 24.

2 Press "ENT".
The password input mode is set.

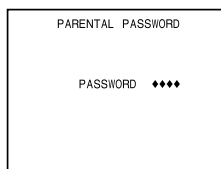


3 Use keys "0" to "9" to input the 4-digit password.

 The default password is 1111 upon shipment from the factory.

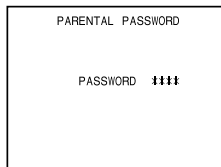


Input numbers are displayed "x".

4 Press "ENT".

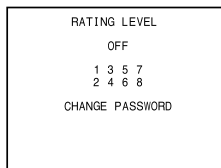


Setting the rating level (parental lock)

- 5** Use the “Joystick” to select the rating level, then press “ENT”. Select “OFF” to cancel the parental lock or if you do not want to set a rating level. The higher the number, the higher the rating level.

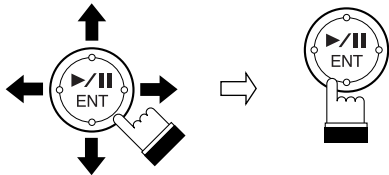


Displays the setting contents.

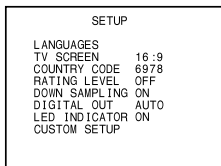

Note: Press “RTN” to return to the previous screen.

- 6** Press “SET” for at least 2 seconds.

The settings are stored and the set up mode is canceled.

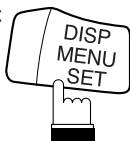

Notes:


- If you want to change the password, select “CHANGE PASSWORD”, then input the new password (4 digits).
- Write down the password on a piece of paper and store the piece of paper somewhere in case you forget it.
- On unrated DVDs, playback will not be restricted even if the rating level is set.
- Once set, this rating level remains in memory until changed. To enable the play of discs of higher rating levels or to cancel the parental lock, the setting must be changed.
- Not all DVDs provide a Parental Lock feature. If you are unsure about a DVD, play it first to confirm. Do not leave DVDs accessible to young children for whom you deem them inappropriate.




• Changing the rating level temporarily

Some discs may request that you change the rating level set in the default settings during playback. In this case, the following message appears on the screen:

Still picture

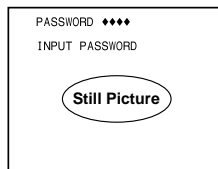



When this appears, if you do not input the correct password either playback does not continue or a picture for a different rating level is played.

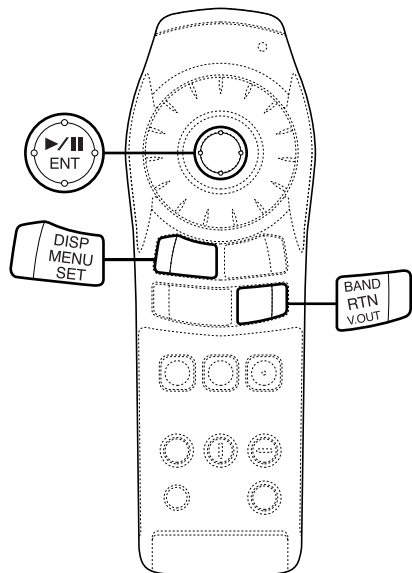

Changing the down sampling setting

Converts linear PCM (LPCM) voice signals recorded on the DVD disc to downsampling 48 kHz/16 bit digital signals and outputs them from the optical cable.

- 1 Select "DOWN SAMPLING" under "Changing the default settings (SET UP)" on page 24.
- 2 Move the "Joystick" up and down to choose "ON" or "OFF" and, then press "ENT".

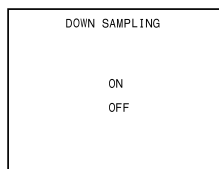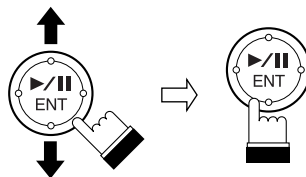

ON

The digital signals recorded on the DVD disc with 96 kHz/24bit, 48 kHz/24bit, 48 kHz/20bit sampling are converted into digital signals with 48 kHz/16bits sampling for output from the optical cable. Set to ON at time of shipment from factory.

OFF

The digital signals recorded on the DVD disc with 96 kHz/24bit, 48 kHz/24bit, 48 kHz/20bit sampling are not converted into digital signals with 48 kHz/16bits sampling. They are not output from the optical cable.


Displays the setting contents.


```
SETUP
LANGUAGES
TV SCREEN 16:9
COUNTRY CODE 6978
RATING LEVEL OFF
DOWN SAMPLING ON
DIGITAL OUT AUTO
LED INDICATOR ON
CUSTOM SETUP
```

Note: Press "RTN" to return to the previous screen.

3 Press "SET" for at least 2 seconds.

The settings are stored and the set up mode is canceled.

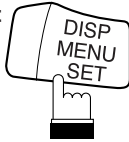

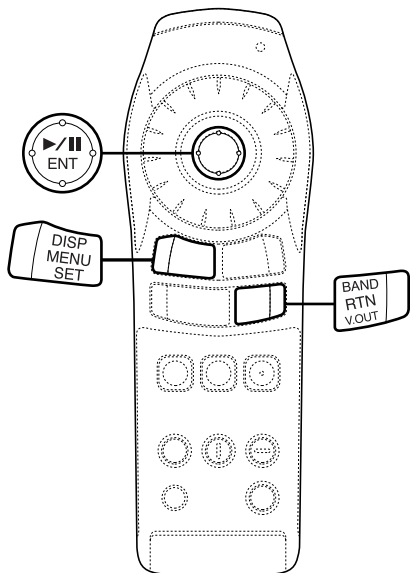


Changing the digital output setting

Use the following procedure to set the audio signal output from the DVA-5205P.

① Select “DIGITAL OUT” under “Changing the default settings (SET UP)” on page 24.

② Use the “Joystick” to make the selection, then press “ENT”.

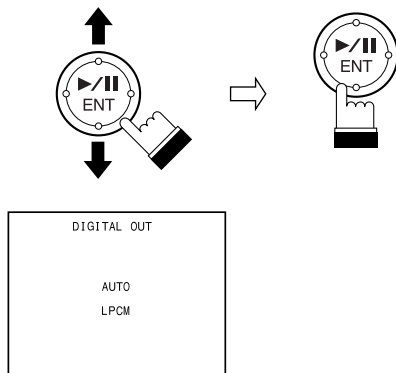

AUTO

The digital output is switched automatically according to the type of audio signals being played.


Be sure to select “AUTO” when you want to connect a digital audio processor and play Dolby Digital audio. “AUTO” is selected upon shipment from the factory.

LPCM

The audio signals recorded on the disc are converted into 48 kHz/16 bit (for DVDs) or 44.1 kHz (for video CDs and CDs) linear PCM audio signals for output.


Changing the digital output setting

Displays the setting contents.

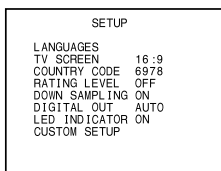

3 Press “SET” for at least 2 seconds.


The set up are stored and the set up mode is canceled.

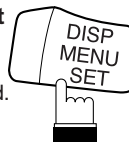

Note: Press “RTN” to return to the previous screen.

• Audio output/Optical digital audio output



Disc	Audio recording format	Digital output setting	Down sampling setting	Optical digital audio output (when a digital audio processor is connected)	Analog audio output (Ai-NET, RCA output)
DVD	DTS	AUTO	ON	DTS	X
			OFF	DTS	X
		LPCM	ON	X	X
			OFF	X	X
	Dolby Digital	AUTO	ON	Dolby Digital	O
			OFF	Dolby Digital	O
		LPCM	ON	LPCM (48kHz/16 bit)	O
			OFF	X	O
	Linear PCM (48 kHz)	AUTO	ON	LPCM (48kHz/16 bit)	O
			OFF	X	O
		LPCM	ON	LPCM (48kHz/16 bit)	O
			OFF	X	O
Linear PCM (96 kHz)	AUTO	ON	LPCM (48kHz/16 bit)	O	
		OFF	X	O	
	LPCM	ON	LPCM (48kHz/16 bit)	O	
		OFF	X	O	
Video CD	MPEG	AUTO or LPCM	ON or OFF	LPCM (44.1kHz)	O
CD	Linear PCM	AUTO or LPCM	ON or OFF	LPCM (44.1kHz)	O

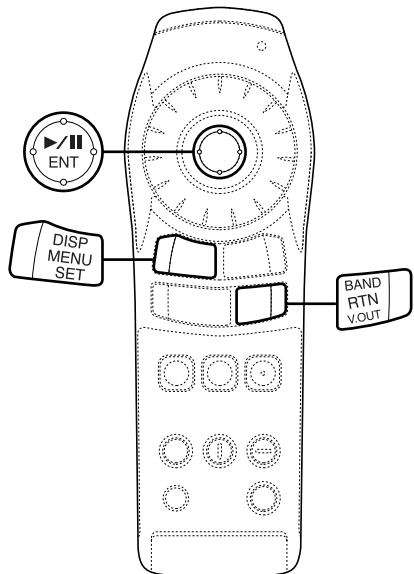

Changing the LED indicator setting

Use the following procedure to set whether or not the product's LED indicators are on or off.

- 1 Select "LED INDICATOR" under "Changing the default settings (SET UP)" on page 24.
- 2 Use the "Joystick" to select the "ON" or "OFF", then press "ENT".

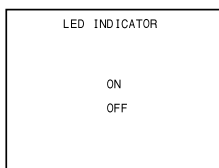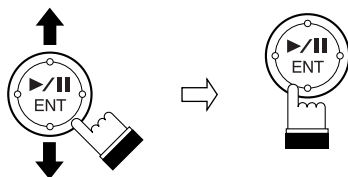

ON


The LED indicators are lit, indicating the product's operating status. "ON" is selected upon shipment from the factory.

OFF

The LED indicators are turned off. When "OFF" is set, the indicators do not light even when the power is on.

Custom setting – Changing the Closed Caption setting

Displays the setting contents.

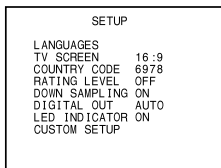

Note: Press "RTN" to return to the previous screen.

- ③ Press "SET" for at least 2 seconds. The settings are stored and the set up mode is canceled.





Custom setting – Changing the Closed Caption setting



DVD includes so-called "closed captions" which describe the scene to persons with impaired hearing. It is possible to turn the closed captions ON and OFF.

- ① Select "CUSTOM SETUP" under "Changing the default settings (SET UP)" on page 24.

- ② Move the "Joystick" up and down to select "CLOSED CAPTION", then press "ENT".

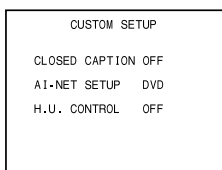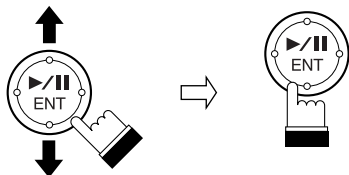

- ③ Move the "Joystick" up and down to select "ON" or "OFF", then press "ENT".

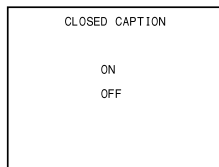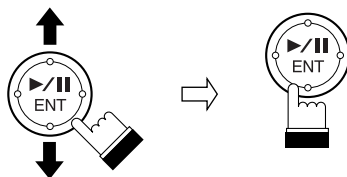


ON

Displays the closed captions.

OFF

Does not display the closed captions. Set to OFF at time of shipment from factory.


Displays the setting contents.

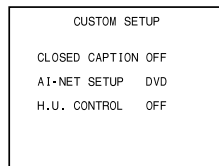


Notes:

- Please be aware that closed captions are different from titles.
- Press "RTN" to return to the previous screen.

- ④ Press "SET" for at least 2 seconds. The settings are stored and the set up mode is canceled.

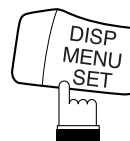


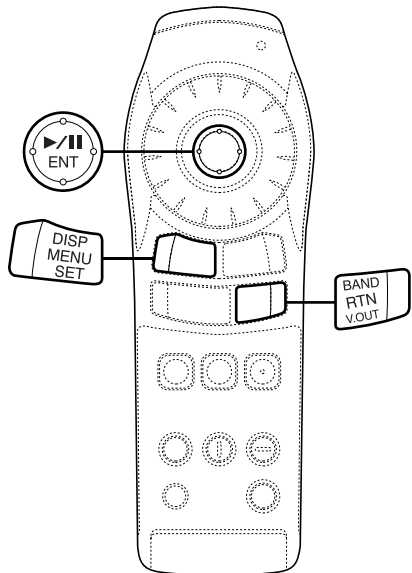


Custom setting – Changing the Ai-NET settings

The Ai-NET settings are used to output the sound of connected Ai-NET products.

- 1 Select “CUSTOM SETUP” under “Changing the default settings (SET UP)” on page 24.
- 2 Use the “Joystick” to select “Ai-NET SETUP”, then press “ENT”.

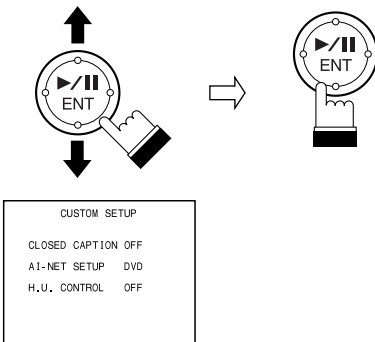

- 3 Use the “Joystick” to select “DVD” or “CD”, then press “ENT”.

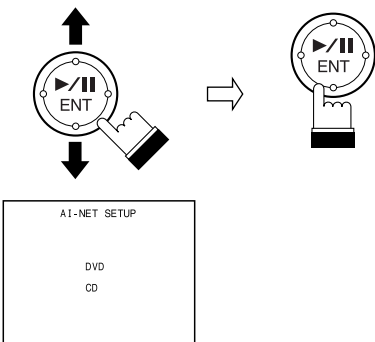

Custom setting – Changing the Ai-NET settings


DVD

Set to "DVD" when connected to the CVA-1005R/IVA-M700R/IVA-C800R. Operations can be performed using the CVA-1005R/IVA-M700R/IVA-C800R's main menu screen. For details, refer to the operating instructions of the CVA-1005R/IVA-M700R/IVA-C800R. "DVD" is selected upon shipment from the factory.

CD

Set to "CD" when connected to an Ai-NET product (head unit) other than the CVA-1005R/IVA-M700R/IVA-C800R (for ex.: CVA-1000R). Operations can be performed from the head unit. For details, refer to "Operating from the head unit" (page 56).

Displays the setting contents.

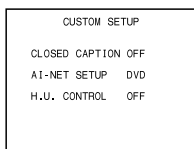


Notes:

- Press "RTN" to return to the previous screen.
- If the Ai-NET setting is "CD" when used with the CVA-1005R/IVA-M700R/IVA-C800R, operation from the main menu screen is not possible.
- If the Ai-NET setting is "DVD" when used with any Ai-NET compatible head unit other than the CVA-1005R/IVA-M700R/IVA-C800R, volume is the only operation possible from the head unit.
- To call the DVD video by using the CVA-1000R, switch the mode to "AUX" with the V. SEL button on the CVA-1000R.
- When the Ai-NET setting is "CD", the operable functions and displays may differ depending on the Ai-NET compatible head unit connected.

4 Press "SET" for at least 2 seconds.

The settings are stored and the set up mode is canceled.

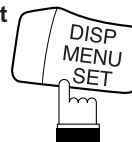

5 Turn off the vehicle's ignition, then turn it on again.

Notes:


Cases in which DVDs cannot be played on the CVA-1005R/IVA-M700R/IVA-C800R side

- When "DVD" is not displayed on the CVA-1005R/IVA-M700R/IVA-C800R side menu screen
- When DVDs cannot be played even when AUX1 is selected

This is because the DVA-5205P's Ai-NET setting is set to "CD".

Use the procedure described below to change the setting.

1. Remove the disc from the DVA-5205P.
2. Turn on the power of the DVA-5205P and CVA-1005R/IVA-M700R/IVA-C800R. Also start up the CVA-1005R/IVA-M700R/IVA-C800R monitor.
3. Press the CVA-1005R/IVA-M700R/IVA-C800R SOURCE switch and select "CD" from the menu.
4. Press the SOURCE switch, then select "V.SEL" from the menu.
5. In the V.SEL mode, select "AUX1". This displays the DVA-5205P screen.
6. On the DVA-5205P, set the Ai-NET setting to "DVD". Refer to "Changing the Ai-NET settings" (pages 36 and 37).
7. Turn the car's ignition switch off, then turn it back on.


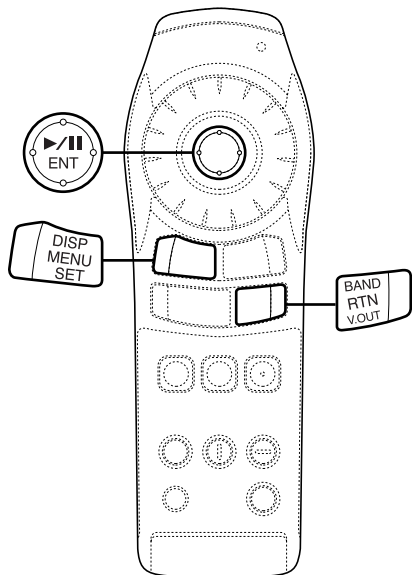


Custom setting – Changing the H.U. CONTROL settings



When connecting this equipment with an Ai-NET compatible head unit or an Ai-NET compatible AV head unit (CVA-1005R/IVA-M700R/IVA-C800R), set the equipment so that it is possible to control from the head unit.

1 Select “CUSTOM SETUP” under “Changing the default settings (SET UP)” on page 24.

2 Move the “Joystick” up and down to select “H.U. CONTROL”, then press “ENT”.

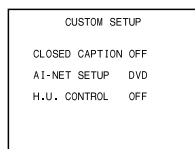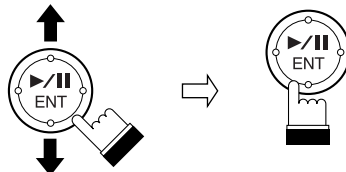

3 Move the “Joystick” up and down to select “ON” or “OFF”, then press “ENT”.

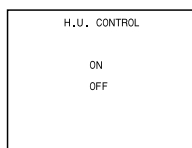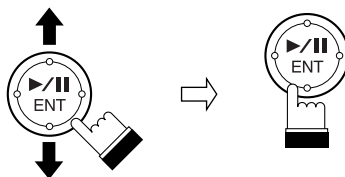

Custom setting – Changing the H.U. CONTROL settings


ON

Possible to operate from an Ai-NET compatible head unit or an Ai-NET compatible AV head unit (CVA-1005R/IVA-M700R/IVA-C800R).

OFF

Not possible to operate from an Ai-NET compatible head unit or an Ai-NET compatible AV head unit (CVA-1005R/IVA-M700R/IVA-C800R). Set to OFF at time of shipment from factory.

Displays the setting contents.

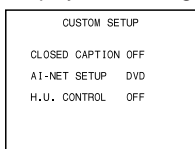

Note: Press "RTN" to return to the previous screen.

4 Press "SET" for at least 2 seconds.

The settings are stored and the set up mode is canceled.

