


RUE-4135

Remote controller for DVD navigation System

Owner's Manual

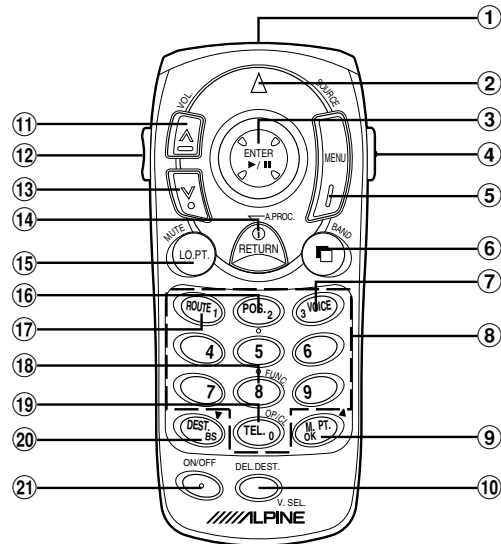

- ⑩ DEL. DEST Button
- ⑪ -
- ⑫ AUDIO/NAV. Button
- ⑬ -
- ⑭ RETURN Button
- ⑮ LO.PT. Button
- ⑯ POS. Button
- ⑰ ROUTE Button
- ⑱ -
- ⑲ -
- ⑳ DEST./BS Button
- ㉑ Power ON/OFF Button

Head Unit Control Mode

- ① Remote Control Transmitter
- ② Status indicator
- ③ Radio mode: Preset Selection (↑ / ↓)
SEEK UP/DOWN (← / →)
CD/MD Player/Changer mode: PLAY/PAUSE (Push),
Disc Selection (↑ / ↓),
Music Sensor (← / →),
BW/FF (← / → Hold)
- Tape mode: PLAY/PAUSE (Push)
Programme Sensor (↑ / ↓), REW/FF (← / →)
- ④ MODE Button
- ⑤ SOURCE Button
- ⑥ BAND Button
- ⑦ -
- ⑧ -
- ⑨ ▲ (Display Angle Up) Button
- ⑩ -
- ⑪ Volume Up Button
- ⑫ AUDIO/NAV. Button
- ⑬ Volume Down Button
- ⑭ A.PROC. Button
- ⑮ MUTE Button
- ⑯ -
- ⑰ -
- ⑱ -
- ⑲ -
- ⑳ ▼ (Display Angle Down) Button
- ㉑ Power ON/OFF Button

AV Head Unit Control Mode

- ① Remote Control Transmitter
- ② Status indicator
- ③ Radio mode: Preset Selection (↑ / ↓)
SEEK UP/DOWN (← / →)
CD/MD Player/Changer mode: PLAY/PAUSE or Audio Mode (Push)
Disc Selection (↑ / ↓),
Music Sensor (← / →),
BW/FF (← / → Hold)
- Tape mode: PLAY/PAUSE (Push)
Programme Sensor (↑ / ↓), REW/FF (← / →)
- ④ MODE Button
- ⑤ SOURCE Button
- ⑥ BAND Button
- ⑦ -
- ⑧ Numerick Keypad
- ⑨ ▲ (Display Angle Up) Button
- ⑩ V.SEL. Button
- ⑪ Volume Up Button
- ⑫ AUDIO/NAV. Button
- ⑬ Volume Down Button
- ⑭ A.PROC. Button
- ⑮ MUTE Button
- ⑯ -
- ⑰ -
- ⑱ FUNC. Button
- ⑲ OP./CL. (Display Open/Close) Button
- ⑳ ▼ (Display Angle Down) Button
- ㉑ Power ON/OFF Button


Notes:

- Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.
- After pressing the MODE button, press the following buttons while the status indicator is blinking:
MAP type navigation: Numerick Keypad (0 to 9), BS button, OK button
Arrow type navigation: Numerick Keypad (0 to 9), BS button, OK button
Head Unit: ▲ (Display Angle Up) Button,
▼ (Display Angle Down) Button
AV Head Unit: OP./CL. Button, ▲ (Display Angle Up) Button,
▼ (Display Angle Down) Button

Installation of Remote Control Holder

- If direct sunlight reaches the remote control mounted on the holder, remove the remote control from the holder and put it in the glove compartment.
- If double-sided adhesive tape cannot install the holder securely, use screws.

Note: Attach the blue protective paper side of double-sided tape onto the console box, etc.

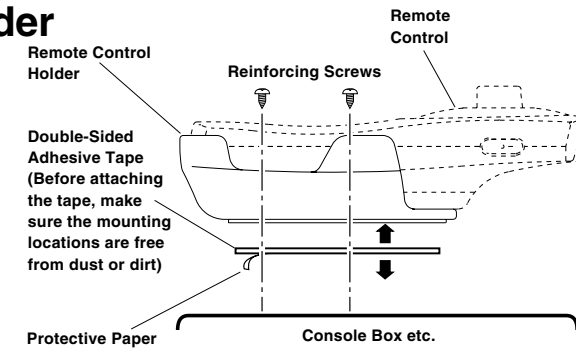

Handling Precautions

Do not drop or apply shock to the unit. It may get permanently damaged.

Keep the unit away from water and moisture, direct sun and heat, and excessive dust.

Never use scouring pads, steel wool, abrasive powders or harsh chemical agents, such as lye solution, for cleaning.


Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water.

Do not operate this unit in a manner that could distract you from driving safety.


Battery Replacement

Applicable battery: Use two "AAA" sized dry batteries or equivalent.


1

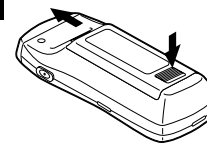

2

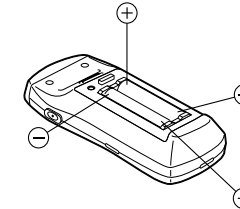

3

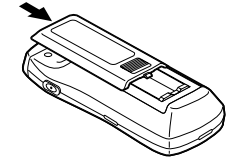

Opening the battery cover.

Push on the cover and slide it as indicated by the arrows then the cover will be removed.

Replacing the batteries.

Remove the old batteries. Insert new ones matching the (+) and (-) polarities as shown in the diagram inside the remote control.

Closing the cover.

Push the cover in the arrow direction until a click is heard.

Map type Navigation Control Mode

- ① Remote Control Transmitter
- ② Status indicator
- ③ Joystick/ENTER Button
- ④ MODE Button
- ⑤ MENU Button
- ⑥ □ Button
- ⑦ VOICE Button
- ⑧ Numerick Keypad
- ⑨ M. PT./OK Button
- ⑩ DEL. DEST. Button
- ⑪ Zoom (Wide) Button
- ⑫ AUDIO/NAV. Button
- ⑬ Zoom (Detail) Button
- ⑭ RETURN/ Ⓢ Button
- ⑮ LO.PT. Button
- ⑯ POS. Button
- ⑰ ROUTE Button
- ⑱ -
- ⑲ TEL. Button
- ⑳ DEST./BS Button
- ㉑ Power ON/OFF Button

Arrow type Navigation Control Mode

- ① Remote Control Transmitter
- ② Status indicator
- ③ Joystick/ENTER Button
- ④ MODE Button
- ⑤ MENU Button
- ⑥ -
- ⑦ VOICE Button
- ⑧ Numerick Keypad
- ⑨ M. PT./OK Button

In Case of Difficulty

Problem	Cause	Solution
Remote Control Inoperative.	Reverse placement of battery.	Place the battery correctly into its cradle in the compartment.
	Dead battery.	Replace the battery with a new one.
	Remote Control not pointed toward the head unit.	Point the remote control directly toward your head unit.

Specifications

Battery Type	AAA size batteries
Battery Quantity	2
Dimensions (W × H × D)	51 × 36 × 118 mm (2 × 1-13/32" × 4-21/32")
Weight (without battery)	60 gr (2.1 oz)