


RUE-4136

Remote controller for DVD navigation System

Owner's Manual

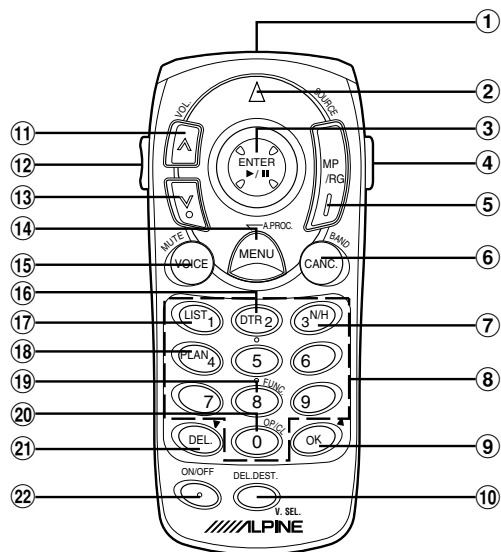

Map type Navigation Control Mode

- ① Remote Control Transmitter
- ② Status indicator
- ③ Joystick/ENTER Button
- ④ MODE Button
- ⑤ MP/RG Button
- ⑥ CANC. Button
- ⑦ N/H Button
- ⑧ Numerick Keypad
- ⑨ OK Button
- ⑩ DEL. DEST. Button
- ⑪ Zoom (Wide) Button
- ⑫ AUDIO/NAV. Button
- ⑬ Zoom (Detail) Button
- ⑭ MENU Button
- ⑮ VOICE Button
- ⑯ DTR Button
- ⑰ LIST Button
- ⑱ PLAN Button
- ⑲ -
- ⑳ -
- ㉑ DEL. Button
- ㉒ Power ON/OFF Button

Head Unit Control Mode

- ① Remote Control Transmitter
- ② Status indicator
- ③ Radio mode: Preset Selection (↑ / ↓)
SEEK UP/DOWN (← / →)
- CD/MD Player/Changer mode: PLAY/PAUSE (Push),
Disc Selection (↑ / ↓),
Music Sensor (← / →),
BW/FF (← / → Hold)
- Tape mode: PLAY/PAUSE (Push),
Programme Sensor (↑ / ↓), REW/FF (← / →)
- ④ MODE Button
- ⑤ SOURCE Button
- ⑥ BAND Button
- ⑦ -
- ⑧ -
- ⑨ ▲ (Display Angle Up) Button
- ⑩ -
- ⑪ Volume Up Button
- ⑫ AUDIO/NAV. Button
- ⑬ Volume Down Button
- ⑭ A.PROC. Button
- ⑮ MUTE Button
- ⑯ -
- ⑰ -
- ⑱ -
- ⑲ -
- ⑳ -
- ㉑ ▼ (Display Angle Down) Button
- ㉒ Power ON/OFF Button

AV Head Unit Control Mode

- ① Remote Control Transmitter
- ② Status indicator
- ③ Radio mode: Preset Selection (↑ / ↓)
SEEK UP/DOWN (← / →)
- CD/MD Player/Changer mode: PLAY/PAUSE or Audio Mode (Push),
Disc Selection (↑ / ↓),
Music Sensor (← / →),
BW/FF (← / → Hold)
- Tape mode: PLAY/PAUSE (Push),
Programme Sensor (↑ / ↓), REW/FF (← / →)
- ④ MODE Button
- ⑤ SOURCE Button
- ⑥ BAND Button
- ⑦ -
- ⑧ Numerick Keypad
- ⑨ ▲ (Display Angle Up) Button
- ⑩ V.SEL. Button
- ⑪ Volume Up Button
- ⑫ AUDIO/NAV. Button
- ⑬ Volume Down Button
- ⑭ A.PROC. Button
- ⑮ MUTE Button
- ⑯ -
- ⑰ -
- ⑱ FUNC Button
- ⑳ OP./CL. (Display Open/Close) Button
- ㉑ ▼ (Display Angle Down) Button
- ㉒ Power ON/OFF Button


Notes:

- Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.
- After pressing the MODE button, press the following buttons while the status indicator is blinking:
MAP type navigation: Numerick Keypad (0 to 9), DEL. button, OK button
Head Unit: ▲ (Display Angle Up) Button,
▼ (Display Angle Down) Button
AV Head Unit: OP./CL. Button, ▲ (Display Angle Up) Button,
▼ (Display Angle Down) Button

Installation of Remote Control Holder

- If direct sunlight reaches the remote control mounted on the holder, remove the remote control from the holder and put it in the glove compartment.
- If double-sided adhesive tape cannot install the holder securely, use screws.

Note: Attach the blue protective paper side of double-sided tape onto the console box, etc.

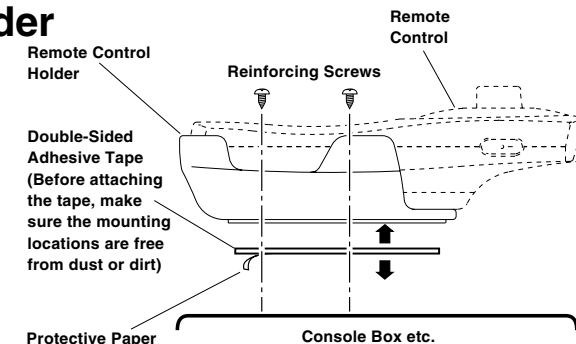

Handling Precautions

Do not drop or apply shock to the unit. It may get permanently damaged.

Keep the unit away from water and moisture, direct sun and heat, and excessive dust.


Never use scouring pads, steel wool, abrasive powders or harsh chemical agents, such as lye solution, for cleaning.

Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water.

Do not operate this unit in a manner that could distract you from driving safety.

Battery Replacement

Applicable battery: Use two "AAA" sized dry batteries or equivalent.

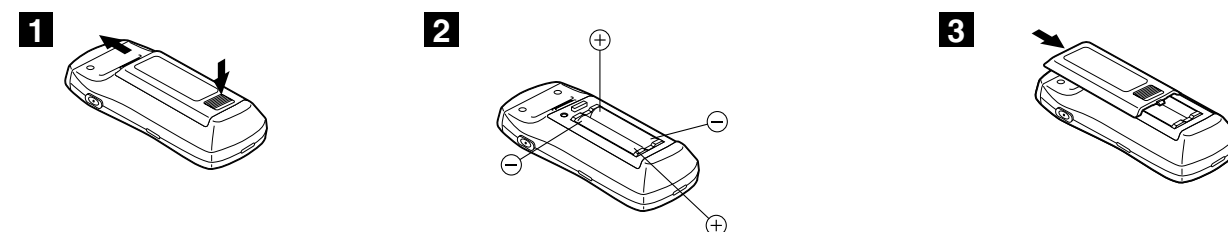

Opening the battery cover.
Push on the cover and slide it as indicated by the arrows then the cover will be removed.

Replacing the batteries.
Remove the old batteries. Insert new ones matching the (+) and (-) polarities as shown in the diagram inside the remote control.

Closing the cover.
Push the cover in the arrow direction until a click is heard.

In Case of Difficulty

Problem	Cause	Solution
Remote Control Inoperative.	Reverse placement of battery.	Place the battery correctly into its cradle in the compartment.
	Dead battery.	Replace the battery with a new one.
	Remote Control not pointed toward the head unit.	Point the remote control directly toward your head unit.

Specifications

- Battery Type AAA size batteries
- Battery Quantity 2
- Dimensions (W × H × D) 51 × 36 × 118 mm
(2 × 1-13/32" × 4-21/32")
- Weight (without battery) 60 gr (2.1 oz)

ALPINE ELECTRONICS, INC.
Tokyo office: 1-1-8 Nishi Gotanda,
Shinagawa-ku, Tokyo 141-8501, Japan
Tel.: (03) 3494-1101

ALPINE ELECTRONICS OF AMERICA, INC.
19145 Gramercy Place, Torrance,
California 90501, U.S.A.
Tel.: 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.
Suite 203, 7300 Warden Ave. Markham,
Ontario L3R 9Z6, Canada
Tel.: 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
6-8 Fiveways Boulevard Keysborough,
Victoria 3173, Australia
Tel.: (03) 9769-0000

ALPINE ELECTRONICS GmbH
Kreuzerkamp 7-11 40878 Ratingen,
Germany
Tel.: 02102-45 50

ALPINE ITALIA S.p.A.
Via C. Colombo 8, 20090 Trezzano Sul
Naviglio MI, Italy
Tel.: 02-48 47 81

ALPINE ELECTRONICS FRANCE S.A.R.L.
(RCS PONTOISE B 338 101 280)
98, Rue De La Belle Etoile, Z.I. Paris Nord II
B.P. 50016 F-95945, Roissy,
Charles De Gaulle Cedex, France
Tel.: 01-48 63 89 89

ALPINE ELECTRONICS OF U.K., LTD.
13 Tanners Drive, Blakelands,
Milton Keynes MK14 5BU, U.K.
Tel.: 01908-61 15 56

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal De Gamarra 36, Pabellón 32
01013 Vitoria (Alava)-Apdo. 133, Spain
Tel.: 34-45-283588