





RUE-4165

Remote Control Unit

Owner's Manual

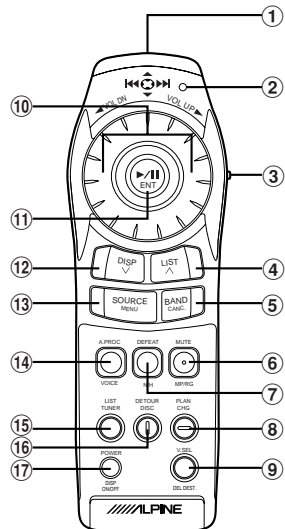

(When the flip cover is open)

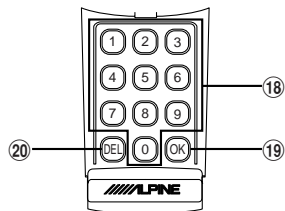

Audio Mode

- ① Remote Control Signal Transmitter
- ② Signal Transmitter Indicator
- ③ NAVI/AUDIO Switch
- ④ LIST Button
- ⑤ BAND Button
- ⑥ MUTE Button
- ⑦ DEFEAT Button
- ⑧ CHG (Changer) Button
- ⑨ V. SEL (Video Selector) Button
- ⑩ Volume Control
- ⑪ Joystick/▶/|| Button
- Radio mode: Preset Selection (↑ / ↓)
SEEK DN/UP (← / →)
- CD/MD Player/CD Changer mode: Disc Selection (↑ / ↓)
Music Sensor (← / →)
- Tape mode: Program Sensor (↑ / ↓)
REW/FF (← / →)
- Equalizer/Surround mode: After calling Equalizer/Surround mode with the A.PROC button, tilt the Joystick (← / →) to select a desired item.
- ⑫ DISP Button
- ⑬ SOURCE Button
- ⑭ A.PROC (Audio Processor) Button
- ⑮ TUNER Button
- ⑯ DISC Button
- ⑰ POWER Button
- ⑱ Numeric Keypad
- ⑲ OK Button
- ⑳ DEL Button

Note: Depending on the head unit, some operations cannot be performed. For details, see the Owner's Manual for the head unit.

Navigation Mode


- ① Remote Control Signal Transmitter
- ② Signal Transmitter Indicator
- ③ NAVI/AUDIO Switch
- ④ ^ (Zoom/Wide) Button
- ⑤ CANC. (Cancel) Button
- ⑥ MP/RG (Map/Route Guidance) Button
- ⑦ N/H Button
- ⑧ PLAN Button
- ⑨ DEL DEST. Button
- ⑩ Rotary Encoder
- ⑪ Joystick/ENT (Enter) Button
- ⑫ √ (Zoom/Detail) Button
- ⑬ MENU Button
- ⑭ VOICE Button
- ⑮ LIST Button
- ⑯ DETOUR Button
- ⑰ DISP (Display) Button
- ⑱ Numeric Keypad
- ⑲ OK Button
- ⑳ DEL Button

Note: Depending on the navigation system, some operations are inoperative. For details, consult your Alpine dealer.

■ Installation of Remote Control Holder

- If direct sunlight reaches the remote control mounted on the holder, remove the remote control from the holder and put it in the glove compartment.
- If double-sided adhesive tape cannot install the holder securely, use screws.

Note: Attach the blue protective paper side of double-sided tape onto the console box, etc.

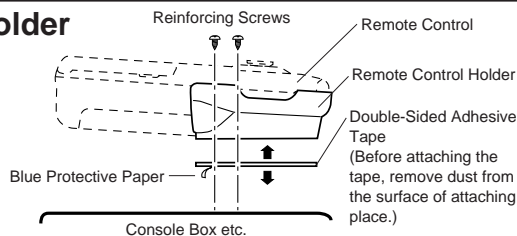

Handling Precautions

Do not drop or apply shock to the unit. It may get permanently damaged.

Keep the unit away from water and moisture, direct sun and heat, and excessive dust.

Never use scouring pads, steel wool, abrasive powders or harsh chemical agents, such as lye solution, for cleaning.


Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water.

Do not operate this unit in a manner that could distract you from driving safety.

Battery Replacement

Applicable battery: Use two "AA" sized dry batteries or equivalent.


1

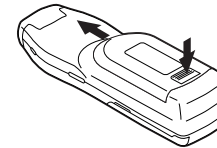

Opening the battery cover.

Push on the cover and slide it as indicated by the arrows then the cover will be removed.


2

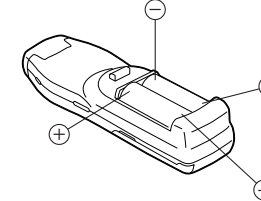

Replacing the battery.

Remove the old batteries. Insert new ones matching the (+) and (-) polarities as shown in the diagram inside the remote control.

3

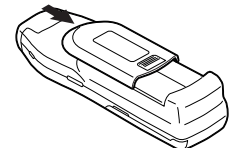

Closing the cover.

Push the cover in the arrow direction until a click is heard.

In Case of Difficulty

Problem	Cause	Solution
Remote Control Inoperative.	Reverse placement of battery.	Place the battery correctly into its cradle in the compartment.
	Dead battery.	Replace the battery with a new one.
	Remote Control not pointed toward the head unit.	Point the remote control directly toward your head unit.

Specifications

- Battery Type AA size batteries
- Battery Quantity 2
- Dimensions (W × H × D) 45 × 45 × 135 mm
(1-3/4" × 1-3/4" × 5-1/4")
- Weight (without battery) 70 gr (2.5 oz)



ALPINE ELECTRONICS, INC.
Tokyo office: 1-1-8 Nishi Gotanda,
Shinagawa-ku, Tokyo 141-8501, Japan
Tel.: (03) 3494-1101

ALPINE ELECTRONICS OF AMERICA, INC.
19145 Gramercy Place, Torrance,
California 90501, U.S.A.
Tel.: 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.
Suite 203, 7300 Warden Ave. Markham,
Ontario L3R 9Z6, Canada
Tel.: 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
6-8 Fiveways Boulevard Keysborough,
Victoria 3173, Australia
Tel.: (03) 9769-0000

ALPINE ELECTRONICS GmbH
Kreuzerkamp 7-11 40878 Ratingen, Germany
Tel.: 02102-45 50

ALPINE ITALIA S.p.A.
Via C. Colombo 8, 20090 Trezzano Sul
Naviglio MI, Italy
Tel.: 02-48 47 81

ALPINE ELECTRONICS FRANCE S.A.R.L.
(RCS PONTOISE B 338 101 280)
98, Rue De La Belle Etoile, Z.I. Paris Nord II
B.P. 50016 F-95945, Roissy,
Charles De Gaulle Cedex, France
Tel.: 01-48 63 89 89

ALPINE ELECTRONICS OF U.K., LTD.
13 Tanners Drive, Blakelands,
Milton Keynes MK14 5BU, U.K.
Tel.: 01908-61 15 56

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal De Gamarra 36, Pabellón 32
01013 Vitoria (Alava)-Apdo. 133, Spain
Tel.: 34-45-283588