

Driving Mobile Media Solutions™






KTX-WXE-CA8

INSTALLATION KIT Owner's Manual


Car Model	Model Year
CAMRY	2012

This owner's manual will give you clearly understanding about installation.
For making installation correctly, please read this manual carefully before operating installation.

1 Component Parts

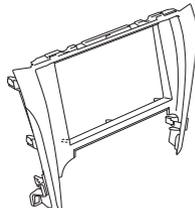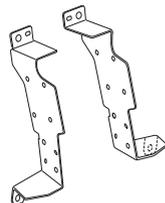Audio Panel	Alpine-Toyota power cord	Alpine-Toyota Antenna cable	Bracket
			


2 Connecting Diagram

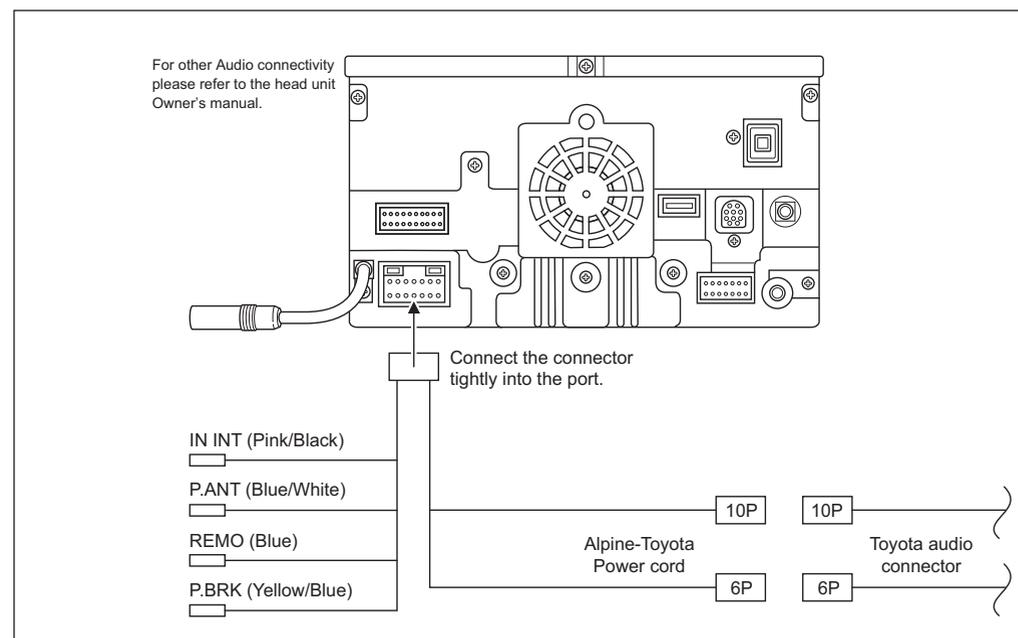

ALPINE ELECTRONICS OF ASIA PACIFIC CO., LTD.
555 Rasa Tower 1, Unit 2601-2602, 26th Floor, Phaholyothin Rd.,
Chatuchak, Bangkok, Thailand 10900
Tel : +662-937-0505 Fax : +662-937-0569

<http://www.alpine-asia.com>

3 Removing Vehicle Parts

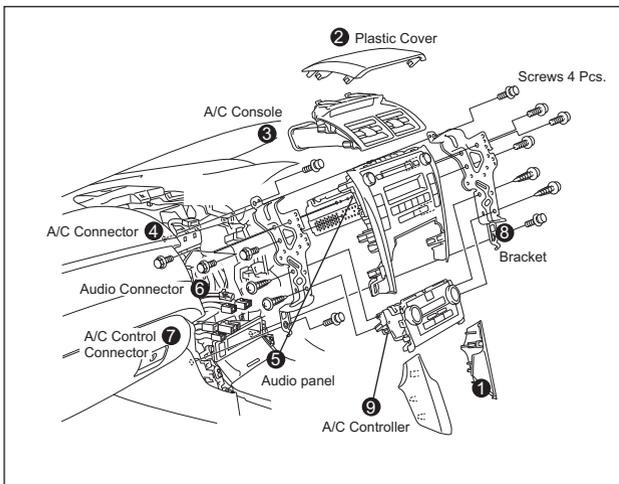


1. Remove part no. ① by removing all clips off.
2. Remove plastic cover ② by removing all clips off.
3. Remove A/C console ③ by removing all clips off.
4. Remove A/C connector ④ from A/C console.
5. Remove audio panel ⑤ by removing all 4 screws.
6. Remove all connectors ⑥ from the head unit.
7. Remove all A/C control connectors ⑦ from A/C controller ⑨.
8. Remove bracket ⑧ both left and right sides of audio panel by removing all 10 screws (5 screws each side).
9. Remove A/C controller ⑨ from audio panel by removing all clips off.

!!! Caution !!!


Make sure that all the accessories are off so that you do not cause a spark

5 Bracket Assembly

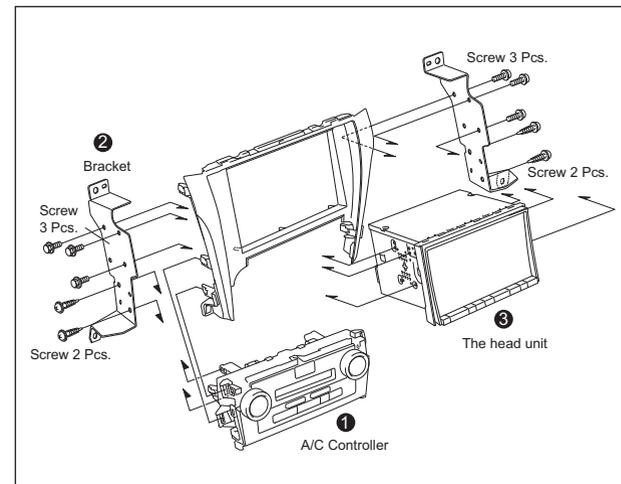

1. Connect A/C controller ① with audio panel by pressing all clips tightly.
2. Install bracket ② with audio panel both left and right sides by using 4 black screws (2 screws each side).
3. Install the head unit ③ from rear side into audio panel by using 6 screws (3 screws each side).

4 Harness Connection

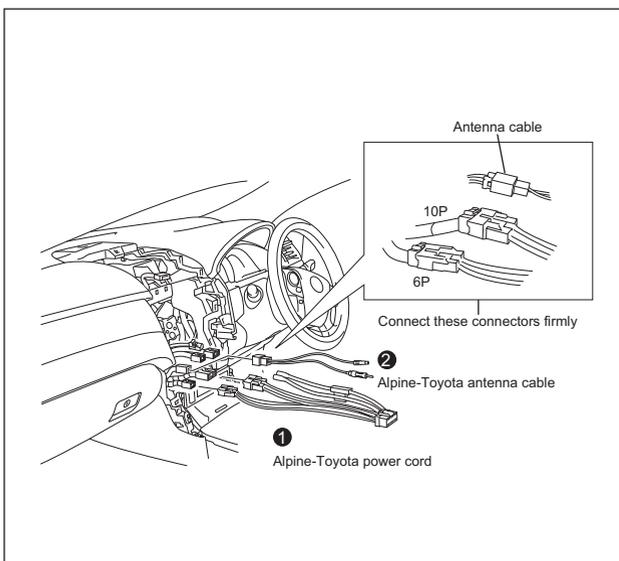


1. Connect the Alpine-Toyota power cord ① into the car connectors both 10P and 6P.
2. Connect the Alpine-Toyota antenna cable ② into the car connectors.

!!! Caution !!!

Make connection between connectors tightly (until you hear "Click")

6 Retracing Vehicle Parts

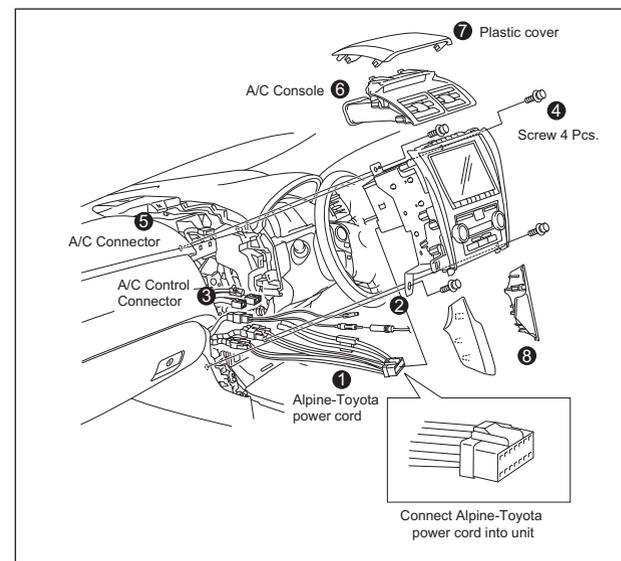

1. Connect the Alpine-Toyota connector ① and the Alpine-toyota antenna cable ② into the head unit tightly until you hear "Click".
2. Connect A/C Control connector ③ into A/C control tightly until you hear "Click".
3. Drive 4 screws ④ to make it tight between the head unit and console.
4. Connect A/C connector ⑤ with A/C console.
5. Connect A/C console ⑥ into car console by pressing all clips to dash panel until you hear "click".
6. Install plastic cover ⑦ by pressing all clips tightly into console.
7. Install part no. ⑧ by pressing all clips tightly into console.

Remark

Perform full function checks for the head unit. If no problem found assemble back all the parts to their original position.